 


# ULTRALINK ULM200M /ULM200D

High-Performance 2.4 GHz Digital Wireless System with  
Handheld Microphone(s) and Dual-Mode USB Receiver

## ULM200M /ULM200D Hook-Up

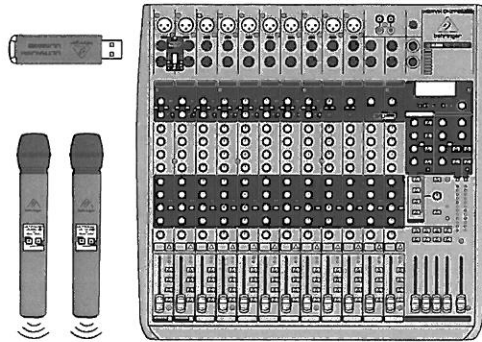

XENYX QX2442USB

 
EN

ES

FR

DE

PT

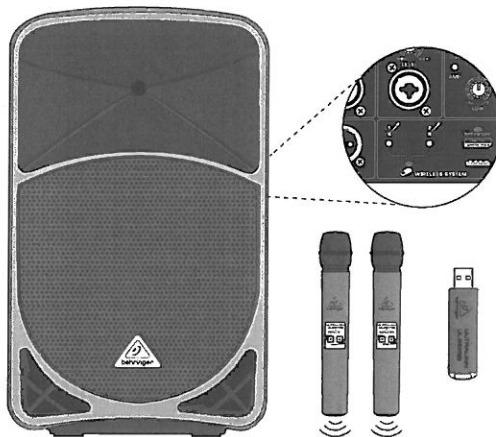


B115MP3

# ULM200M /ULM200D Controls

 EN

Model: ULM200M

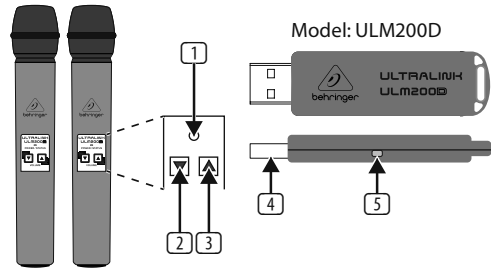

Type of product: Wireless Microphone

## ULM200M /ULM200D Controls

1. **POWER/STATUS LED**
2. **▼ VOLUME** Button (Mute/volume down)
3. **▲ VOLUME** Button (Power on/unmute/volume up)
4. USB connector
5. Wireless Link Status LED

## ULM200M /ULM200D Getting Started

1. Connect the ULM200D wireless receiver to the "WIRELESS ONLY!" USB connector on wireless-enabled BEHRINGER mixers, powered speakers or other compatible products, or to a USB port on a computer.
2. Press and hold the **▲** button on the ULM200M wireless microphone to connect wirelessly to the ULM200D receiver. The LED on the microphone will flash slowly during the connecting sequence and will light solid once connected. If the ULM200M wireless microphone cannot connect to a receiver, the microphone will automatically power down after 10 seconds.
3. Once connected, the ULM200M microphone will be set at a medium volume. Use the **▲** and **▼** buttons to adjust the volume
4. A long press of the **▼** button will put the ULM200M microphone into mute. The mute condition is indicated by rapid flashing of the LED. If the user does not unmute within 60 seconds, the ULM200M microphone will power down to save battery life.
5. A short press of the **▲** button will unmute the ULM200M microphone. If the ULM200M microphone is un-muted more than 10 seconds after muting, it will return to the previous volume level, if un-muted after less than 10 seconds it will be set to the minimum volume level.
6. Unplug the ULM200D wireless receiver to power down. The ULM200M wireless microphone will power down 10 seconds after the ULM200D wireless receiver is unplugged.
7. The LED in the ULM200M wireless microphone will indicate when the battery is low by regular brief flashes.
8. Should the ULM200M wireless microphone become unpaired with the ULM200D wireless receiver, the microphone can be re-paired from the powered down state by simultaneously pressing the **▲** and **▼** buttons and moving the microphone to within 10 cm (4 inches) of the ULM200D wireless receiver. The LED on the microphone will flash slowly during the pairing sequence and will light solid once connected. If the ULM200M wireless microphone cannot pair to the receiver it will automatically power down after 10 seconds.

# Specification

EN

 
|                                    |   |
|------------------------------------|---|
| RF output                          | <100 mW / +20 dBm                                   |
| Operating range                    | 120 m (Line of Sight)*                              |
| Dynamic range                      | 92 dB, A-weighted**                                 |
| Equivalent input noise             | -112 dBu  |
| Frequency Response (Wireless Link) | 20 Hz - 20 kHz, $\pm 1$ dB                          |
| Sampling rate                      | 48 kHz  |
| Resolution                         | 24-bit  |
| Encoding                           | 232 kbps SLAC (Slightly Lossy Audio Codec)          |
| Latency                            | 14.5 ms   |
| RF frequency                       | 2.4 GHz ISM band (2406 MHz - 2474 MHz), 18 channels |
| Power Supply current               | 70 mA @ +5 VDC                                      |
| Battery type                       | 2 x AA (LR6)<br>Alkaline cells                      |
| Battery life                       | >30 hours   |
| Dimensions (W x D x H)             | 45.7 x 45.7 x 243.8 mm<br>(1.8 x 1.8 x 9.6")        |
| Weight                             | 0.4 kg (0.9 lbs)                                    |

\*Achievable range will be dependent on nearby sources of RF interference and/or line of sight obstacles.

\*\*Measured from analog input to analog output, unity gain operation without wireless compression.

# ULM200M /ULM200D Controles

Model: ULM200M

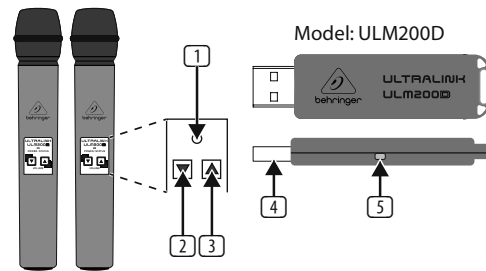

ES

Tipo de producto: Micrófono inalámbrico

## ULM200M /ULM200D Controles


1. Piloto de encendido/estado **POWER/STATUS**
2. Botón ▼ **VOLUME** (anulación/reducción de volumen)
3. Botón ▲ **VOLUME** (Encendido/aumento de volumen)
4. Conector USB
5. Piloto de estado de enlace inalámbrico

## ULM200M /ULM200D Puesta en marcha

1. Connect the ULM200D wireless receiver to the "WIRELESS ONLY!" USB connector on wireless-enabled BEHRINGER mixers, powered speakers or other compatible products, or to a USB port on a computer.
2. Press and hold the ▲ button on the ULM200M wireless microphone to connect wirelessly to the ULM200D receiver. The LED on the microphone will flash slowly during the connecting sequence and will light solid once connected. If the ULM200M wireless microphone cannot connect to a receiver, the microphone will automatically power down after 10 seconds.
3. Once connected, the ULM200M microphone will be set at a medium volume. Use the ▲ and ▼ buttons to adjust the volume
4. A long press of the ▼ button will put the ULM200M microphone into mute. The mute condition is indicated by rapid flashing of the LED. If the user does not unmute within 60 seconds, the ULM200M microphone will power down to save battery life.
5. A short press of the ▲ button will unmute the ULM200M microphone. If the ULM200M microphone is unmuted more than 10 seconds after muting, it will return to the previous volume level, if unmuted after less than 10 seconds it will be set to the minimum volume level.
6. Unplug the ULM200D wireless receiver to power down. The ULM200M wireless microphone will power down 10 seconds after the ULM200D wireless receiver is unplugged.
7. The LED in the ULM200M wireless microphone will indicate when the battery is low by regular brief flashes.
8. Should the ULM200M wireless microphone become unpaired with the ULM200D wireless receiver, the microphone can be re-paired from the powered down state by simultaneously pressing the ▲ and ▼ buttons and moving the microphone to within 10 cm (4 inches) of the ULM200D wireless receiver. The LED on the microphone will flash slowly during the pairing sequence and will light solid once connected. If the ULM200M wireless microphone cannot pair to the receiver it will automatically power down after 10 seconds.

# ULM200M /ULM200D Réglages

Model: ULM200M

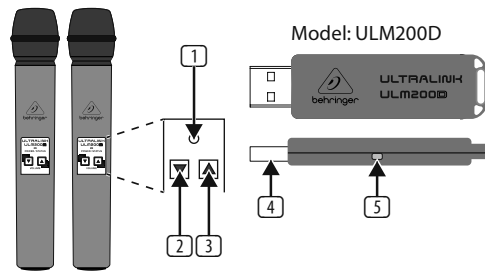

Type de produit : micro sans fil

FR

## ULM200M /ULM200D Réglages

 
1. Témoin Led d'ÉTAT/ALIMENTATION
2. Bouton ▼ **VOLUME** (couper/diminuer le volume)
3. Bouton ▲ **VOLUME** (mise sous tension/augmenter le volume)
4. Connecteur USB
5. Témoin Led d'état de la liaison sans fil

## ULM200M /ULM200D Mise en œuvre

1. Connect the ULM200D wireless receiver to the "WIRELESS ONLY!" USB connector on wireless-enabled BEHRINGER mixers, powered speakers or other compatible products, or to a USB port on a computer.
2. Press and hold the ▲ button on the ULM200M wireless microphone to connect wirelessly to the ULM200D receiver. The LED on the microphone will flash slowly during the connecting sequence and will light solid once connected. If the ULM200M wireless microphone cannot connect to a receiver, the microphone will automatically power down after 10 seconds.
3. Once connected, the ULM200M microphone will be set at a medium volume. Use the ▲ and ▼ buttons to adjust the volume
4. A long press of the ▼ button will put the ULM200M microphone into mute. The mute condition is indicated by rapid flashing of the LED. If the user does not unmute within 60 seconds, the ULM200M microphone will power down to save battery life.
5. A short press of the ▲ button will unmute the ULM200M microphone. If the ULM200M microphone is unmuted more than 10 seconds after muting, it will return to the previous volume level, if unmuted after less than 10 seconds it will be set to the minimum volume level.
6. Unplug the ULM200D wireless receiver to power down. The ULM200M wireless microphone will power down 10 seconds after the ULM200D wireless receiver is unplugged.
7. The LED in the ULM200M wireless microphone will indicate when the battery is low by regular brief flashes.
8. Should the ULM200M wireless microphone become unpaired with the ULM200D wireless receiver, the microphone can be re-paired from the powered down state by simultaneously pressing the ▲ and ▼ buttons and moving the microphone to within 10 cm (4 inches) of the ULM200D wireless receiver. The LED on the microphone will flash slowly during the pairing sequence and will light solid once connected. If the ULM200M wireless microphone cannot pair to the receiver it will automatically power down after 10 seconds.

# ULM200M /ULM200D Regler

Model: ULM200M

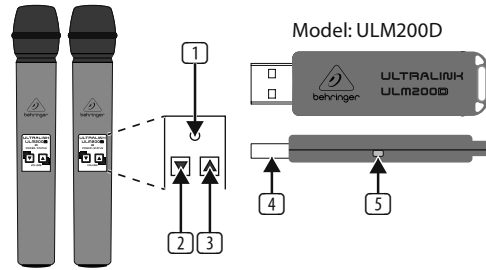

Produkttyp: Drahtlosmikrofon

## ULM200M /ULM200D Regler

1. **BETRIEB/STATUS-LED**
2. **▼ VOLUME**-Taste (stummschalten/leiser)
3. **▲ VOLUME**-Taste (einschalten/lauter)
4. USB-Anschluss
5. Wireless Link Status-LED

 
DE

## ULM200M /ULM200D Erste Schritte

1. Connect the ULM200D wireless receiver to the "WIRELESS ONLY!" USB connector on wireless-enabled BEHRINGER mixers, powered speakers or other compatible products, or to a USB port on a computer.
2. Press and hold the ▲ button on the ULM200M wireless microphone to connect wirelessly to the ULM200D receiver. The LED on the microphone will flash slowly during the connecting sequence and will light solid once connected. If the ULM200M wireless microphone cannot connect to a receiver, the microphone will automatically power down after 10 seconds.
3. Once connected, the ULM200M microphone will be set at a medium volume. Use the ▲ and ▼ buttons to adjust the volume
4. A long press of the ▼ button will put the ULM200M microphone into mute. The mute condition is indicated by rapid flashing of the LED. If the user does not unmute within 60 seconds, the ULM200M microphone will power down to save battery life.
5. A short press of the ▲ button will unmute the ULM200M microphone. If the ULM200M microphone is unmuted more than 10 seconds after muting, it will return to the previous volume level, if unmuted after less than 10 seconds it will be set to the minimum volume level.
6. Unplug the ULM200D wireless receiver to power down. The ULM200M wireless microphone will power down 10 seconds after the ULM200D wireless receiver is unplugged.
7. The LED in the ULM200M wireless microphone will indicate when the battery is low by regular brief flashes.
8. Should the ULM200M wireless microphone become unpaired with the ULM200D wireless receiver, the microphone can be re-paired from the powered down state by simultaneously pressing the ▲ and ▼ buttons and moving the microphone to within 10 cm (4 inches) of the ULM200D wireless receiver. The LED on the microphone will flash slowly during the pairing sequence and will light solid once connected. If the ULM200M wireless microphone cannot pair to the receiver it will automatically power down after 10 seconds.

# ULM200USB/ULM202USB Controles

Model: ULM200M

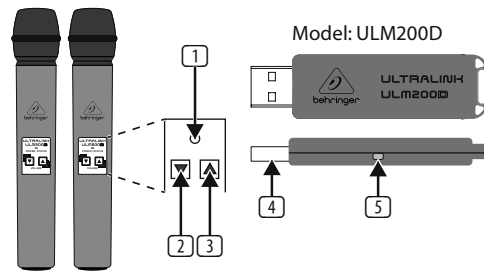

Tipo do produto: Microfone sem fio

## ULM200M /ULM200D Controles

1. LED **POWER/STATUS**
2. Botão de ▼ **VOLUME** (Mute/abaixa o volume)
3. Botão de ▲ **VOLUME** (Power on/aumenta o volume)
4. Conector USB
5. LED Status de Link Wireless (sem fio)

PT

## Primeiros Passos ULM200M /ULM200D

1. Connect the ULM200D wireless receiver to the "WIRELESS ONLY!" USB connector on wireless-enabled BEHRINGER mixers, powered speakers or other compatible products, or to a USB port on a computer.
2. Press and hold the ▲ button on the ULM200M wireless microphone to connect wirelessly to the ULM200D receiver. The LED on the microphone will flash slowly during the connecting sequence and will light solid once connected. If the ULM200M wireless microphone cannot connect to a receiver, the microphone will automatically power down after 10 seconds.
3. Once connected, the ULM200M microphone will be set at a medium volume. Use the ▲ and ▼ buttons to adjust the volume
4. A long press of the ▼ button will put the ULM200M microphone into mute. The mute condition is indicated by rapid flashing of the LED. If the user does not unmute within 60 seconds, the ULM200M microphone will power down to save battery life.
5. A short press of the ▲ button will unmute the ULM200M microphone. If the ULM200M microphone is unmuted more than 10 seconds after muting, it will return to the previous volume level, if unmuted after less than 10 seconds it will be set to the minimum volume level.
6. Unplug the ULM200D wireless receiver to power down. The ULM200M wireless microphone will power down 10 seconds after the ULM200D wireless receiver is unplugged.
7. The LED in the ULM200M wireless microphone will indicate when the battery is low by regular brief flashes.
8. Should the ULM200M wireless microphone become unpaired with the ULM200D wireless receiver, the microphone can be re-paired from the powered down state by simultaneously pressing the ▲ and ▼ buttons and moving the microphone to within 10 cm (4 inches) of the ULM200D wireless receiver. The LED on the microphone will flash slowly during the pairing sequence and will light solid once connected. If the ULM200M wireless microphone cannot pair to the receiver it will automatically power down after 10 seconds.

**EN****ES****FR****LEGAL DISCLAIMER**

MUSIC Group accepts no liability for any loss which may be suffered by any person who relies either wholly or in part upon any description, photograph, or statement contained herein. Technical specifications, appearances and other information are subject to change without notice. All trademarks are the property of their respective owners. MIDAS, KLARK TEKNIK, TURBOSOUND, BEHRINGER, BUGERA and DDA are trademarks or registered trademarks of MUSIC Group IP Ltd. © MUSIC Group IP Ltd. 2014 All rights reserved.

---

**LIMITED WARRANTY**

For the applicable warranty terms and conditions and additional information regarding MUSIC Group's Limited Warranty, please see complete details online at [music-group.com/warranty](http://music-group.com/warranty).

---

**NEGACIÓN LEGAL**

MUSIC Group no admite ningún tipo de responsabilidad por cualquier daño o pérdida que pudiera sufrir cualquier persona por confiar total o parcialmente en la descripciones, fotografías o afirmaciones contenidas en este documento. Las especificaciones técnicas, imágenes y otras informaciones contenidas en este documento están sujetas a modificaciones sin previo aviso. Todas las marcas comerciales que aparecen aquí son propiedad de sus respectivos dueños. MIDAS, KLARK TEKNIK, TURBOSOUND, BEHRINGER, BUGERA y DDA son marcas comerciales o marcas registradas de MUSIC Group IP Ltd. © MUSIC Group IP Ltd. 2014 Reservados todos los derechos.

---

**GARANTÍA LIMITADA**

Si quiere conocer los detalles y condiciones aplicables de la garantía así como información adicional sobre la Garantía limitada de MUSIC group, consulte online toda la información en la web [music-group.com/warranty](http://music-group.com/warranty).

---

**DÉNI LÉGAL**

MUSIC Group ne peut être tenu pour responsable pour toute perte pouvant être subie par toute personne se fiant en partie ou en totalité à toute description, photographie ou affirmation contenue dans ce document. Les caractéristiques, l'apparence et d'autres informations peuvent faire l'objet de modifications sans notification. Toutes les marques appartiennent à leurs propriétaires respectifs. MIDAS, KLARK TEKNIK, TURBOSOUND, BEHRINGER, BUGERA et DDA sont des marques ou marques déposées de MUSIC Group IP Ltd. © MUSIC Group IP Ltd. 2014 Tous droits réservés.

---

**GARANTIE LIMITÉE**

Pour connaître les termes et conditions de garantie applicables, ainsi que les informations supplémentaires et détaillées sur la Garantie Limitée de MUSIC Group, consultez le site Internet [music-group.com/warranty](http://music-group.com/warranty).



## **HAFTUNGSAUSSCHLUSS**

MUSIC Group übernimmt keine Haftung für Verluste, die Personen entstanden sind, die sich ganz oder teilweise auf hier enthaltene Beschreibungen, Fotos oder Aussagen verlassen haben. Technische Daten, Erscheinungsbild und andere Informationen können ohne vorherige Ankündigung geändert werden. Alle Warenzeichen sind Eigentum der jeweiligen Inhaber. MIDAS, KLARK TEKNIK, TURBOSOUND, BEHRINGER, BUGERA und DDA sind Warenzeichen oder eingetragene Warenzeichen der MUSIC Group IP Ltd. © MUSIC Group IP Ltd. 2014 Alle Rechte vorbehalten.

---

## **BESCHRÄNKTE GARANTIE**

Die geltenden Garantiebedingungen und zusätzliche Informationen bezüglich der von MUSIC Group gewährten beschränkten Garantie finden Sie online unter [music-group.com/warranty](http://music-group.com/warranty).

**DE**

---

## **LEGAL RENUNCIANTE**

O MUSIC Group não se responsabiliza por perda alguma que possa ser sofrida por qualquer pessoa que dependa, seja de maneira completa ou parcial, de qualquer descrição, fotografia, ou declaração aqui contidas. Dados técnicos, aparências e outras informações estão sujeitas a modificações sem aviso prévio. Todas as marcas são propriedade de seus respectivos donos. MIDAS, KLARK TEKNIK, TURBOSOUND, BEHRINGER, BUGERA e DDA são marcas ou marcas registradas do MUSIC Group IP Ltd. © MUSIC Group IP Ltd. 2014 Todos direitos reservados.

**PT**

---

## **GARANTIA LIMITADA**

Para obter os termos de garantia aplicáveis e condições e informações adicionais a respeito da garantia limitada do MUSIC group, favor verificar detalhes na íntegra através do website [music-group.com/warranty](http://music-group.com/warranty).

**FEDERAL COMMUNICATIONS  
COMMISSION COMPLIANCE  
INFORMATION**

**EN**



Responsible Party Name: **MUSIC Group Services  
NV Inc.**

Address: **5270 Procyon Street  
Las Vegas, NV 89118  
USA**

Phone Number: **+1 702 800 8290**

**ULTRALINK ULM200M /ULM200D**

complies with the FCC rules as mentioned in the following paragraph:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

**Important information:**

Changes or modifications to the equipment not expressly approved by MUSIC Group can void the user's authority to use the equipment.

---

Operation in the 2.4 GHz ISM (Industrial, Scientific, Medical) frequency band may be subject to interference from other transmitting equipment operating in this band. In the event of such interference, please verify and reassign the transmitting channels of any potentially interfering transmitting equipment.







We Hear You