

NEC

 
Thank you for your purchasing of this product. Before using the this product, read this manual.
For more information about this product, please refer to the User's Manual which is shown on your PC.
<http://www.XXXXXXXXXXXXXXXXXX>

Quick Start Guide
11.12

MEQ1AS MP

Supplied Accessories


This Product

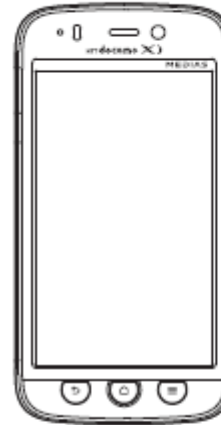


Back cover



 Battery Cradle

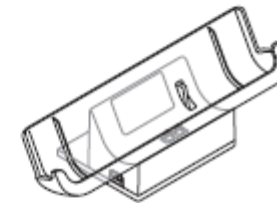

Quick Start Guide
(this manual)

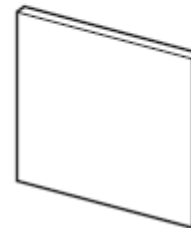 

Earphone Conversion Cable
with Antenna (Sample)



Battery Pack



Strap (Sample)



 
microSDHC card* (Sample)



*This has been attached when purchased.

Getting Started


Parts Names and Functions

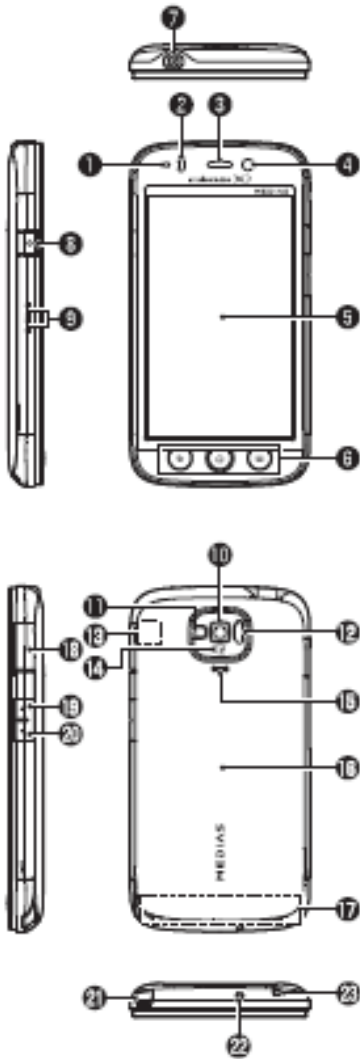

1. Notification LED
2. Proximity/Illuminance sensor
3. Earpiece (receiver)
4. Front camera
5. Display (Touch panel)
6. Front key (→P38)
7. Hands-free headset Connector
8. Power switch (→P37)
9. microUSB connector
10. Rear camera
11. Light
12. Infrared communication port
13. GPS/Wi-Fi/Bluetooth Antenna
14. Symbian
15. Speaker
16. Back cover
17. Xi Antenna
18. External connector
19. + volume key
20. - volume key
21. DTV/MM antenna
22. Mouthpiece/microphone
23. Strap slot

Removing/Attaching the Back Cover

 To remove the back cover, hook your finger on the slot and remove in direction without too much force.

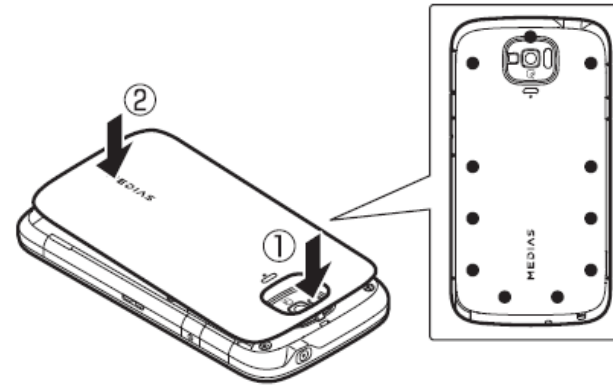

Securely push the areas illustrated by the dots and make sure that there is no space between the back cover and this product

 


To attach the back cover, insert the tabs on top of the back cover into the slots, slide it in direction and push it down securely in direction.


Inserting the SIM Card

SIM (Docomo mini UIM card) is an IC card that stores your phone number and other information. Some functions are not available if the SIM card is not inserted.

1. Hold the tab to slide the tray.

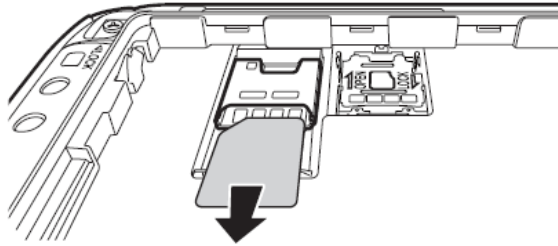

 
2. Place the SIM card on the tray, setting the IC surface down.

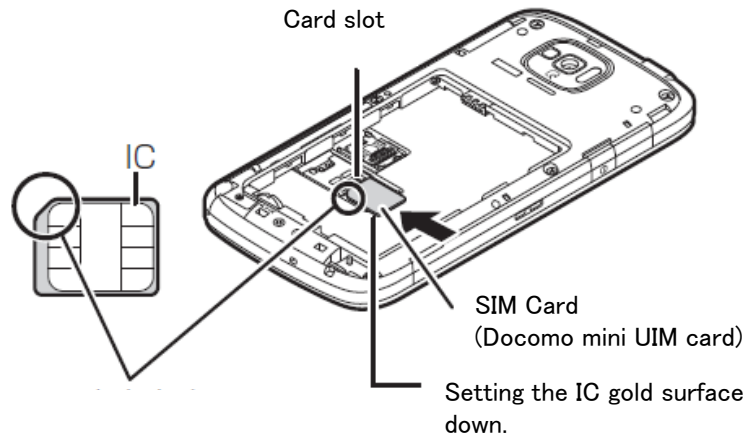

3. Slide the tray to the end.


Inserting the microSD Card

 Insert the microSD card into the microSD slot until it is locked.

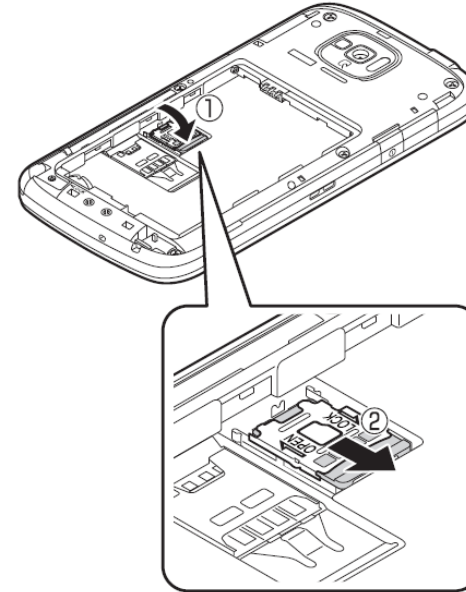


Attaching the Battery

 Insert in the direction by hooking the tabs on the battery pack in the slots.

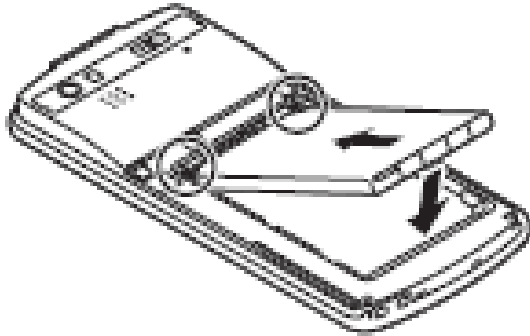

Charging with the AC Charger

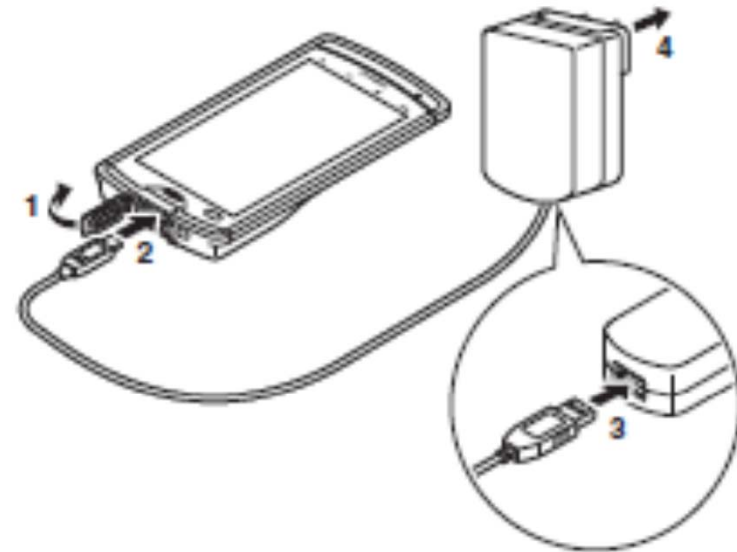 

- 1 Open the microUSB connector cap.
- 2 Connect the microUSB plug of the supplied microUSB cable with engraved side facing down with the microUSB connector.
- 3 Connect the USB plug of the cable with the supplied AC charger.
- 4 Insert the AC charger plug into the power outlet.

Charging with the PC Connection



- 1 Open the microUSB connector cap.
- 2 Connect the microUSB plug of the supplied microUSB cable with engraved side facing down with the microUSB connector.
- 3 Connect the USB plug of the cable with your PC.

■ About the notification LED

 
Notification LED turns red while charging.

Notification LED turns green when the battery level is over 90%, and off when charging is complete.

When charging starts, such as when the battery is depleted, the notification LED may not immediately light. However, charging has started.

Using the battery cradle

You can also charge the battery pack using the battery cradle.

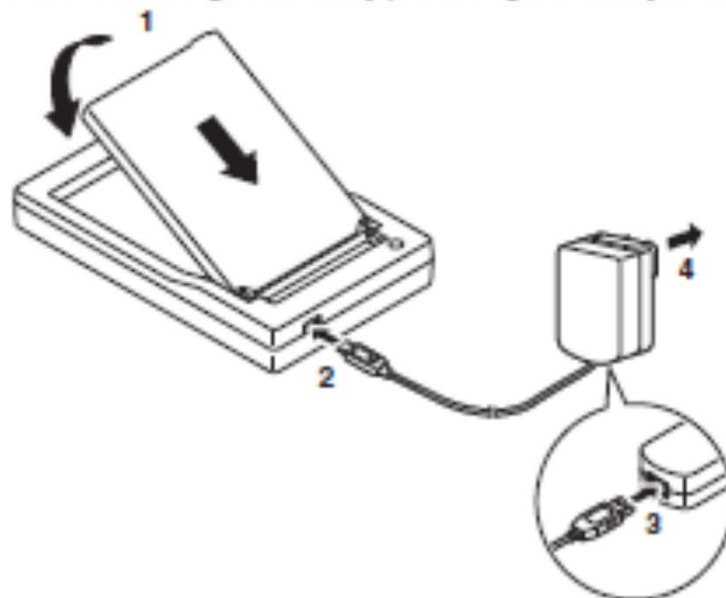

- 1 After removing the battery pack, set it into the battery cradle.
- 2 Connect the microUSB jack of the microUSB cable with the battery cradle.
- 3 Connect the USB jack of the microUSB cable with the AC charger.
- 4 Connect the AC charger plug with the power outlet. Charging starts and the Charge LED lights on red. When finishing the charging, the Charge LED lights on green.

Turning Power On and Off

Turning Power On

Press and hold the power switch for two seconds or longer.



Turning Power Off

- 1 Press and hold the power switch for one second or longer.
- 2 Touch "Power off".
- 3 Touch "OK".

■ Sleep mode

When the power switch is pressed, the display turns off and this product enters sleep mode.
Pressing the power switch quits sleep mode.

■ Screen lock

When you turn the power on or quit sleep mode, the touch panel is locked. Drag  to  to unlock the screen.





Initial Settings

When the power is first turned on, the initial setting screen appears.

- 1 Tap "Change language" if you need.
- 2 Tap a language to set.
- 3 Tap the Android icon.
- 4 Tap "Skip" for undo the WI-FI setting.
For setting WI-FI, tap "Connect to WI-FI", and select the WI-FI network. Then tap "Connect" to complete the WI-FI setting.
- 5 Check the displayed content, and tap "Next".
- 6 Set each setting.
- 7 Tap "Next".
- 8 Tap "Home" or "Launcher" to complete initial settings.

Basic Operation

Using the Keys

-  displays the menu available for the current screen.
-  displays the Home screen.
-  goes back to the previous screen.
-  opens "Google Search" when pressing on the Home screen.

Using the Touch Panel

■ Tap

With touching and releasing your finger, the item is selected or run.

 


■ Touch and hold

In some screens, continuing to touch the touch panel displays a menu.

■ Slide

With sliding your finger, the screen scrolls up/down/left/right in direction.

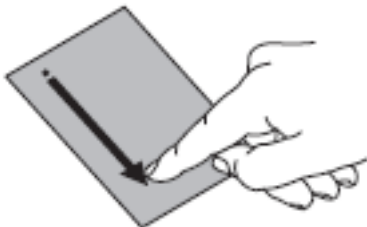


■ Drag

Quickly slide your finger while touching an item (icon, etc.) to move.


■ Flick

 With quickly sliding and releasing your finger, the screen quickly scrolls in direction.

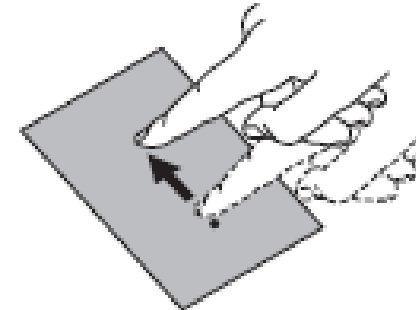

■ Pinch with two fingers

 For zoom in or zoom out, touch the touch panel with two fingers, and then slide them apart or together.

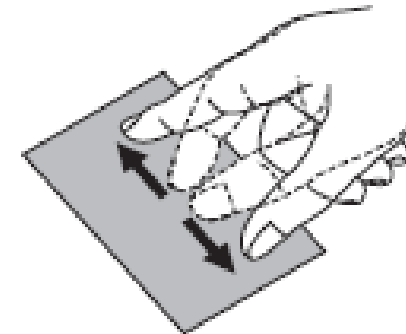

Text Entry

Tap a text box on the screen to display the on screen keyboard.

■ QWERTY keyboard

This keyboard uses a PC keyboard layout.



■ 10-key keyboard

This is an ordinary keyboard of mobile phones.




Home Screen



- 1 Widgets
- 2 Application shortcuts
- 3 Dock
- 4 Launch "Phone", "Call log", and "Contacts".
- 5 Open the applications list screen
- 6 Launch browser




Applications List Screen

Tap  on the Home screen to display the applications list screen.




Calling

Making a Call

- 1 Tap  on the Home screen.
- 2 Enter the phone number.
- 3 Tap  to start the call.
- 4 To finish the call, tap .

■ Entering a push tone (pause)

Before step 3, tap  and then "Add 2-sec pause"/"Add wait".

■ Adjusting the call volume

Press the +/- (volume) keys.

■ Putting the other party on the speaker

Tap "Speaker".

■ Muting your voice to the other party

Tap "Mute".




■ Using the Bluetooth function

Tap "Bluetooth" when connected to a Bluetooth device compatible with your headset, etc.

■ Emergency call

Emergency call	Phone number
Police emergency	110
Fire brigade/Ambulance emergency	119
Maritime distress call	118

 
Receiving a Call

- 1 When a call is received, drag  to  (to the right).
- 2 To finish the call, tap .

■ Declining a call

Drag  to  (to the left).

Using the headset cable (hands-free phone)

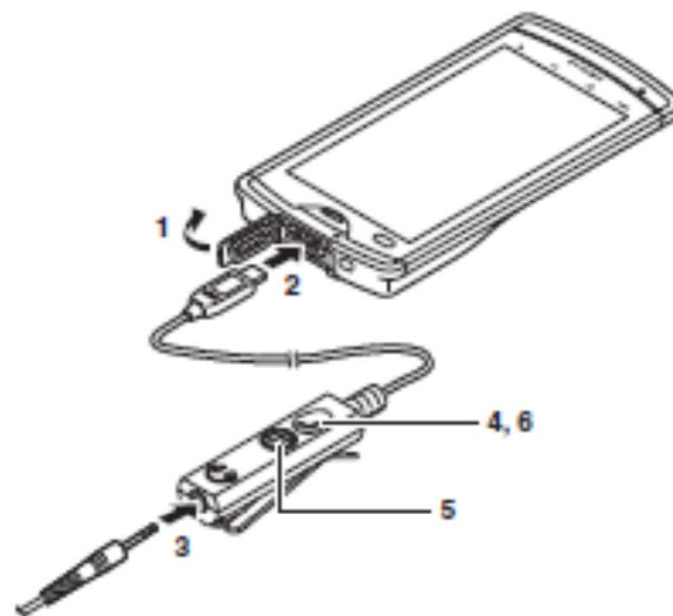


- 1 Open the microUSB connector cap.
- 2 Connect the microUSB plug of the supplied headset cable with engraved side facing down with the microUSB connector.
- 3 Connect your headphones' plug with the headset cable.
- 4 To answer an incoming call, press the button of the headset cable.
- 5 Talk using the microphone of the headset cable.
- 6 To finish the call, press the button of the headset cable.

E-Mail/Browser

E-Mail

By setting an email account, you can send and receive emails in the same way as your PC.


■ Displaying email

- 1 Tap "Email" on the application list screen.
The inbox screen appears. Any received email is displayed in the "Inbox".
For refreshing the "Inbox", tap  and then "Refresh".
- 2 Tap the email you want to read.

■ Replying to email

- 1 Tap "Reply"/"Reply all" and then enter a message.
- 2 Tap "Send".




■ Forwarding email

- 1 Tap  and then "Forward".
- 2 Enter the forwarding email address in "To".
- 3 Tap "Send".

■ Deleting email

Tap "Delete".

■ Creating and sending email

- 1 From the Inbox screen, tap  and then "Compose".
- 2 Enter the partner email address in "To".
For adding a Cc or Bcc, tap  and then "Add Cc/Bcc".
- 3 Enter a title in "Subject".
- 4 Enter a message in "Compose Mail".
For adding an attachment, tap  and then "Add attachment".
- 5 Tap "Send".

SMS

You can send and receive text messages with a cell phone number as the address.



Tap "Messaging" on the application list screen.
The message screen appears.

■ Creating and sending SMS


Tap "New message". Enter the number in "To" and the message in "Type to Compose". Then tap "Send".

Browser

You can browse web pages using the browser. You can browse sites via packet communication and Wi-Fi also.

- 1 Tap  on the Home screen.
- 2 Tap the address bar.
- 3 Enter an URL or keywords.
Once you enter an URL or keywords in the address bar, a list of candidates appears.
- 4 Tap  or the web page you want to display from the list of candidates.

Turning Wi-Fi on to Connect to a Network

- 1 From the Home screen, press , and then "Settings".
- 2 Tap "Wireless & networks" and then "Wi-Fi settings".
- 3 Check the box of "Wi-Fi".
A scan for Wi-Fi networks starts automatically. A list of available networks appears.
- 4 Tap the name of the Wi-Fi network that you want to connect to.
To connect to a protected Wi-Fi network, enter the required information and tap "Connect".

Support

Troubleshooting

- First, check whether the software update is required. If required, update the software.
- If a symptom does not improve after its cause has been identified, contact "Repairs" at the last page of this manual or a repair counter specified.

■ Power supply

Power does not turn ON.	
• Is the battery pack inserted correctly?	P.6
• Is the battery pack charged?	P.7

■ Charging

Cannot charge (Notification LED does not light or blinks).	
• Is the battery pack inserted correctly?	P.6
• Is the AC charger plug securely connected to the power outlet?	P.7
• If you are using the microUSB cable for PC connection, is the PC powered on?	—
• If you make a call, perform data communication, or use some other function for a long time while charging, this product may become hot and charging may be stopped. In this case, charge again after the product cools down.	—

■ Operation of the terminal

The this product becomes hot during operations or charging.	
• The product, battery pack, or AC charger may become hot during operations or charging, or if you use the camera function for a long time while charging. This is not a safety hazard, so you can continue to use them.	—
• If you use the camera function for a long time, the unit may become hot and the camera function may end. Wait a while before restarting to use the camera function.	—

Battery usage time is short.	
• Has the unit been out of the network service area for a long time? As this product searches for radio waves in order to enable communication when out of the network service area, more electricity is consumed than usual.	—
• The battery pack usage time varies depending on the usage conditions and the degradation level.	—
• The battery pack is a consumable. The available usage time shortens every time the battery pack is recharged. If the usage time significantly reduces compared to the time of purchase even if the battery pack is fully charged, purchase the specified battery pack.	—

Power turns off or automatic restart occurs.	
• If the battery pack terminal is dirty, the contact may become poor and the power may be turned off. If dirty, wipe the battery pack terminals with, for example, a dry cotton swab.	—

No operation occurs by tapping or pressing a key.	
• Is the power turned off?	P.9
• Is sleep mode set? Press the power switch to cancel sleep mode.	P.9
• Is the screen locked?	P.9
• Are you touching the touch panel correctly?	P.11

Tapping does not work properly.	
• Do you tap the screen with gloved hands?	—
• Do you tap with the tip of a fingernail, or is there any foreign matter between your hand and the screen?	—
• Is the display covered with a protective sheet? Some types of protective sheets prevent correct operation.	—

Screen response to tapping or key pressing is slow.	
• The screen response may slow down if large amounts of data are saved in this product or transferred between the product and the microSD card.	—

The SIM card is not recognized.	
• Is the SIM card inserted in the right direction?	P.5

The clock shows wrong time.	
• If power is kept on for a prolonged time, the clock may show the wrong time. Check that the "Date & time" are set to "Automatic", and turn the terminal off then back on in a location with good signal reception.	—

■ Telephone call

The ringtone does not sound.	
• Is the product in Silent mode?	—
• Is the ring time for the Voice mail service or Call forwarding service set to "0 sec."? Set "Set ring time" of "Voice mail service" on "Call settings" in "Settings".	—
• Is the ringtone volume set to its minimum? Set "Volume" of "Ring" on "Ringtones and sounds" from "Settings".	—
• If you cover the proximity sensor with your hand, the ringtone volume may be lower.	P.3

Cannot make a call with [] shown	
• Are you out of the service area or in a place with poor signal strength? Check on the Status Bar.	P.14

Cannot make a call (does not disappear when you move, or calls cannot be made or received even when the radio wave is strong enough)

• Turn the power off and then on, or remove and reinsert the battery pack or the SIM card.	P.4, 5, 9
• You may not be able to make or receive calls, depending on the type of radio signal, even when it is shown. Move to another place and call again.	—
• Depending on how congested the radio waves are, it may be difficult to establish a connection in crowded places due to a congestion of calls and emails.	—

Error Message

SIM card is PUK-locked.

• This message appears when you turn on the power while PIN1 code is locked. Tap "Emergency call" and enter * **05* [PUK code]* [new PIN1 code]* [new PIN1 code]#*.	—
• This message appears if you turn on the power or attempt to perform an operation related to the UIM card while the PIN unblocking key is locked. Contact a carrier Shop Service Counter.	—

Updating Software

Software Update is a function that connects to the network to check whether software on this product needs to be updated, downloads a portion of the software by packet communication as and when required, and updates the software. The NEC website provides information about required software updates.

■ There are three ways to update software: auto update, immediate update, and booked update.

- Auto update:
Automatically download software, and overwrite (update) it at a time set beforehand.
- Immediate update:
Update whenever you want to update.
- Booked update:
Book a time to install an update package, and the software is updated automatically at the booked time.

Warranty and After-Sales Service

Warranty

- Be sure to receive a warranty at the time of purchase of the FOMA terminal. Read contents of the warranty, confirm information such as the "Shop name and date of purchase" and keep it in a safe place. If necessary items are not described, immediately contact the shop of purchase. The warranty for free repair is valid for one year from the date of purchase.
- This product and its accessories are subject to modified, in part or whole, for improvement without prior notice.
- Data saved in your contacts, etc. may be modified or lost due to the malfunction, repair or other handling of this product. You should therefore make a copy of your contacts data, etc. as a precautionary measure. If you have this product repaired, most of the previously downloaded data will not be transferred to the repaired terminal, as prohibited by the Copyright Act.
- * You can back up contacts data from this product to a microSD card.

After-sales service

■ For problems with your product

Before requesting repairs, read "Troubleshooting" in this instruction manual. If the problem still persists, contact "Repairs" (In Japanese only) at the last page of this manual.

■ For repairs after inquiry

Bring your product to a repair counter specified. Repairs are accepted during business hours of a repair counter. Also, you must bring the warranty.

Note that it may take some days to repair the terminal depending on the malfunction state.

During the warranty period

- This product is repaired at no charge under the conditions of the warranty.
- Make sure to bring the warranty for repair. You will be charged even during the warranty period if the warranty is not presented or the trouble or damage is caused by your inappropriate handling (such as damage to LCD or connector, etc.).
- You will be charged even during the warranty period if malfunction is caused by the use of devices and consumables other than those specified.

Repair may not be possible in the following cases:

- When a repair counter judges the cause of malfunction is exposure to water (Example: when wet-indication sticker reacts)
- When, as the result of inspection, corrosion is found due to exposure to water, condensation or sweat, or any of the internal boards are damaged or deformed (damage to the external connector terminal (earphone/microphone terminal) or LCD or cracked body could be the case as well)
- * Since these conditions are outside the scope of the warranty, any repairs, if at all possible, will be charged.

After expiration of the warranty

All repairs that are requested are charged.

Replacement parts

Replacement parts (parts required to maintain functions) will in principle be kept in stock for 6 years after termination of production. However, depending on the malfunctioning part, repair may not be possible due to a lack of replacement parts. Even after the stock period has expired, the repair of some malfunctioning parts may be possible. You should therefore contact "Repairs" (In Japanese only) at the last page of this manual.

Radio Frequency (RF) Signals

THIS MODEL PHONE MEETS THE U.S. GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your wireless phone contains a radio transmitter and receiver. Your phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR limit set by the FCC is 1.6 W/kg.* Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the U.S. government-adopted requirement for safe exposure. The tests are performed on position and locations (for example, at the ear and worn on the body) as required by FCC for each model. The highest SAR value for this model phone as reported to the FCC when tested for use at the ear is 0.50 W/kg, and when worn on the body, is 0.83 W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various phones and at various positions, they all meet the U.S. government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section at <http://www.fcc.gov/oet/ea/fccid> after search on FCC ID A98-FWP7935.

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines.** Please use an accessory designated for this product or an accessory which contains no metal and which positions the handset a minimum of 1.5 cm from the body.

Non-compliance with the above restrictions may result in violation of FCC RF Exposure guidelines.

- * In the United States, the SAR limit for wireless mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. SAR values may vary depending upon national reporting requirements and the network band.
- ** For devices which include "WiFi hotspot" functionality, SAR is measured at a distance of 1.0cm for operation of data calls as required by FCC, and this product is shown to be in compliance with the FCC RF exposure guidelines.

FCC Regulations

This mobile phone complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This mobile phone has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation; if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Declaration of Conformity

Hereby, NEC CASIO Mobile Communications, Ltd. declares that this product is compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. Declaration of Conformity can be found on <http://www.n-keitai.com/lineup/index.html> (Japanese only).

CE 0168