






Phone Calls

Making a call/videophone call





As N-03C is not equipped with the front camera, during a videophone call, you can send only the substitute image (Chara-den) or image from the rear camera to the other party.

Making a call by entering the phone number





- 1 Enter the phone number starting with the area code, then  (voice call) /  (V.phone)
- 2 After the call ends, 
 - Videophone operation
 -  : Adjust zoom
 -  (1 second or longer) : Mute your voice

Making a call from Phonebook

Add the phone number of the other party to the phonebook in advance.

- 1  ► "TEL function" ► "Phonebook" ► "Search phonebook" ► Select a search condition and search an entry ► Use  to select an entry, then  (voice call)  (V.phone)

Making a call from Redial/Received calls

- 1 Use  (Redial) or  (Received calls) to select the other party, then  (voice call) /  (V.phone)

Notifying the other party of your phone number

Set whether to show your phone number (caller ID) on the other party's phone (display) when making a call.

- 1  ▶ "TEL function" ▶ "Dial/Receive setting" ▶ "Caller ID notification" ▶ "Activate/Deactivate"
- 2 "ON" or "OFF"






- If you hear a message requesting your caller ID, make a call again with Caller ID notification enabled or with 186 prefix.

Making an international call

Use WORLD CALL to make international calls from Japan.



- You can make calls from overseas. → p.7

- 1 010 ▶ Country code ▶ Area code (City code) ▶ Other party's phone number ▶  (voice call) /  (V.phone)
- 2 After the call ends, 



- Dial the other party's phone number excluding "0" at the beginning of the area code (city code). However, to make a call to some countries/areas, such as in Italy, "0" is required.

Receiving a call/videophone call

- 1 When you receive an incoming call, 
- 2 After the call ends, 





•When you receive an incoming call, the ring tone sounds and the illumination flashes.

Adjusting earpiece volume

- 1  ► "TEL function" ► "Dial/Receive setting" ► "In-call setting" ► "Volume" ► Adjust with 




•During a call, you can adjust the volume with  / .




When you cannot answer a call

Setting to record a voice and videophone message

When you cannot answer a voice or videophone call, the FOMA terminal can record a voice or videophone message.

- 1  ▶ "TEL function" ▶ "Rec. msg./Voice memo" ▶ "Record message setting" ▶ "ON" ▶ "Phone" or "Videophone" ▶ Select an item
- 2 Set ring time (3-digit number meaning 000-120 seconds)

If you receive a call with Record message setting ON

Record message activates if the set time ends. Press  to answer a voice call while recording. Press  (Answer with camera image) or  (Subst.) (Answer with substitute image) to answer a videophone call while recording.

To play a recorded message


On the standby screen,  ▶ Select "Record message" icon or "Record VP message" icon ▶ Select an item

Setting Public mode (Drive mode)

When Public mode (Drive mode) is set, a caller hears a message that you cannot answer the call because you are driving or in a place where you have to refrain from using a mobile phone (on a train or bus, in a theater, etc.), then the call ends.

- 1 On the standby screen,  (1 second or longer)

To deactivate

On the standby screen,  (1 second or longer)

Setting Public mode (Power OFF)

When Public mode (Power OFF) is set, a caller who made a call while the power is off hears a message that you cannot answer the call because you are in a place where you have to turn off the mobile phone (in a hospital, on an airplane, around a priority seat on a train, etc.), then the call ends.

- 1       ▶ 

To deactivate

      ▶ 

Using various network services

■ Available network services

Useful DOCOMO network services are available.

- The network services are not available when you are outside the service area or in a place where the signal is weak.
- For details, refer to "Mobile Phone User's Guide [Network Services]".
- For the application and inquiries, please contact General Inquiries on the last page of this manual.

Service name	Application	Monthly charge
Voice Mail Service	Required	Charged
Call Waiting	Required	Charged
Call Forwarding Service	Required	Free
Nuisance Call Blocking	Not required	Free
Caller ID Notification	Not required	Free
Caller ID Request	Not required	Free
Dual Network Service	Required	Charged
English Guidance	Not required	Free
Multi Number	Required	Charged
2in1	Required	Charged
Public mode (Drive mode)	Not required	Free
Public mode (Power OFF)	Not required	Free
OFFICEED	Required	Charged
Melody call	Required	Charged

- "OFFICEED" requires a subscription and is a fee based service.
For details, refer to the NTT DOCOMO corporate website (<http://www.docomo.biz/html/service/officed/> (Japanese)).

Setting Voice Mail Service

- 1  ▶ "TEL function" ▶ "Voice mail service" ▶ Select an item

Setting Call Waiting

- 1  ▶ "TEL function" ▶ "Other network serv." ▶ "Call waiting" ▶ Select an item

Setting Call Forwarding Service

- 1  ▶ "TEL function" ▶ "Other network serv." ▶ "Call forwarding" ▶ Select an item

Services available for the FOMA terminal

Available services	Phone number
Directory assistance (pay : service charge + call charge) * Unlisted phone numbers cannot be given.	(No area code) 104
Telegram (pay : telegram charge)	(No area code) 115
Time (pay)	(No area code) 117
Weather (pay)	Area code for weather forecast you want + 177
Police emergency	(No area code) 110
Fire brigade/Ambulance emergency	(No area code) 119
Maritime distress call	(No area code) 118
Emergency Message Recording System (pay)	(No area code) 171
Collect call (pay : service charge + call charge)	(No area code) 106

- If you are using a "Call Forwarding" service from a land-line phone and if a mobile phone is set as the forwarding number, depending on the settings of the land-line phone or mobile phone, the caller may simply hear the ring tone even when the mobile phone is busy with another call, out of range, in Self mode or turned off.
- Your FOMA terminal supports "Emergency Location Report".
Calls made to emergency service organizations (e.g. by dialing 110, 119 or 118) disclose information on the caller's location to the organization receiving the call. The location information may not be correctly sent depending on the current location or signal quality.
When the location information is disclosed, "Success" icon appears on the standby screen.
The location information and phone number are not disclosed when, before each individual call made, "184" or another blocking prefix is dialed first. If the information are deemed necessary for the protection of life, etc., this information may be reported to the organization being called. Locations planned for adoption of this feature vary according to the status of the preparations by the relevant emergency service organizations.
- When calling 110, 119 or 118 from the FOMA terminal, first say you are calling from a mobile phone, give your number, and state your location clearly, because the police or fire department may call you back for confirmation. Also, do not move around when making the call. Do not turn off the power immediately after ending the call, but leave it turned on for ten minutes or so, so that you can receive a call.
- Depending on the area you are calling from, you may not be connected with the nearest police or fire department, etc. In this case, dial from a public or land-line phone.

Using overseas

To make calls overseas, use international roaming (WORLD WING).

■ International roaming (WORLD WING) is the service, which enables you to make calls and perform communication over networks of affiliated telecommunications carriers using the FOMA terminal, phone number and mail address of your own for Japan, even when you are overseas. Voice calls, SMS and i-mode mail services are available without any special settings.

■ Supported area

This FOMA terminal can be used in the 3G and GSM/GPRS network service areas. Also can be used in countries/regions compatible with 3G 850 MHz. Check available areas.

■ Before overseas use, refer to the following:

- "海外ご利用ガイド" (Overseas use guide) (Japanese) in "My document" under Data box
- "Mobile Phone User's Guide [International Services]"
- DOCOMO "International services website"

■ Information

- For a country code, international call access code and international prefix number for the universal number, refer to "Mobile Phone User's Guide [International Services]" or DOCOMO "International services website".
- Overseas usage fees (call charge, packet communications charge) differ from those in Japan.

Available services overseas

Communication services	3G	GSM	GPRS
Voice call ^{*1}	○	○	○
Videophone call ^{*1}	○	×	×
SMS ^{*2}	○	○	○
i-mode ^{*3}	○	×	○
i-mode mail	○	×	○
i-Channel ^{*3*4}	○	×	○
i-concier ^{*5}	○	×	○
i-Widget ^{*6}	○	×	○
Packet communications via a PC	○	×	○
Obtaining location information using GPS ^{*7}	○	×	○

*1 : When 2in1 is active, dialing using Number B is not available. Dialing using the additional number of Multi number is not available.

*2 : When sending an SMS to FOMA terminal user, enter the other party's phone number as in Japan.

*3 : "i-mode overseas use" setting is required.

*4 : "i-Channel overseas use" setting is required. Packet communications charges will apply when you automatically update information on "Basic Channel". (Included in i-channel charges in Japan.)

- *5 : Overseas use setting for i-concier is required. Packet communications charges will apply for each reception of information.
- *6 : "i-Widget overseas use" setting is required. When you open the i-Widget screen, multiple Widget Appli may establish communications. In this case, packet communications charges will apply for each communication.
- *7 : GPS location service is free of charge. However, packet communications charges will apply, e.g. if you open a map from location information.



Some services are not available depending on the operator or network overseas. For countries and operators, refer to "Mobile Phone User's Guide [International Services]" or visit the DOCOMO "International services website".

Making a call to outside your destination country

- 1 (1 second or longer) to enter + ▶ Country code ▶ Area code (City code) ▶ The other party's phone number ▶ (voice call) / (V.phone)
- 2 After the call ends,



To make an international call to Japan, dial "81" as country code.
Dial the other party's phone number excluding "0" at the beginning of the area code (city code). However, to make a call to some countries/areas, such as in Italy, "0" is required.

Making a call in the country of stay

- 1 Area code (City code) ▶ The other party's phone number ▶ (voice call) / (V.phone)
- 2 After the call ends,

Making a call to "WORLD WING" user overseas

When making a call to "WORLD WING" user overseas, make a call as an international call to Japan (dial "81" (Japan) as the country code), irrespective whether the other party is in or out of the country you stay.

- 1 (1 second or longer) to enter + ▶ ▶ other party's mobile phone number excluding the first "0" ▶ (voice call) / (V.phone)
- 2 After the call ends,