

Content

1	General Information	5
1.1	Profile.....	5
1.2	Safety Information	5
1.3	Safety warning and Attentions	5
2	Your phone.....	9
2.1	Phone overview.....	9
2.2	Functions of Keys	9
2.3	Functions of icons	9
2.4	Technical specifications	10
3	Getting started.....	11
3.1	Installing the SIM Card and the Battery	11
3.2	Installing Memory Card	13
3.3	Charging the Battery	13
3.4	Powering On/Off the Mobile Phone	16
3.5	Linking to the Network	16

3.6	Dialing Calls	17
3.7	Using the Headset	17
4	Input method	18
4.1	Icons for Input Methods	18
4.2	To Shift Entry Methods.....	18
4.3	Numeric and English Input	18
5	Using the Menus.....	19
5.1	Dialpad.....	19
5.2	Contacts	19
5.3	Call logs	19
5.4	Settings.....	19
5.5	Main menu style.....	22
5.6	Screen Locks	22
5.7	Internet	22
5.8	Message	22
5.9	Camera	24
5.10	DV.....	24

5.11	Profiles	24
5.12	Calendar	25
5.13	Audio	25
5.14	Video	25
5.15	King Movie	25
5.16	E-book.....	25
5.17	My files	25
5.18	Bluetooth.....	26
5.19	WLAN	26
5.20	Java	26
5.21	Image	26
5.22	FM radio	26
5.23	Calculator.....	26
5.24	Recorder.....	27
5.25	Analog TV	27
5.26	Games	27
5.27	Clock.....	27
5.28	Local search	27

5.29 Unit conversion..... 27

5.30 Backup 27

5.31 STK..... 28

5.32 Memo..... 28

6 Appendix.....29

1 General Information

1.1 Profile

Please read this pamphlet carefully in order to make your phone in perfect condition.

Our company may change this mobile phone without prior written notice and reserves the final right to interpret the performance of this mobile phone.

Due to different software and network operators, display on your phone may be different, refer to your phone for details.

1.2 Safety Information

If your phone has lost or been stolen, notify the telecommunication office the SIM card is disabled (network support is required). This can avoid economic loss caused by unauthorized use.

Please take measures as following to avoid your phone being unauthorized used:

- Set PIN code of SIM card
- Set phone password

1.3 Safety warning and Attentions

Safety warning

➤ ROAD SAFETY COMES FIRST

Do not use a hand-held phone while driving. Use hands-free fittings when calls are unavoidable while

driving. In some countries, dialing or receiving calls while driving is illegal!

➤ **SWITCH OFF IN AIRCRAFT**

Wireless devices can cause interference in aircraft. Using a mobile phone in flight is illegal and risky. Please make sure that your mobile phone is powered off in flight.

➤ **SWITCH OFF BEFORE ENTERING RISKY AREAS**

Strictly observe the relevant laws, codes, and regulations on the use of mobile phones in risky areas. Turn off your mobile phone before entering a place susceptible to explosion, such as an oil station, oil tank, chemical plant or a place where a blasting process is under way.

➤ **OBSERVE ALL SPECIAL REGULATIONS**

Follow any special regulations in force in any area such as hospitals and always switch off your phone whenever it is forbidden to use it or, when it may cause interference or danger. Properly use your mobile phone near medical apparatuses, such as pacemakers, hearing aids and some other electronic medical devices, as it may cause interference to such apparatus.

Follow any special regulation in force in any area such as hospital and always switch off your phone whenever it is forbidden to use it or, when it may cause interference or danger. Properly use your mobile phone near medial apparatuses, such as pacemakers, hearing-aids and some other electronic medical devices, as or may cause interference to such apparatuses.

➤ **INTERFERENCE**

The conversation quality of any mobile phone may be affected by radio interference. An antenna is built inside the mobile phone and located below the microphone. Do not touch the antenna area during a conversation, lest that the conversation quality deteriorate.

➤ **QUALIFIED SERVICE**

Only qualified personnel may install or repair phone equipment. Installing or repairing the mobile phone on your own may bring great danger and violate the warranty rules.

➤ **ACCESSORIES AND BATTERIES**

Use only approved accessories and batteries.

➤ **USE SENSIBLY**

Use only in a normal and proper manner.

➤ **EMERGENCY CALLS**

Ensure the phone is switched on and in service, enter the emergency number, e.g. 112, then press the Dial key. Give your location and state your situation briefly. Do not end the call until told to do so.

***Note:** Just like all other mobile phones, this mobile phone does not necessarily support all the features described in this manual due to network or radio transmission problems. Some networks even do not support the emergency call service. Therefore, do not rely solely on the mobile phone for critical communications such as first aid. Please consult the local network operator. Just like all other mobile phones, this mobile phone does not necessarily support all the features described in this manual due to network or radio transmission problems. Some network even do not support the emergency call service*

Precaution

This mobile phone is well designed with fine art. Please exercise special care when using it. The following suggestions will help your mobile phone survive the warranty period and extend its service life:

➤ Keep the mobile phone and all its fittings beyond children's reach.

- Keep the mobile phone dry. Keep away from rain, moisture, liquid or other substances that may corrode electronic circuits.
- Do not use or store the mobile phone in dusty place, lest that active parts of the mobile phone be damaged.
- Do not store the mobile phone in a high-temperature place. High temperature will shorten the life of electronic circuits and damage the battery and some plastic parts.
- Do not store the mobile phone in a chilly place. Otherwise, moisture will be formed inside the mobile phone to damage electronic circuits when the mobile phone is moved to a constant temperature place.
- Do not throw, knock or shock the mobile phone, as that will destroy the internal circuit and high precision components of the mobile phone.

2 Your phone

2.1 Phone overview

2.2 Functions of Keys

The mobile phone provides the following keys:

- ◆ Power key
Power key situates at the left side of the phone. While using the phone, you can press this key to lock screen; you can hold it for two or three seconds can power on/off the mobile phone.
- ◆ Volume key
Volume key situates at the left side of the phone. You can press it to adjust ringer volume.

2.3 Functions of icons

- ◆ Home icon
Press it to open home screen. If you're viewing the left or right extended Home screen, press it can enter the central screen.
- ◆ Menu icon
Touch this icon to access options of a selected function;
- ◆ Back icon
Back icon situates at the right side of the phone. Press this key to return to the previous screen.

2.4 Technical specifications

Phone

Dimensions (W×D×H):

Weight:

Lithium battery

Rated capacity:

Continuous standby duration: (Relates to network status)

Continuous conversation duration: (Relates to network status)

Please refer to their labels for other data related to the battery and the charger.

3 Getting started

3.1 Installing the SIM Card and the Battery

An SIM card carries useful information, including your mobile phone number, PIN (Personal Identification Number), PIN2, PUK (PIN Unlocking Key), PUK2 (PIN2 Unlocking Key), IMSI (International Mobile Subscriber Identity), network information, contacts data, and short messages data.

Note:

*After powering off your mobile phone, wait for a few seconds before removing or inserting an SIM card.
Handling prudently while installing or taking out SIM card, as friction or bending may damage SIM card.
Properly keep the mobile phone and its fittings such as the SIM card beyond children's reach.*

Installation

- ◆ Hold the Power key for a while to power off the mobile phone.
- ◆ Take the back cover above the battery away.
- ◆ Take the battery away.
- ◆ Insert the SIM card into the SIM card slot lightly with the corner cutting of the card aligning to the notch of the slot and the gold plate of the card facing down, till the SIM card cannot be further pushed in.
- ◆ With the metallic contacts of the battery facing the metallic contacts in the battery slot, press the battery down until it locks into place.

Using code

The mobile phone and the SIM card supports sorts of passwords, in order to prevent the phone and the SIM card from being misused. When you are prompted to input any of the codes mentioned below, just input the correct code and then press the OK icon. If you input a wrong code, press the back key to clear it and then input the correct code.

◆ Phone lock code

The phone lock code may be set to prevent your mobile phone from being misused. In general, this code is provided along with the mobile phone by the manufacturer. The initial phone lock code is set to 1122 by the manufacturer. If the phone lock code is set, you need to input the phone lock code when powering on the mobile phone.

◆ PIN

The PIN (Personal identification number, 4 to 8 digits) code prevents your SIM card from being used by unauthorized people. In general, the PIN is supplied with SIM card by the network operator. If PIN check is enabled, you need to input the PIN each time when you power on your mobile phone. The SIM card will be locked if you input wrong PIN code for three times.

Unlocking methods as follows:

- Input the correct PUK according to the screen tips to unlock the SIM card.
- Then input the new PIN and press the OK icon.
- Input the new PIN again and then press the OK icon.
- If the input PUK is correct, the SIM card will be unlocked and the PIN will be reset.

Note: The SIM card will be locked if you input wrong PIN code for three times. To unlock the SIM card,

you need to input the PUK. In general, the PUK can be obtained from the network operator.

◆ **PUK**

The PUK code (Personal Unlocking Key) is required to change a blocked PIN. It is supplied with SIM card. If not, contact your network operator. If you input wrong PUK code for 10 times, SIM card will be invalid. Please contact the network operator to replace the SIM card.

◆ **Barring code**

A barring code is required for setting the call barring function. You can obtain this code from the network operator to set the call barring function.

3.2 Installing Memory Card

The Memory card is a pluggable mobile storage card inside the mobile phone.

To install the Memory card, place its indented side downward, insert the card into the card slot.

To remove the Memory card, take the card out.

Note:

1. The mobile phone cannot automatically identify the Memory card being inserted when the mobile phone is powered on. You must power off the mobile phone and then power it on, so that the phone can identify the Memory card.

2. The Memory card is a miniature object. Keep it out of the reach of children for fear that children swallow it!

3.3 Charging the Battery

The lithium battery delivered with the mobile phone can be put into use immediately after being

unpacked.

Battery level indication:

- ◆ Your mobile phone can monitor and display the battery state.
- ◆ Normally the remaining energy of the battery is indicated by the battery level icon at the upper right corner of the display screen.
- ◆ When the battery energy is insufficient, the mobile phone prompts "Battery low". If you have set an alert tone, an alert tone will be given off when the battery level is too low.
- ◆ A charging animation appears when the battery is being charged. When the charging is complete, the animation disappears.

Using a travel adapter:

- ◆ Install the battery into the mobile phone before charging the battery.
- ◆ Connect the adapter of the travel charger with the charging slot in the mobile phone. Ensure that the adapter is fully inserted.
- ◆ Insert the plug of the travel charger to an appropriate power outlet.
- ◆ During the charging, the battery level grids in the battery icon keep flickering till the battery is fully charged.
- ◆ It is normal of the battery to become hot during the charging period.
- ◆ The battery icon does no longer flicker when the charging process ends.

Note:

Ensure that the plug of the charger, the plug of the earphone, and the plug of the USB cable are inserted in the right direction. Inserting them in a wrong direction may cause charging failure or other problems.

Before the charging, ensure that the standard voltage and frequency of the local mains supply match the rated voltage and power of the travel charger.

Using the Battery

The performance of a battery is subject to multiple factors: radio network configuration, signal strength, ambient temperature, chosen functions or settings, phone fittings, and the voice, data or other application mode you choose to use.

To guarantee the optimal performance of your battery, please stick to the following rules:

- ◆ Use only the battery provided by the vendor. Otherwise, damages or even injuries could be caused during the charging.
- ◆ Power off the mobile phone before removing the battery.
- ◆ The charging process lasts a longer time for a new battery or a battery not in use for long. If the battery voltage is too low to enable the mobile phone to be powered on, charge the battery for a longer time. In this case, the battery icon does not flicker until a long time after the battery enters the charge status.
- ◆ During the charging, ensure the battery is placed in a room temperature environment or in an environment close to room temperature.
- ◆ Immediately stop using the battery if the battery produces odor, overheats, cracks, distorts or has other damage, or if the electrolyte leaks.
- ◆ The battery wears out with use. A longer charging time is required as the battery is put into use for a long time. If the total conversation duration decreases but the charging time increases even though the battery is properly charged, purchase a standard battery from the OEM or use a battery approved by our company. Using any poor-quality fittings will cause harm to your mobile phone or even incur

danger!

Note: *To guarantee your personal safety and protect the environment, do not litter the battery! Return the old battery to the mobile phone manufacturer or place it in specified battery reclamation areas. Do not litter any battery with other rubbish.*

Warning: *Short-circuits of the battery may cause explosion, fire, personal injury or other severe consequences!*

3.4 Powering On/Off the Mobile Phone

Hold the power key for a while to power on the mobile phone. A power-on animation appears on the display screen.

Input the phone lock code and press the OK icon if the mobile phone prompts you to input the phone lock code. The original code is 1122.

Input the PIN and press the OK icon if the mobile phone prompts you to input the PIN. The PIN is provided by the network operator for new opening SIM card.

Enter the standby interface.

To power off the mobile phone, hold the power key for a while.

3.5 Linking to the Network

After the SIM card and the mobile phone are successfully unlocked, the mobile phone automatically searches for an available network. After finding a network, the mobile phone enters the standby state. When the mobile phone is registered in the network, the name of the network operator is displayed on the screen. Then you can dial or receive a call.

3.6 Dialing Calls

◆ **Dialing a call to a number in the contacts**

Touch the Phone icon or the phone application icon on the Home screen, then select the Contacts tab. Swipe or slide upward/downward to pick out the target contact. Then you can touch the dial icon to originate a call.

◆ **Dialing a call to a number in call log**

Touch the Phone icon or the phone application icon on the Home screen, then select the call log tab. Swipe or slide upward/downward to pick out and touch the target contact. Then you can originate a call.

◆ **Answering incoming calls**

Touch the Accept icon to answer an incoming call.

Touch the End icon to end the current conversation.

To reject an incoming call, touch the Reject icon.

◆ **Managing multiple calls**

If you accept a new call when you're already on a call, you can touch the Answer icon to answer the current calls.

3.7 Using the Headset

It would enter headset mode automatically when you insert headset to the slot. Make sure of inserting it at the bottom of the slot, or you can't use it normally.

4 Input method

This mobile phone provides multiple input methods, including English input, smart English input and numeric input. You can use these input methods when editing the phonebook, short messages, files and greeting text.

4.1 Icons for Input Methods

After you enter an edit window such as a window for editing the phonebook, short messages or the memorandum, an icon is displayed to indicate the current input method:

Numeric input: “123”

English input in upper case: “ABC”

English input in lower case: “abc”

4.2 To Shift Entry Methods

Press options and touch input method icon on the screen keypad to select the input methods.

4.3 Numeric and English Input

You can input English by tapping letters showed at the bottom of edit interface when the input icons turn out to be ABC or abc, and you can input numbers when the input icons turns out to be 123.

5 Using the Menus

5.1 Dialpad

You can originate a new call through this function.

5.2 Contacts

The mobile phone can store up to 500 telephone numbers. The telephone numbers that an SIM card can store depends on the storage capacity of the SIM card. The telephone numbers stored in the mobile phone and in the SIM cards form a phonebook.

The phonebook search function enables you to view contacts. You can search a contact as required from the phonebook. Select this option, in the **edit** interface, input the name of the contact you want to search or the first letter(s) of the name.

5.3 Call logs

You can view dialed calls, missed calls and received calls through this function.

5.4 Settings

Phone settings

- ◆ **Time & date:** Set time, date, time format and date display type.
- ◆ **Language settings:** Select the display language for the mobile phone.

- ◆ **Input method settings:** You can set input method through this function.
- ◆ **Auto power on/off:** Set the time when the mobile phone will be automatically powered on or off.
- ◆ **Power saving mode:** Show the remaining battery level and turn on/off power saving mode.
- ◆ **Restore factory settings:** Use this function to restore factory settings. The initial password is 1122.

Display

Users can access this item to set wallpaper, backlight and animation effect, etc.

Security

- ◆ **PIN:** The PIN (Personal identification number, 4 to 8 digits) code prevents your SIM card from being used by unauthorized people. In general, the PIN is supplied with SIM card by the network operator. If PIN check is enabled, you need to input the PIN each time when you power on your mobile phone. The SIM card will be locked if you input wrong PIN code for three times
- ◆ **Modify PIN2:** You can modify PIN2 through this function.
- ◆ **Phone locked:** The function enables you to lock/unlock the phone. Enter password to switch on or off the phone. Password is required when the phone is locked. The initial password is 1122.
- ◆ **Modify the cell phone password:** to change phone password.
- ◆ **Privacy:** the initial password is 1122. After accessing this function, you can select some items. Once an item is selected, you need to input correct password whenever you want to enter these items to perform further operations.
- ◆ **Fixed dial number:** You can select to turn on/off this function and set fixed dialing number through this function.

- ◆ **Blacklist:** The number you add to blacklist cannot call you.

Call settings

- ◆ **Dual-SIM:** Access this item to perform following operations: Standby mode, Reply by original SIM and Set SIM name.
- ◆ **Call divert:** This network function enables you to forward incoming calls to another number you have previously specified.
- ◆ **Call waiting:** After you choose Activate, the mobile phone will contact the network. A moment later, the network will make a response and send a message to acknowledge your operation. If the call waiting function is activated, the network will alert you and the mobile phone screen will display the incoming call number if others are calling you while you are already in a conversation.
- ◆ **Call barring:** The call barred function enables you to bar calls as needed. When setting this function, you need to use a network barring code, which can be obtained from the network operator. If the code is wrong, an error message will be prompted on the screen. After selecting a call barred option, continue to select Activate or Deactivate. The mobile phone will prompt you to input the call barring code and then contact the network. A moment later, the network will make a response and send the operation results to the mobile phone.
- ◆ **Select line:** select it as per your need.
- ◆ **Hide ID:** When you call someone, he or she can't find out your number if you enable this function.
- ◆ **Others:** It includes Call time minute reminder, auto redial and vibration when connected.

Connections

Contact the network operator to obtain the following network services:

- ◆ **Network account:** You can manage network account through this function.
- ◆ **GPRS Service:** You can select to turn on/off this function.
- ◆ **Data connection settings:** The default setting is connecting when needed.
- ◆ **Network selection:** Set Network selection mode to Automatic or Manual. Automatic is recommended. When Network selection mode is set to Automatic, the mobile phone will prefer the network where the SIM card is registered. When Network selection mode is set to Manual, you need to select the network operator's network where the SIM card is registered.

5.5 Main menu style

You can set main menu style through this function.

5.6 Screen Locks

Use this function you must install it first, then you can download key-lock APP and set.

5.7 Internet

This function enables you to view the internet. Your phone will ask you with existed way. You can start to view only by starting corresponding way.

5.8 Message

If the short message memory is full, a blinking SMS icon appears on the top of the screen. To normally

receive short messages, you need to delete some of the existing short messages.

Chat mode

You can enter chat mode through this function.

Write message

Through this function you can create a new text message. You can type a message, and you're also able to insert a pre-defined message from “**Templates**”.

Inbox

Received messages are listed in this menu.

Outbox

Messages sent failed are stored in this item.

Drafts

Draft messages are listed in this item.

Sent box

The messages which are sent successfully are stored in this menu.

Templates

You can create pre-defined messages in this interface.

Broadcast message

You can receive and view broadcast message through this function.

Voice mail server

You can select SIM1 or SIM2 through this function.

5.9 Camera

The phone is provided with a camera, which supports the photographing functions. Roll the phone to align the camera to the picture and then press the camera icon to capture photos. Pictures will be saved in the file system of the memory card.

5.10 DV

This function enables you to record dynamic pictures. You can press the red round icon to start recording videos.

5.11 Profiles

The mobile phone provides multiple user profiles, so that you can customize some settings to adapt to the specific events and environments.

Customize the user profiles according to your preference and then activate the user profiles. The user profiles fall into five scenarios: **Normal, Silent, Meeting, Indoor, Outdoor, Earphone** and **Bluetooth**.

When you insert an earpiece to the mobile phone, the mobile phone automatically enters the Headset mode. There is no option for activating the Headset mode on the screen.

5.12 Calendar

Once you enter this menu, there is a monthly-view calendar for you to keep track of important appointments, etc. Days with events entered will be marked.

5.13 Audio

Use this function to play audio files.

5.14 Video

Use this function to play video files.

5.15 King Movie

You can watch movie through this function.

5.16 E-book

E-book reader enables you to read TXT file. Through the USB connecting line putting files to E-book folder of phone or T-Flash card. After finishing downloading, you can find the folder and open the E-book to read text directly.

5.17 My files

The phone supports the memory card. The capacity of the memory card is selectable. You can use the file manager to conveniently manage various directories and files on the memory card.

Choose **My files** to enter the root directory of the memory. The root directory will list the default folders, new folders and user files. When the mobile phone is powered on for the first time or when you have not

changed the directory, the root directory contains the default folders only.

5.18 Bluetooth

With Bluetooth, you can make a wireless connection to other compatible devices, such as mobile phones, computers, headsets and car kits. You can use the Bluetooth to send images, video clips, music, sound clips and notes, and transfer files from your compatible pc.

5.19 WLAN

You can search and connect to wireless network through this function.

5.20 Java

You can manage Java application through this function.

5.21 Image

You can view the pictures or images through this function.

5.22 FM radio

You can use the application as a traditional FM radio with automatic tuning and saved channels. Before using it, you should insert earphone into it as antenna.

5.23 Calculator

The calculator can add, subtract, multiply and divide.

5.24 Recorder

The phone support WAV and AMR. The AMR takes the compression algorithm. So in the same memory condition, it has longer recording time than WAV.

5.25 Analog TV

You can watch TV through this function.

5.26 Games

There is a game name Sokoban embedded in the phone.

5.27 Clock

Three alarm clocks are set but deactivated by default. You can activate one, multiple or all of them as needed. For each alarm clock, the ringing date and the ringing time can be set.

You can also use world clock, stopwatch and timer through this function.

5.28 Local search

You can search contacts, applications, etc, on the phone through this function.

5.29 Unit conversion

You can convert unit through this function.

5.30 Backup

You can backup and restore the data of your phone through this function.

5.31 STK

STK service is the tool kit of SIM card. This phone supports the service function .The specific items are depended by SIM card and network. Service menu will be auto added to the phone menu when supported by network and SIM card.

5.32 Memo

You can create new memos through this function.

6 Appendix

Appendix 1: Troubleshooting

If you find exceptions when operating the mobile phone, restore the factory settings and then refer to the following table to solve the problem. If the problem persists, contact the distributor or service provider.

Fault	Cause	Solution
SIM card error	The SIM card is damaged.	Contact your network service provider
	The SIM card is not in position.	Check the SIM card
	The metal face of the SIM card is polluted.	Clean the SIM card with a clean cloth

Poor received signal quality	Signals are obstructed. For instance, radio waves cannot be effectively transmitted nearby a high building or in a basement.	Move to a place where signals can be effectively transmitted
	Line congestions occur when you use the mobile phone in high-traffic hours	Avoid using the mobile phone in high-traffic hours

The mobile phone cannot be powered on	The battery energy is exhausted.	Charge the battery
Calls cannot be dialed	Call barring is activated	Cancel call barring
The mobile phone cannot connect the network	The SIM card is invalid	Contact your network service provider

	The mobile phone is not in a service area of the GSM network	Move to the network operator's service area
	The signal is weak	Move to a place where the signal quality is high
The battery cannot be charged	The charging voltage does not match the voltage range indicated on the charger	Ensure the charging voltage matches the voltage range indicated on the charger
	An improper charger is used	Use the charger specially designed for the mobile phone
	Poor contact	Ensure the charger plug is in good contact with the mobile phone

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Information (SAR)

This device meets the government's requirements for exposure to radio waves. This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The highest reported SAR values for head and body are below:

Head: **0.523W/kg(1g)**; Body:**1.06W/kg(1g)** respectively.

WARNING!! Read this information before using your phone

In August 1986 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards. Use only the supplied or an approved antenna. Unauthorized antennas modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

BODY-WORN OPERATION:

This device was tested for typical body-worn operations with the back of the phone kept 1.0cm from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 1.0cm must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Third-party belt-clips, holsters

and similar accessories containing metallic components shall not be used. Body-worn accessories that cannot maintain 1.0cm separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided. For more information about RF exposure, please visit the FCC website at www.fcc.gov

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

<ANSI C95.1> (1992) / <NCRP Report 86> (1986) / <ICIMIRP> (1996)

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1). Nevertheless, we recommend that you use a hands-free kit with your phone (such as an earpiece or headset) to avoid potential exposure to RF energy. The design of your phone complies with the FCC guidelines (and those standards).

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.