

# **MID**

## **MB709Q5**

### **Points for Attention**

1. Do not use the player in exceptionally cold or hot, dusty, damp or dry environments.
2. Do not allow the player to fall down while using it.
3. Please charge your battery when
  - A. Battery power icon shows an empty icon;
  - B. The system automatically shuts down and the power is soon off when you switch on the unit once again;
  - C. There is no response if you operate on any key
4. Please do not disconnect power abruptly when the player is being formatted or in the process of uploading or downloading. Otherwise it may lead to the error in the program.
5. When this unit is used as a moving disk, the user shall store or export files in the proper file management operation method. Any improper operation method may lead to the loss of files, for which this Company will be held no liable.
6. Please do not dismantle this unit by yourself. If there is any inquiry, please contact the dealer.
7. There will be no separate notice in the case of any change in the functions and performance of this product.

# Basic Operation

## Power on

In the shutdown state, long press "⏻" button boots

## Power off

In the power on state, long press the "⏻" key 3 seconds then pop-up device options, select " Power off " for shut down.

## Sleep

the machine under normal operating conditions, Short press the power button, Into hibernation, Now, Screen will close. Short press the power button again, Be able to resume normal mode. When the time being use this MID can enable this feature when, To reduce power consumption.

## Power reset

If there is shutdown to the player in the process of operation, you can turn off and restart the player by pressing "reset" key.

## Screen time out

If you do not contact the player within the set time, and do no operate by the button, the contact screen will be automatically turns off.

In any state, short press "⏻" button and for activation; Then skid the lock upwards to the green of spotted which will accomplish to access to the upper interface.

If it is necessary to deactivate the contact screen time out function, you can set the [Screen time out] option under [display] function into "Never".

## Using the Micro SD card

After this unit is connected with the computer, you will find two moving disks.

The first one is the built-in memory disk for this unit and the other is the disk for the Micro SD card. If no card is inserted, the second disk can not be opened. This unit supports the extension of the Micro SD card from 4GB to 32GB.

### **Inserting and Pulling out the Micro SD card**

#### **Inserting:**

Put the Micro SD card face up (side with words), and slightly force the card into the socket of the card, i.e. connecting the unit. Under this state, you can play the content in the Micro SD card.

#### **Pulling:**

Slightly push the Micro SD, and it will bounce by a section, and then you can take it out.

#### **Caution:**

Please perform inserting and pulling operation when power is off! Otherwise, it will lead to the loss or damage to the files within the unit! If no card is inserted, the computer will be unable to perform read and write operation for the disk notes of the later removable disk (Micro SD card).

#### **Battery:**

High capacity Polymer battery is used for this unit.

The duration available of the battery power depends on volume, types of playing files and operation of batteries. The player can be set up by the user as "user define power off time" or "display setup" to save batteries.

#### **Charging:**

This unit can be recharged by USB port, you can also use DC Charger:

Take out the DC charger, plug it into the wall outlet with AC 220V(output current 2500mA, output voltage 5V~5.2V)), then plug in the DC jack into the device DC-in jack.

#### **Warnings for charging:**

1. *A new battery may be empty and not charged before you get the device.*

- 2. If the device is not used for long time, it is better to charge it to full capacity every 2 or 3 months during storage.***

Power adapter is a key component of the portable player, which play a crucial role in keeping the portable player's normal work and protecting your security when using the player, a long-term customer surveys and after-sales service Practice shows that the malfunction of the portable player In many cases were caused by using inappropriate accessories, in particular the power adapter.

Use the substandard power adapter will shorten the life of the portable player by considerably, the voltage instability will seriously affected the normal work of the portable player and bring permanent damage on the player's performance and reliability, Use the substandard power adapter will also reduced the vocal quality of the players, shutdown the player when you using it, In addition, Use the substandard power adapter will cause combustion and explosion which will disserve the safety of the consumers.

## Shapes and Keys



 
- |                                |                    |               |
|--------------------------------|--------------------|---------------|
| 1.Front camera                 | 2. Earphone socket | 3. USB socket |
| 4. volume Add and subtract key | 5. power switch    | 6. MIC        |
| 7. loudspeaker                 | 8.IF Card          |               |



Open the card cover, can insert the IF card

## Setting up your tablet

1.

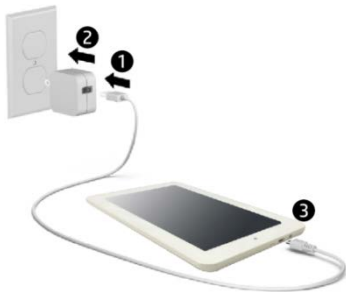

2. After charging the battery,

press and hold the power button for up to 5 seconds until the pattern is displayed.

---



**IMPORTANT:** If the battery image is not displayed on the screen, press the power button briefly to display the image, and then press and hold the power button until the logo is displayed.

---

3. Follow the on-screen instructions to select a language and a wireless network.

### Lock and unlock

**Lock**—Press the power button.


**Unlock**—Press the power button to turn on the tablet, then place your finger on the lock icon  and slide the icon to the unlock  position

### Turn off the tablet

Press and hold the power button, touch **Power off**, and then touch **OK**.

If your tablet becomes unresponsive, press and hold the power button for several seconds to turn off the tablet.



**All apps**—Displays a list of all apps installed. To confi you're your preferences, touch , and then touch .



**Back**—Opens the previous screen.



**Home**—Opens or returns to the Home screen.



**Recent apps**—Opens a list of apps used recently.

---

**NOTE:** The appearance of the Home screen may vary.

---



**Search**—Allows you to type one or more keywords to search.



 
 
**Voice search**—Allows you to speak one or more keywords to search with the installed search app.

\*The search feature varies by model and country.

**with the installed search app.**

## Use gestures

The following gestures can be used with your tablet:



## Organize the Home screen

- To add an app or a widget to the Home screen, touch the **Apps** tab or the **Widgets** tab, and then tap and hold an app or widget until it is added to the Home screen.
- To remove an app or widget from the Home screen, drag it to the X at the top of the

screen.



## Change your tablet's view

The Auto-rotate feature allows you to change your tablet's view. For landscape view, hold the tablet horizontally. For portrait view, hold the tablet vertically.

---

**NOTE:** Some apps do not rotate automatically.


---


To change the Auto-rotate setting, swipe down from the top of the screen to display notifications, and then touch the Screen rotation icon to lock  or unlock  the screen rotation.

## Return to the Home screen

To quickly return to the Homescreen, touch  .

## Display apps, widgets, and notification

**Apps**—Touch  , and then touch the Apps tab to see a list of all apps.

**Widgets**—Touch  , and then touch the Widgets tab to see a list of all widgets.

**Notification**—Swipe down from the top of the screen to see your notifications.

## Back up your data

Strongly encourages that you periodically back up your personal data and media on your tablet to another computer, a dedicated storage device, or to the cloud using one



of several commercially available solutions.

## Specification

<b>Memory</b>	Flash Memory	EMMC 8GB
<b>General</b>	Main Chip	A33
	Display	7" 1024*600 TN/IPS
	PMU	Mali 400
	Operation system	Android 5.0
	DDR	512MB 128*16*2stick
	Built-in WiFi	4 Hours video play time
	TP	26 channels
	RTC(Real-time clock)	yes
	G-sensor	yes
	Power Charger	5V 1A
	Front	0.3M,
	Speaker	yes
	Dimensions	Approx. 189*108.8*10.2mm
	WiFi- connection	WiFi RTL 8723
	Operational	-10~40°C
	jack	Speaker, MIC, MicroSD(SDHC) slot, OTG,HDMI
<b>Language</b>	Multi-language	English, Chinese, Russia, French, German, Spanish, Indian etc.
<b>Power</b>	Battery	2700mah

<b>O/S</b>	Supported OS	Windows, Mac and Linux
<b>Compatible  format</b>	Video	Supports AVI, MOV, VOB, RM/RMVB, FLV, DAT, MKV, MPG, MPE etc.
	Music	Supports MP3, WMA,APE, FLAC etc
	Photo	Supports JPG, BMP, GIF and PNG photos
	Ebook	Support PDF,TXT,EPUB etc.e-book format
<b>Application</b>		Google map/e-mail/MSN/SKPYE/GTALK/INETBOOKS

## **FCC Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.