 


**Thanks for choosing our mobile phone !
Please read this user manual before use**

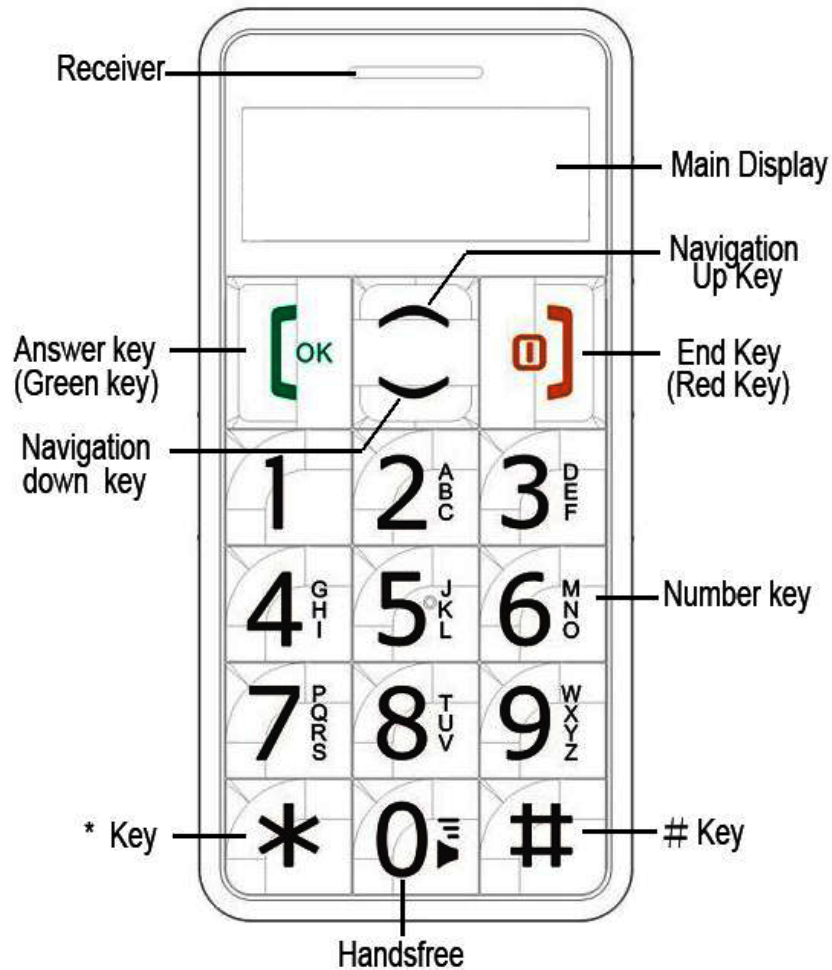

**We reserve the right to upgrade the software and product without prior notice.
The icon in this user manual may differ from your phone, depending on the phone you used.
We reserve the right to make changes to this user manual without prior notice.
All rights reserved.**

Safety Instruction

Please read below detail instructions carefully. It may have danger or illegality if you do not follow these instructions. This user manual includes detail information about safety instruction.

Switch on Phone Safely

Please do not switch on your phone when it might have interference or danger by using phone or phone is forbidden in this area.



Pay attention to the traffic safety

According to the recent research, it may have danger to use phone when you are driving even though you are using the hands-free device (such as hands-free device in auto, earphone, etc.). The driver is required not to use phone when they are driving. When phone is switched on, the electromagnetic wave from phone will interfere the electronic system of auto, such as ABS anti-explosion brake system or SRS (supplemental restraint system). For safety, please follow below:

- Do not put the phone on car control panel or ballonet area in car.
- Confirm with the auto distributor or manufacturer to make sure that electronic system of automatics have good isolation.



Interference

All kinds of phones may be interfered by environment, and then the performance of phones might be influenced. Phone may interfere with some electric appliance such as electronic TV, radiogram, PC and so on.



Turn off your cell phone in the site of medical and health care

Please switch off your phone in the site of medical and health care except some designated area where phone can be used. Phone will interfere with the running of electronic equipment, electron device or radio frequency device near around, just like the other usual equipment.



Switch off on airplane

Please follow the related regulations. Please switch your phone before boarding.



Switch off in gas station

Please switch off your phone when you are in gas station or any position where fuel and chemical have been placed.

Cell phone should be turned off around the site of explode.

To avoid the interference to exploding, please switch off your phone when you see the mark of "site of explode" or "turn off bidirectional radio devices". Please abide any related forbidden regulation, and execute any regular or statute which related with cell phone's using.



Using phone correctly

Please use phone in normal position. Please do not touch antenna area if not

necessary. Do not let children use phone without any tendance. SIM card can be taken out from phone. Please pay attention to prevent children from swallow the small component like this.

Do not let pregnant woman use phone for long time.



Accessories and batteries

Use only the approved accessories and batteries. Please do not connect with any product which doesn't match with this phone. Please be sure the phone has been switched off before taking out battery. Please deal with the scrap batteries properly according to the local status.



Waterproof

The phone doesn't have performance of waterproof. Please do not expose your phone in inclement weather or environment (such as wet, raining, liquid leakage, seawater, mirage, and so on).

Emergency calling

Please be sure your phone is power on and in the service available area. According to demands, press end key repeatedly to clear the content in screen and go back to standby mode, or press number key directly, then input emergency phone number. And then press answer key to describe where you are. Please do not hang up your phone without permission.

Contents

Safety Instruction	2
Start to Use	6
Put in/Take out battery	6
Insert/Take out SIM card	7
Battery Charging	7
Switch On /Off phone	8
Switch On	8
Your Phone	9
Stand by Mode	9
Main Display	10
Icons on Screen	10
Voice Dial	12
Dial out	12
Emergency Dial	12
Make an International Call	12
Dial extension No. of a Fixed line	13
Speed Dial	13
Receiving a Call	13
Reject a Call	13
Conference Call	13
Adjust volume	13
Message	14
Write and send message	14
Read and Reply SMS	14
Inbox and Outbox	14
Templates	14
Emergency	15
Delete Message	15
Voice mail	15
Storage status	15
Call History	15
Received call	15
Dialed call	15
Missed call	15
Delete all records	15
Talk time	15
Phone Book	16
Search	16
Search contact	16
New Contact	16
Delete contact	16
Copy contact	16
Emergency number	16
Spd.dial	16
Settings	16
Settings	17
Silent mode	17
Calculator	17
Alarm	18
Radio	18

 
Input Method.....19
Care and Maintenance.....19
Additional Safety Information Operating Environment19

Start to Use


Put in/Take out battery

Put in battery


1. Open the battery cover

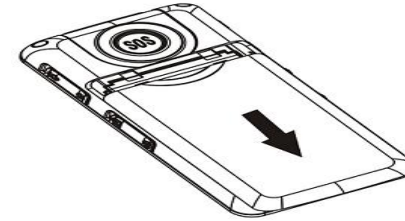

 2. Put battery into the battery slot. Keep three metal points of battery facing downward and matching with the three metal connection points on phone.

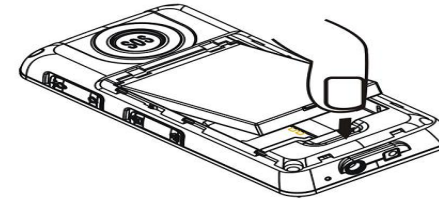


 3. Put on battery cover. Make sure that cover is completely matched and the cover matching sound could be heard.

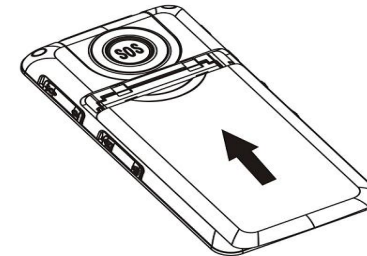


Take battery out

 
1. Open battery cover.

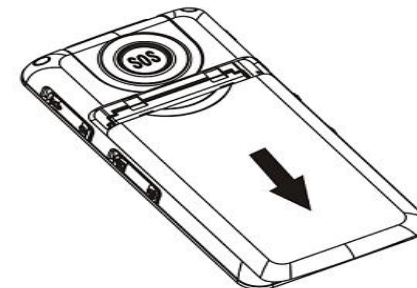

 2. Press the battery side and lift it up to take it out from battery slot.

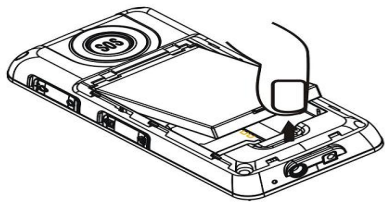

 
3. Close the cover. Make sure that cover is completely matched and the cover matching sound could be heard.

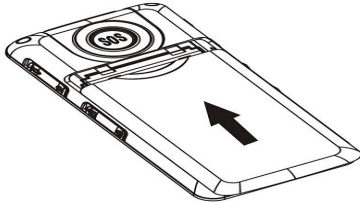

Remark: Shut down all devices and cut the connection with charger when removing battery. Please use battery which is matched with this phone only.


Insert/Take out SIM card

 1. **Insert SIM card:** Remove battery cover; Insert and slide the SIM card with the metal part facing downward by following below arrow direction at battery slot until SIM card is completely inserted in right position.

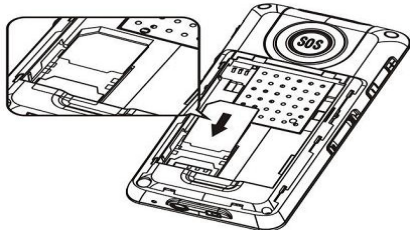


2. **Take out SIM card:** Hold the notch of SIM card and lift it slightly up by the other hand to take card out.

 


Remark: Phone must be power off when put in and take out battery.
 SIM card and the contact point will be easily damaged due to scratch and bending. Please be careful when inserting and taking out the SIM card.


Battery Charging

Phone could be charged when phone is power off or power on.
 Make sure that battery is inserted in phone before charging.

1. Plug in the charger.

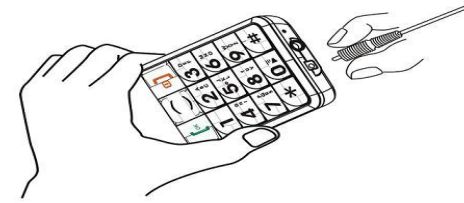


 2. Plug out the charger from power jack first after it is charged. Then unplug charger from phone.

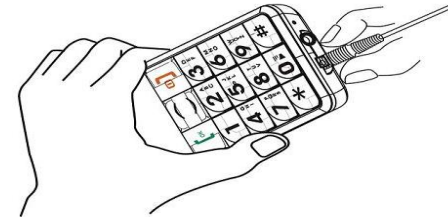

Remark: Battery indication will be displayed after several minutes if battery is over-discharged.

 Battery Level Indication Bar




 
Not enough battery alert

Phone will give alert when battery is not enough and display a message of low battery on screen. Please charge battery. Please charge battery when you receive the alert of low battery during calling in order to keep the calling.

Switch On / Off phone


Switch On

Long press  to switch on. If you already set the PIN code ON, then you need to type in PIN code. Type in the code and press green key to enter. Then phone will be on. (default PIN code is 1234)



Warning: SIM card will be locked if you type wrong code for three times. And it will inform you to type in PUK code. (Please contact your network service vendor to unlock it if needed.)

 
 
Switch Off

Long press this key  to switch off the phone at standby mode.


Your Phone

Stand by Mode

When phone is ready to use but no operation is done on phone, then phone is under stand by mode.

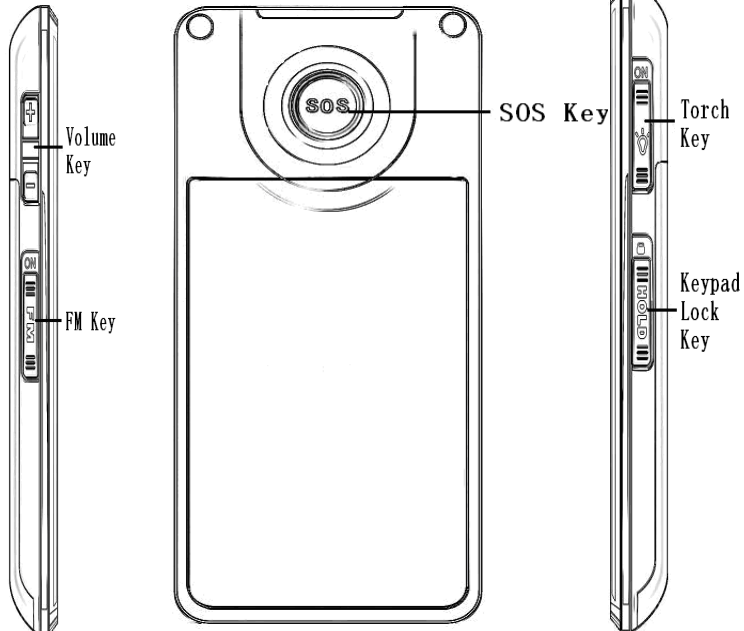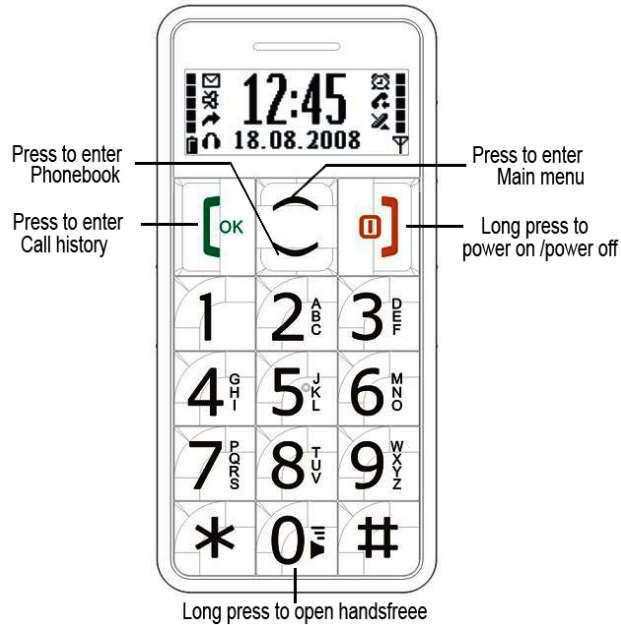

Main Display

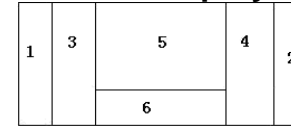 

1. Network Signal
2. Battery Level Indication
3. Icons indicating related functions
4. Icons indicating related functions
5. Time
6. Date

Icons on Screen

Icons might be displayed on screen.


	Battery status
	Signal status
	Alarm
	Unread message
	Message Full
	Call transfer
	Missed call
	Silent mode
	Roaming
	Keypad Lock
	Headset
	voice mail box
	Lock keypad
	New msg indication at keypad lock mode.
	Missed call indication at keypad lock mode.
	New msg and missed call indication at keypad lock mode.

Key Functions

Key	Functions
Answer Key (Green key)	Press to call out: press to pick up phone when there is incoming call. Standby mode: press to enter call list Operating: Press to confirm the function you choose.
End Key (Red Key)	Phone Off: Long press to switch on ; Phone On: Long press to switch off ; Operating: Press to go back to previous menu Long press it at non-editing screen to go back to standby screen.
Navigation Up key	Standby mode: press to enter main menu Operating: press to move cursor up
Navigation Down key	Standby mode: press to enter phonebook Operating: press to move cursor down
# key	Standby mode: switch to mute mode by long pressing this key. Editing mode: Press to switch typing method.
* key	Standby mode: change between general mode and mute mode by long pressing this key. Short press to type in *, P, +. Editing mode: Press to use normal symbol.
0 key	Activate hand-free function during call by long pressing this key. Input number "0" under dialing mode.
Volume Key	Press volume key + to increase volume and press volume key - to decrease sound (It is able to use during calling, radio and volume adjusting.)
FM Key	Push up to open FM ; Push down to close it.
Torch Key	Push up to open torch; Push down to close it.
Keypad Lock	Push up to unlock keypad and push down to lock keypad
Emergency Call	Emergency Call is ON: Long press to dial emergency call Emergency Call is OFF: Long press this key. It will prompt out a message <i>Reopened?</i> Then press answer key to set it on.

Voice Dial

Dial out

- 1、 Enter area code and phone number and press **Send/Green key** to dial out.
 - 2、 Use **End key** to delete if there is wrong input. Press and hold **End key** to clear all characters.
-  Obstacles give lots of effects on calling quality. Moving around in a small range will improve signal strength effectively.

Emergency Dial


How to set emergency dialing status: **Phone Book**  **Emergency number**  **Status . Set it as ON or OFF.**

When SIM card is inserted:

- 1、 When emergency call is set ON: you can **long press the "SOS" key at the back of the handset for 5 seconds** to dial the emergency number if you already set it.
- 2、 When emergency call is set OFF: you can long press SOS button at phone back side. It will prompt a message on phone screen: *Reopened?* Then you can press answer key to set it on.
- 3、 When emergency call is set ON: phone will send a message to set emergency numbers and then call those numbers one by one if you already set the emergency call number. There will be 3 calling cycles. It will call next number if previous number is failed to connect. Phone will call to local emergency number such as 112 if you don't set the emergency number in advance.
- 4、 Phone will send out alerting sound when it is sending message and calling to set emergency numbers.
- 5、 If all emergency numbers are dialed but without answering, then phone will be in emergency mode within one hour. In this case, phone will pick up incoming call and activate handsfree mode automatically (only pick up one incoming call). After that, phone will go back to normal status. That means you need to press green key to pick up incoming calls. During dialing emergency calls, if one of calls is connected, then phone will return to normal status after this call is end.

When SIM card isn't inserted: Long press SOS button at phone back side to directly call to 112.

Hang up the call: Long press END KEY to hang up the call during calling out or in.

 Long pressing **SOS** button at any condition will let phone return to standby mode automatically. Long pressing the button will not activate the emergency call during Keypad lock mode

Remark: In every country where it can use GSM network, you can use emergency dialing service if you are in network covering range (you can check the network strength indicator on left upside of phone screen to know whether you are in the range or not). If your network provider doesn't provide roaming service at that area, then it will show EMERGENCY CALLS ONLY on phone screen. That means you can only call emergency numbers. If you are in the range of network covering, you can dial emergency number without SIM card.

Make an International Call

- 1、 press *** key for twice times** and sign "+" will come out. Then enter country code, area code and phone number (without a zero in front of mobile phone number) Press Send key to enter voice dial to call out.
- 2、 Dial a fixed line: "+"country code + entire phone number + Send key.

Dial extension No. of a Fixed line

Some extension numbers of fixed line couldn't be dialed directly. You need to dial telephone exchange first and then dial the extension number. Type in a P symbol between telephone exchange number and extension number, this phone will dial the extension number automatically. Follow below method to make a symbol P: short press * key for three times. Then it will display a P symbol on screen.

Speed Dial

If you already set the speed dial numbers, then you can long press number key 2 to 9 and #,* key to dial set numbers out under standby mode. Long pressing number key 1 is to dial to voice mailbox if you already set the mailbox number.

Receiving a Call

- Press Send key to receive incoming call
- During a call, you can do below operations by pressing **answer key**: switch calls; mute; Unmute; speaker On/OFF, search contact; Phone will play sound to inform that there is a new incoming call. If you pick up the new call, then previous call will be hold.
- Press end key to end a call.

Reject a Call

Press end key  to reject an incoming call.


Conference Call

This phone supports conference call function and supports 3parties (three parties on two connection path). This function requires network support. Please consult your network service provider to activate this function.

Conference Call: Method One (one party is incoming side and the other party is calling out side):

- 1、 Pick up first call
- 2、 Dial another call out: type in phone number directly to dial out another call; Or press **answer key** to enter option menu to select *browse* in order to use record in phonebook directly. When you dial out another call, previous incoming call will be hold.
- 3、 When the second call is connected, you can press answer key to enter menu and select [**Make session**].

Conference Call: Method (two sides are incoming calls):



 **When two parties in conference call are incoming calls, then you need to activate call waiting function to allow two incoming calls get through at the same time.**

- 1、 Pick up first call
- 2、 Pick up second call: When the second call is coming, it will show the message of this incoming call (phone will hold current call automatically). You can press answer key to pick up the second call.
- 3、 When the second call is connected, press answer key to enter menu list to select [**Make session**]. Then you can have a conference call.


 


Adjust volume

You can press volume key+,- to adjust volume during the call.



Message

This function provides text message service which could receive and send text message. When there is  on screen, then it means there is a new message. It will show  on screen when mail box is full. Please delete message that it is no use.

Write and send message

- ①. Select [**SMS**]  [**New message**] to enter message editing. Write the message content directly.
- ②. Type in message at editing page. Please refer to *Input Method*. Press answer key to enter option menu to choose if you want to insert template, number and contacts.
- ③. **Switch input method**: Press “#” key to switch or press **answer key** to enter **option menu** to select.
- ④. **Send message(to one person)**: Press **answer key** to enter [**option**]  **send**. Then you can press answer key to enter number typing in page to type in the number or you can press answer key to choose number from phonebook (press navigation up and down key to search contacts and press answer key to get it). Finally press answer key to send out the message.
- ⑤. **Send to multi parties**: Press **answer key** to enter [**option**]  **send to many**. After sending out one message, you can type in next number directly or choose next number from phonebook. Repeat this unless you finish sending to all parties you want. Then press end key  to exit.
- ⑥. **Save the message**: Select **SAVE** to save it to draft; Select **save to template** to save it to **templates**; It will prompt out *message sending failed. Resent or not?* Message will be automatically saved in **Outbox** if you select no.

Read and Reply SMS

- ①. Check to read message. Press **answer key** to read message directly. Press **end key** to exit if you want to read it later.
- ②. Select [**SMS**]  [**Inbox**] to check message. Press up and down key to select the message you want. It will have  sign at standby window if you have unread message.
- ③. Press answer key to enter option menu when you read a message.

Inbox and Outbox

Save and manage received messages.

- ①. **Inbox**: Show messages in sorting of received time.
- ②. Press navigation up and down key to browse messages and press answer key to check message content
- ③. Press green key to enter option menu: Dial, reply, delete, Transfer and use the number.
 - a) **Reply**: reply message to sender
 - b) **Transfer**: forward that message to others.
 - c) **Delete**: delete message
 - d) **Dial**: call back to sender
 - e) **Use number**: Get the sender number or numbers in message out and save to phonebook.

Templates

This mobile phone has 5 pre-edited messages. You can delete, send and make

new message from templates. You can go [option] → **Insert templates** to directly use the pre-saved message in templates. Make new message from template, go into editing mode and send directly to recipient.


Emergency

You can set this function to let phone send out the emergency message while dialing emergency call. You can pre-set one emergency message. You can modify the message.

Delete Message

You can delete SMS with this function, including messages of inbox, outbox, draft, all msgs. Please be careful when you operating on this function to avoid improperly deleting.

Voice mail

Voice box is a kind of network service, you must apply for the service before using it. If you want to get more information about your voice box, please consult your network service operator. You can dial voice box by long pressing 1 (if it is set as voice box number in advance). **When the icon  shows on the screen, it indicates that a new incoming voice mail arrives. Long press "1" to listen to voice mail.** If you want to reset your voice box number, please select [SMS] → [Voice mail]. There will be prompt message "change number?", press green key to enter into number editing interface, input the invoice box number which you want to listen to and then press green key for confirmation.

Storage status

You can check SMS memory status of the phone or SIM card with this function.

Call History

To record the recent dialed call, missed call and received call. For each function, it can store a maximum of 20 records.

Received call

Show recent 20 received phone call numbers.

- ①. Select "**call history**" → "**received call**", press the navigation key up or down to browse the call history.
- ②. Press **answer key** to enter option menu. You can Dial, Reply, delete records, Indicate number and save number which you select.

Dialed call

Show recent 20 dialed numbers. Please refer to the operation of received call.

Missed call

Show recent 20 missed numbers. Please refer to the operation of received call.



Delete all records

Delete all history of dialed call, missed call and received call.

Talk time

View detail call duration information for last call, all calls, dialed call, and received call. Select clear all to clear all records.

Phone Book

You can save the name and phone number of contact to the phone memory and SIM card. The contact information in phone memory is shown by , and the contact information in SIM card is shown by .

Search

- ①. In the main menu, select [phone book] → [Search] to browse all records in phone book.
- ②. Type in the first character of the name you want to search.
- ③. The system will stop the cursor on the related record. The cursor can be scrolled up and down by pressing navigation key.

Search contact

- ①. Select [phone book] → [search contact] to enter.
- ②. Type in the name or the first three numbers/last three numbers of phone number you want to search, and then press answer key to search.
- ③. Switch typing methods by pressing # key during searching record.

New Contact

- ①. Select [phone Book] → [New contact] to add new phone number record.
- ②. Switch typing methods by pressing # key during adding record.
- ③. According to your set saving position (**phone book** → **Settings** → **Store path**), the added record will be saved automatically to the set position.

Remark: To save new record, the phone number must be filled in.

Delete contact

If you want to delete the contact information in phone or SIM card, you can select **menu** → [Phone Book] → [Delete contact] → **delete** or **delete all**. If you select **delete all**, then you need to choose whether delete **from SIM card or cell phone**. You can also enter phone book and press answer key to go to **option** → **delete contact** to delete the record one by one.

Copy contact

Select [Phone Book] → [copy contact] → **To phone directly**, all of the contact information will be copied. You also can do it in reverse. You also can copy contact information separately by : enter into phone book and select the contact you want to copy, press answer key to enter **option**, select **Copy contact**, and then press answer key to confirm. This option includes copying the contact information from phone to SIM card or from SIM card to phone.

Emergency number

By selecting [Phone Book] → [Emergency number] → [new], you can add a maximum of 4 emergency phone numbers. You can also change and delete the set emergency numbers, and set emergency dialing status.

Speed dial

You can set 10 speed dialing numbers from 2 to 9, *, #. you can dial the related numbers by long pressing related key under standby mode. You can set speed dials directly in phone book by selecting [Phone Book] → [Speed dial]. You also can edit, dial, and delete the speed dialing number.

Settings

- **Store path:** Set the default saving position for the numbers you want to save: SIM card, cell phone.
- **Storage State:** Let you know more about the phonebook memory status on the phone and SIM card.

Settings

Silent mode

You can make your phone under silence by setting it as Silent Mode. If silent mode is chosen, you can set the duration of silent mode according to your requirement. The silent mode will switch automatically to normal mode if time duration is expire. ("0" is for permanent silent mode)

Personalize

➤ Ring tones

1. You can set desired ring tone for Incoming call, Alarm, SMS and Number pad tone .

- ① .Select ring tone style that you want to use;
- ② .Enter corresponding ring tone list;
- ③. Select your favorite ring tone, the ring tone may play automatically when the cursor stop over it (except keypad)

2. **You can set vibration for your phone .If vibration is activated, your handset will vibrate when there is incoming call, new SMS or alarm clock.**

➤ Volume adjustment

You can adjust volume for Cal, Incoming call and Aid

- 1.Select the desired volume and enter into corresponding volume adjust interface.
- 2.Press navigation key up/down or volume key to adjust. Up or volume key "+" is for increasing volume, down or volume key "-"is for decreasing.

➤ Disp Contrast

You can adjust the brightness of the screen according your demands. Press navigation key up, you can get high contrast while down for low contrast.


➤ Language: Select language for phone.

➤ Date&Time setting: you can set the time and date with this function, including setting date format.

Remark: Clock can support 12-hour time format and 24-hour time format

Calculator

There is calculating function in the phone. You can carry out the operation for plus, minus, multiply, and divide. Step for using as below:

- ①. Input the first numeral: when "0" shown at the screen, you can input the numeral you want to calculate.
- ②. Input operation symbol: press navigation key up/down to choose the operation symbol like +, -, *, /, and then press call key to confirm.
- ③. Input the second numeral.
- ④. Calculate: press navigation key up/down to choose "=", and then press call key to confirm.
- ⑤. Clear: press  (ending key) . If you are inputting the calculated numeral or operation symbol, only the numeral or operation symbol will be cleared. If "0" shown in the display, please press ending key for exiting. You can clear all of the content by pressing ending key after you have the calculating result.

Remark: the accuracy is limited and round-off error may occurred

Alarm

The phone is with alarm clock function, you can set up alarm time and alarm ring tone according to your requirement. (**Settings** ➤ **Settings** ➤ **Ringtone type** ➤ **Alarm ring**).

- ①. Enter into the alarm clock setup interface. The cursor has been set to stay over the area for time on hour. Press navigation key up and down to set. You also can input time directly.
- ②. Press call key for confirming. The cursor will be positioned on minutes automatically. Press navigation key up/down to set, or input numeral directly. And then press call key for confirming.


Remark: Clock can support 12-hour time format and 24-hour time format

Restore factory

You can restore the current function or your phone to default factory setting. Select the options that you want to be restored and press Answer key for confirmation.

Remark: Restore Setup: restore all the functions under "Setup" to factory mode; Resore all: restore all the functions under "Setup" to factory mode and clear up all the contents stored in the phone.

Radio

 **Then antenna, which not including wireless antennas, used for radio. No matter you insert earphone or not, you can listen to the radio. If earphone is inserted, the sounds will come out from earphone. But if you do not use earphone, the sounds come from speaker of cell phone.**

1. Turn on radio: when cell phone is in standby mode, push radio key up to make radio on.
2. Turn off radio: during the listening, push radio key down to make radio off.
3. Operating process: turn on radio to enter into the listening page, press navigation up/down to set the channel, or you can input channel directly. Press answer key (green key) to move cursor and press "*" to start auto search. Press end key to exit from auto search. It will prompt out a message of finding out a channel and remind user whether to continue searching or not. Then press green key to continue and press end key to go back to radio page. (press * again to search again when you go back to radio page.)
4. Stop listening in by pressing end key (red key). But it will not exit radio page. Press end key (red key) to continue.
5. Long press # key to lock keypad and press it again to unlock.
6. Volume adjust: when listening, press volume key "+,-" to adjust radio volume.
7. Plug in earphone. Then long press volume + key to listen to FM from outside, Long press volume - key to listen from earphone.

Remark: The quality of listening is related to the signal quality where you locate at

Input Method

English Letters Input Method

English letter input method includes capital letter and small letter which is a kind of input method with single letter unit.

- English letters are set in number key 2 to 9. Press number key one time to show the first letter on number key and twice for the second letter on number key.
- Click letters on screen directly or write down letters by using stylus on screen.
- Press number key 1 to type in normal symbol and press number key 0 to type in number 0 or blank at letter input mode. (You cannot input a blank by pressing 0 key under intelligent English input method mode.)
- Press * key to switch between capital letter and small letter under intelligent English input method mode.

Numeral input method

When input method icon shows “123”, then you can type in numbers by clicking on numbers on screen or use stylus pen to write numbers directly on screen.

Punctuation input method

Press * to enter into punctuation selection list under writing short message mode, move the cursor up/down/left/right by pressing numeral key 2,8,4 and 6. Press numeral key 5 or answer key to get the selected punctuation.

Care and Maintenance

The suggestions below will help you protect your warranty coverage and enjoy your device for many years.

- Keep the device dry. Rainwater, humidity and all types of liquids or moisture can contain minerals that can corrode electronic circuits. If your device does get wet, remove the battery and allow the device to dry completely before replacing the battery in it.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastic parts.
- Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage electronic circuit boards.
- Use the supplied antenna with device or approved antenna only. Non approved antenna or revised antenna or other accessories may damage the device and offend wireless device management methods.
- Please use charger indoor.

All of the above suggestions apply equally to your device, battery, charger, or any enhancement. If any device is not working properly, take it to the nearest authorized service facility for service.

Additional Safety Information Operating Environment

Remember to follow any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger. When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products. As with other mobile radio transmitting equipment, users

are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder).

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles such as electronic fuel injection systems, electronic antiskid (antilock) braking systems, electronic speed control systems, air bag systems. For more information, check with the manufacturer or its representative of your vehicle or any equipment that has been added. Only qualified personnel should service the device, or install the device in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty that may apply to the device. Check regularly that all wireless device equipment in your vehicle is mounted and operating properly. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or enhancements. For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Wireless phones can cause interference. Using them in aircraft is both illegal and dangerous.

Potentially Explosive Atmospheres

Switch off your phone when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Users are advised to switch off the phone while at a refueling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

Emergency call

Important: Wireless phones, including this phone, operate using radio signals, wireless networks, landline networks, and user-programmed functions. Because of this, connections in all conditions cannot be guaranteed. You should never rely solely on any wireless phone for essential communications like medical emergencies.

Make emergency call: please refer to 3.2 **Emergency Call**

Please refer to this user manual or consult your supplier to get more data. When you make an emergency call, please provide as much detailed necessary information as possible. Your wireless phone may be the only communication device when there is accident. Call only can be end when there is hang up command.

RF Exposure Information

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types CP09 (FCC ID: XY2CP09) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 1.393 W/kg and when properly worn on the body is 0.719 W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.