

# CP10 User Menu

## Security

●To protect your mobile phone from illegal use; take the security measures as follows:

1. Set PIN codes of the SIM card.
2. Set call restrictions.

## Safety precaution

This section includes some important information on safe and efficient operation. Please read this information before using the phone.

### Operational Precautions

- Please use your phone properly, when making or receiving a call, please hold your phone as holding a wireline telephone. Make sure that the phone is at least one inch (about two point five centimeters) from your body when transmitting.
- Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights. Such as when watching television or playing video games. If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult your doctor before playing video games on your phone or enabling a flashing-light feature on your phone. (The flashing-light feature is not available on all products.)
- Keep the phone out of the reach of small children. The phone may cause injury if used as a toy.

### Precaution while driving

- Please pay attention to the traffic safety. Check the laws and regulations on the use of your phone in the area where you drive. Always obey them.
- Use hands-free function of the phone, if available.
- Pull off the road and park before making or answering a call if conditions require.

### Precautions for Medical Devices and facilities.

- When using your phone near pacemakers, please always keep the phone more than eight inches (about twenty centimeters) from the pacemaker when the phone is switched on. Do not carry the phone in the breast pocket. Use the ear opposite the pacemaker to minimize the potential for interference. Switched off the phone immediately if necessary.
- Some phones may interfere with some hearing aids. In the event of such interference, you may consult your hearing aids manufacturer to discuss alternatives.
- If you use any other personal medical device, please consult the manufacturer of your device to determine if it is adequately shielded from RF energy.
- In those facilities with special demand, such as hospital or health care facilities, please pay attention to the restriction on the use of mobile phone. Switch off you phone if required.

### Mobile phone

- Please use original accessories or accessories approved by the phone manufacturer. Using any unauthorized accessories may affect your mobile phone's performance, damage your phone or even cause danger to your body and violate related local regulations about telecom terminals.
- Turn off your phone before you clean it. Use a damp or anti-static cloth to clean the phone. Do not use a dry cloth or electrostatically charged cloth. Do not use chemical or abrasive cleaners as these could damage the phone.
- As your mobile phone can produce electromagnetic field, do not place it near magnetic items such as computer disks.

- Using the phone near electrical appliances such as TV, telephone, radio and personal computer can cause interference.
- Do not expose your mobile phone to direct sunlight or store it in hot areas. High temperature can shorten the life of electronic devices.
- Keep your phone dry, any liquid may damage your phone.
- Do not drop, knock or harshly threat the phone. Rough handling can break internal circuit boards.
- Do not connect the phone with any incompatible enhancement.
- Do not attempt to disassemble the mobile phone or battery.
- Do not store the phone with flammable or explosive articles.
- Do not charge the mobile phone without battery.

#### **Precautions for potentially explosive atmospheres**

- Switch off your phone prior to entering any area with potentially explosive atmospheres, such as fueling areas, fuel or chemical transfer or storage facilities.
- Do not remove, install, or charge batteries in such areas. Spark in a potentially explosive atmosphere can cause an explosive or fire resulting in bodily injury or even death.
- To avoid possible interference with blasting operations; switch off your phone when you are near electrical blasting caps, in a blasting area, or in areas posted "turn off electronic devices." Obey all signs and instruction.

#### **Precautions for Electronic devices**

- Some electronic devices are susceptible to electromagnetic interference sent by mobile phone if inadequately shielded, such as electronic system of vehicles; please consult the manufacturers of device before using the phone if necessary.

#### **Safety and general use in vehicles**

- Safety airbag, brake, speed control system and oil eject system shouldn't be affected by wireless transmission. If you do meet problems above, please contact your automobile provider. Do not place your phone in the area over an airbag or in the airbag deployment area. Airbags inflate with great force. If a phone is placed in the airbag deployment area and the airbag inflates, the phone may be propelled with great force and cause serious injury to occupants of vehicle.
- Please turn off your mobile phone at a refueling point, and the same to the place where the use of two-way radio is prohibited.

#### **Aircraft safety**

- Please turn off your mobile phone before the airplane takes off. In order to protect airplane's communication system from interference, it is forbidden to use mobile phone in flight. Safety regulations require you to have permission from a crew member to use your phone while the plane is on the ground.

If the mobile phone has the function of automatic timing power-on, please check your alarm setting to make sure that your phone will not be automatically turned on during flight.

#### **Battery use**

- Do not short-circuit the battery, as this can cause the unit to overheat or ignite.
- Do not store battery in hot areas or throw it into fire. Otherwise, it will cause explosion.
- Do not disassemble or refit the battery. Otherwise, it will cause liquid leakage, overheating, explosion and ignition of the battery.
- Please store the battery in a cool dry place if you don't use it for a long period.
- The battery can be recharged for hundreds of times, but it will eventually wear out. When the operating time (talk time and

standby time) is noticeably shorter than normal, it is time to replace it with a new one.

- Please stop using the charger and battery when they are damaged or show evidence of aging.
- Return the worn-out battery to the provider or dispose of it in accordance with environment regulations. Do not dispose of it in household rubbish.
- Please use original batteries or batteries approved by the phone manufacturer. Using any unauthorized battery may affect your handset performance or may cause danger of explosion, etc.

Warning: if the battery is damaged, do not discharge it. If the leakage does come into contact with the eyes or skin, wash thoroughly in clean water and consult a doctor.

#### Limitation of Liability

NEWPLAN should not be liable for any loss of profits or indirect, special, incidental or consequential damages resulting from or arising out of or in connection with using this product. Whether or not NEWPLAN had been advised, knew or should have known the possibility of such damages. The user should refer to the enclosed warranty card for full warranty and service information.

#### Put in/Take out battery

##### Put in battery

1. Open the battery cover
2. Put battery into the battery slot. Keep three metal points of battery facing downward and matching with the three metal connection points on phone.
3. Put on battery cover. Make sure that cover is completely matched and the cover matching sound could be heard.

##### Take battery out

1. Open battery cover
2. Press the battery side and lift it up to take it out from battery slot.
3. Close the cover. Make sure that cover is completely matched and the cover matching sound could be heard.

Remark: Shut down all devices and cut the connection with charger when removing battery. Please use battery which is matched with this phone only.

#### Battery Charging

Phone could be charged when phone is power off or power on.

- ▲ Make sure that battery is inserted in phone before charging.

1. Plug in the charger.
2. The statement shall require a socket outlet that is installed near the equipment and that shall be easily accessible.
3. Plug out the charger from power jack first after it is charged. Then unplug charger from phone.

Remark: Battery indication will be displayed after several minutes if battery is over-discharged.

#### Battery Level Indication Bar

##### Not enough battery alerts


Phone will give alert when battery is not enough and display a message of low battery on screen. Please charge battery when you receive the alert of low battery during calling in order to keep the calling.

### Insert/Take out SIM card

1. Insert SIM card: Remove battery cover, insert and slide the SIM card with the metal part facing downward by following below arrow direction at battery slot until SIM card is completely inserted in right position.
2. Take out SIM card: Hold the notch of SIM card and lift it slightly up by the other hand to take card out.

### Switch On /Off

#### Switch On

Long press  to switch on. If you already set the PIN code ON, then you need to type in PIN code. Type in the code and press green key to enter. Then phone will be on.



Warning: SIM card will be locked if you type wrong code for three times. And it will inform you to type in PUK code. (Please contact your network service vendor to unlock it if needed.)

#### Switch Off

Long press this key  to switch off the phone at standby mode.

## Main Display

1	3	5	4	2
---	---	---	---	---

1. Network Signal
2. Battery Level Indication
3. Icons Indicating Related Functions
4. Icons Indicating Related Functions
5. Time
6. Date

## Icons on Screen

⚠ Icons might be displayed on screen


	Battery status
	Signal status
	Alarm
	Unread message
	Message Full
	Call transfer
	Missed call
	Silent mode
	Roaming
	Keypad Lock
	Headset
	Lock keypad
	New msg indication at keypad lock mode.
	Missed call indication at keypad lock mode.
	New msg and missed call indication at keypad lock mode.

## Key Functions

Key	Functions
<b>Answer Key (Green key)</b>	Press to call out Press to pick up phone when there is an incoming call Standby Mode: Press to enter call list Operating: Press to confirm the function you choose
<b>End Key (Red Key)</b>	Phone Off: Long press to switch on Phone On: Long press to switch off Operating: Press to go back to previous menu, long press to go back to standby screen Long press it at emergency call status to go back to standby screen
<b>Navigation Up key</b>	Standby Mode: Press to enter main menu Operating: Press to move cursor up
<b>Navigation Down key</b>	Standby Mode: Press to enter phonebook Operating: Press to move cursor down
<b># key</b>	Standby Mode: Long press to call set phone number directly, short press to type in # Editing mode, Press to switch typing method

<b>* key</b>	Standby Mode: Long press to call the set number directly, Short press to type in *, P, + Msg Editing Mode: Press to use normal symbol
<b>Aid Volume Key</b>	Press to add up volume directly at what you set level during calling and in handsfree mode
<b>Volume Key</b>	Press volume key + to increase volume and press volume key- to decrease sound (It is available to use during calling, radio and volume adjusting.)
<b>FM Key</b>	Push up to open FM; Push down to close it
<b>Torch Key</b>	Push up to open torch; Push down to close it
<b>Keypad Lock</b>	Push up to unlock keypad and push down to lock keypad
<b>Emergency Call</b>	Emergency Call is on: Long press SOS button to dial emergency call out. Emergency Call is off: Long press SOS button, it will prompt out a message Reopened? Then press answer key to set it on, press end key to keep it off.

#### Aid Volume Key

To long press this key  to increase the volume at your set volume level during calling or FM listening status

How to set the aid volume level:

1. To press navigation up key -> Main menu -> Settings -> Settings  
-> Volume adjust -> Aid volume to set the aid volume level.
2. To press up key or volume key + to increase volume and press down key or volume key - to decrease volume.
3. To press answer key to save the set volume.

#### Voice Dial

Dial out: Enter area code and phone number and press answer key to dial out. Use End key to delete if there is wrong input.  
To press and hold End key to clear all characters.



#### Emergency Dial

- To select Phone Book -> Emergency number -> Status to set emergency dialing status as ON or OFF.
- When emergency call is set OFF: To press SOS button at phone back side, it will prompt a message on phone screen: Reopened? Then press answer key to set it on.
- When emergency call is set ON: To long press SOS button at phone back side to dial the emergency number if you already set it. Phone will send a message to your emergency contacts first and call them one by one. If previous number is failed to connect, it will call next number automatically. There will be 3 calling cycles.
- Phone will send out alerting sound when it is sending message and calling to set emergency numbers.
- Phone will be in emergency mode within one hour if all your emergency persons don't get your call after 3 calling cycles. In this case, phone will pick up the first incoming call and activate handfree mode automatically. After that, phone will return to normal status.
- Phone will call to local emergency number such as 112 if you don't set the emergency number in advance or SIM card isn't inserted.
- Long pressing SOS button at any condition will let phone return to standby mode automatically. Long pressing the button will not activate the emergency call during Keypad lock mode.

#### Make a Call

- To press \* key for twice and sign "+" will come out, then enter country code, area code and phone number or fixed line, and press answer key to make a call.
- To type in a P symbol between telephone exchange number and extension number, this phone will dial the extension number automatically.
- To short press \* key for three times, then it will display a P symbol on screen.
- To press Send key to receive incoming call or press end key to reject incoming call or end a call.
- To long press number key 2 to 9 and #, \* key to speed dial set numbers out under standby mode if you already set the speed dial numbers, Long pressing number key 1 is to dial to voice mailbox if you already set the mailbox number.
- This phone supports conference call function and supports 3 parties (three parties on two connection path). This function requires network support.
- To press volume key+, - to adjust volume during the call. You also can use Aid Volume Key to set volume level as you like.

#### Message

-  on screen means there is a new message and  on screen means mail box is full.
- To press "#" key to switch or press answer key to enter option menu to switch input method.
- To select SMS -> New message to type a new message, then press answer key to save it or send it out or clear it.
- To press answer key to read message directly. To press end key to exit if you want to read it later.
- Inbox shows all your messages got, outbox shows all your messages sent out if you saved, draft box shows all your messages saved, Templates shows 5 pre-edited messages and you may edit them, and voice mail is a kind of network service, you must apply for the service before using it.
- Emergency message: Please edit this message depends on yourself. It will be sent out automatically at status of emergency calling.
- Delete Message: You can delete MSG with this function, including messages of inbox, outbox, draft, all msgs.

#### Call History

- To press answer key to check call history under standby state. Dialed call shows all your calls out, Received call shows all your incoming calls and Missed call shows all your incoming calls didn't pick up. 20 numbers could be shown for each call history.

#### Phone Book

- You can save the name and phone number of contact to the phone memory and SIM card. Means the number saves in phone memory and in SIM card.
- New contacts: To select Phone Book -> New contact to add new phone number record, to select -> Phone book -> Settings -> Store path to choose saving position, and To press # key to switch typing methods during adding record.
- To select Phone book -> Search to scan all contacts and to select Phone book -> search contact to search by typing the name or the first/last three numbers of phone number you want.
- Emergency number: 4 emergency phone numbers maximally can be added by selecting phone book -> Emergency number -> new.
- To select Phone book -> Spd. Dial to set speed dials for 2 to 9, \*, #. Long press 2 to 9, \*, # under standby state to dial the related number directly.
- To select menu -> Phone Book -> Delete contact -> delete or delete all to delete the contact information in phone or SIM card.
- To Select Phone Book -> Copy contact -> To phone or Sim directly to copy the contact you want to

phone memory or Sim card.

### Settings

- To select Settings -> Silent mode to set your phone as silent mode or not. You can define the duration of silent mode (unit per hour).The silent mode will switch automatically to normal mode if time duration is expire. ("0" is for permanent silent mode).
- To select Settings -> Settings -> Ringtone type to set desired ring tone for Incoming call, Power on/off, Message alert tone and Key tone etc...
- To select Settings -> Settings -> Volume adjust to adjust volume for Call, Incoming call and Aid and press navigation key up or volume key "+" is for increasing volume while down or volume key "-" for decreasing.
- To select Settings -> Settings -> Disp Contrast to adjust the brightness of the screen. Press navigation key up for high contrast while down for low contrast.
- To select Settings -> Settings -> Language to set language for phone.
- To select Settings -> Settings -> Date&Time setting to set the time, date and date format.
- To select Settings -> Network setting to set call waiting, call transfer, call restrict or network select etc.

PIN: this phone supports PIN code function.

### Birthday reminder

- To select Settings -> Birthday reminder to set or check some birthday reminder date.
- To select Settings -> Settings -> Ringtone type -> Birthday reminder to set the ringtone for birthday reminder.

### Calculator

- To Select settings -> Calculator to the screen of calculator.
- To press navigation key up/down to choose the operation symbol like +, -, x, ÷, = and press answer key to confirm it.
- To press end key to clear all input information during using calculator and to exit calculator function while "0" shows in the display.

### Alarm

- To select Settings -> Alarm to set alarm on or off. If set it on, you can input alarm time first and press answer key to confirm it. You may choose to press navigation key up/down or to input numeral directly to input alarm time.
- To select Settings -> Settings -> Ringtone type -> Alarm ring to set the ringtone for alarm.

### Restore factory

- To select Settings -> Reset factory -> Reset all to clear all personal information and reset your phone to default factory setting.
- To select Settings -> Reset factory -> Reset setting to reset your phone setting to default factory setting.

### Radio

- To push the FM key up on the left of phone to turn radio on and to push FM key down to turn it off under standby mode, to



press answer key to start to enjoy radio and press end key to stop enjoy radio.

- To press navigation up/down or input channel number directly to set the channel, then press answer key to move cursor or confirm the channel to start to enjoy radio.
- To press “\*” key during radio page to start to auto search, to press answer key to continue searching and to press end key to exit from auto search and enjoy the channel just searched.
- To long press “#”key to lock pad and long press it again to unlock.
- To press volume key “+” or “-” to adjust radio volume.
- To long press volume “+” key to listen to FM from outside and long press volume “-” key to listen from earphone while earphone plugged in.

#### Input Method

- To press “#” to switch the input methods between Multitap, Smart English, Numeral, and Punctuation input methods.
- Multitap Input Method: To press number key 2 to 9 to input corresponding letter and press navigation key up/down to choose the letter you want.
- Smart English input method: To press number key 2 to 9 to input corresponding letter according to character order of the word you want, some words based on the character orders come up automatically and press navigation key up/down to choose the correct word you want, To press “\*” key to switch capital letter and small letter under smart English input mode.
- You cannot input a blank by pressing 0 key under smart English input method mode.
- Numeral input method: To press the main numeral key to input the numeral you want.
- Punctuation input method: To press \* to enter into punctuation selection list under any input method mode. To press by numeral key 2,8,4 and 6 to move the cursor up/down/left/right , To press numeral key 5 or answer key to get the selected punctuation.

●RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types CP10 (FCC ID: XY2CP10) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.165 W/kg and when properly worn on the body is 0.235 W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help