



LED
DOWNLIGHT

NHB-W710



LED
DOWNLIGHT

NHB-W710

User guide

Thank you for purchasing the Smart WiFi dim LED downlight from Novec Solutions. We are excited to be part of making your life easier, safer and bringing peace of mind into your homes.

Package contents:

- Smart LED downlight (1)
- Junction box (1)
- Wire nuts (2)
- User guide (1)

Product overview



1. Junction box with wire connections
2. Threaded LED light to junction box connectors
3. Spring loaded lips
4. Downlight
5. Integrated LED trim

Preliminary steps


The tools required for installation but not included are:

1. Flathead screwdriver	
2. Phillips screwdriver	
3. Pliers	
4. Wire strippers/cutters	
5. Circuit tester	
6. Work gloves	
7. Electrical tape	
8. Safety goggles	
9. Ladder	
10. Hammer	
11. Drywall saw or a hole saw matching the diameter of the fixture	 <small>environo® is a registered trademark of Environo Technologies Inc.</small>



1. Shut power off at the breaker

Find the breaker that controls the circuit for your floodlight. Turn it off before you continue with the installation.

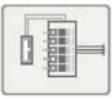


2. Determine the location

1. With the power off at the breaker carefully remove any existing light fixture/retrofitting the housing to accommodate the smart light.
2. If no light have been previously installed, determine the position of your new floodlight.
3. Use a **1/2"** saw or mark the center in the chosen location.
4. Then use a saw or the appropriate drill bit to cut the hole.




English

5. Before doing anything else, use the voltage tester to make sure the power is off.

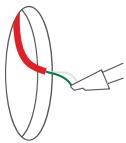

6. Connect the Line and Neutral power leads with the matching box wires.
See wiring diagram

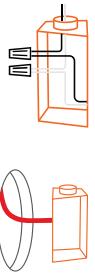

North American color code standard: black and white


Europe/Australia color code standard: blue and brown

7. Secure the wires with the wire nuts by turning them clockwise.
Gently pull the wires to test the connection.

8. Once the wires are securely connected, place the wires and junction

in the ceiling through the hole.

9. Then connect the light and the junction box by locking both connectors together.

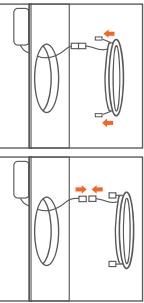


10. Hold on the spring clips against the fixture and gently guide it into the ceiling, until the clips snap firmly into place.

11. Make sure the fixture is flushed with the ceiling surface.




12. After the fixture is installed, restore the power at the breaker to:

make sure everything is working correctly.

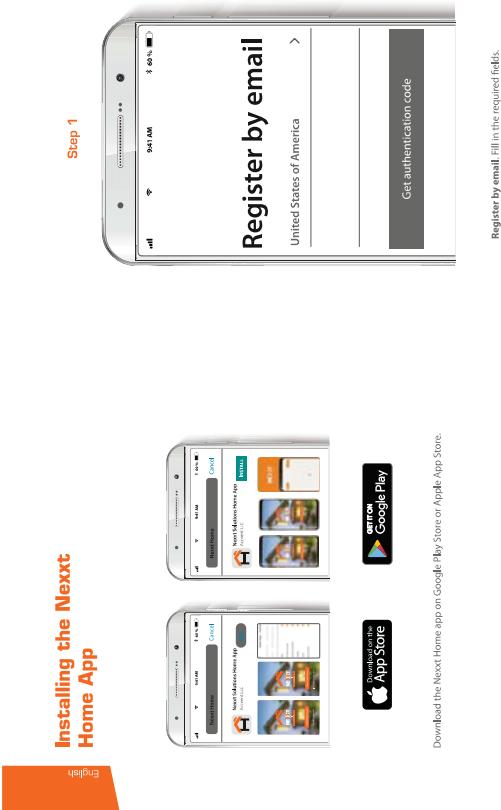

Register by email. Fill in the required fields.

Download the Nextt Home app on Google Play Store or Apple App Store.

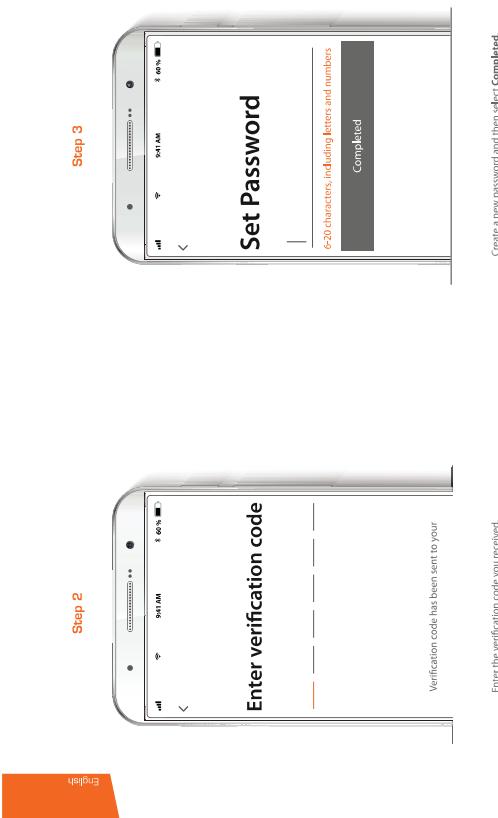

Create a new password and then select Completed.

Enter the verification code you received.

Step 4

Engage




Connection



The Neoxt Home account has been successfully configured.

Once the Neoxt Smart downlight is installed, open your Neoxt Home application and follow the steps described below:

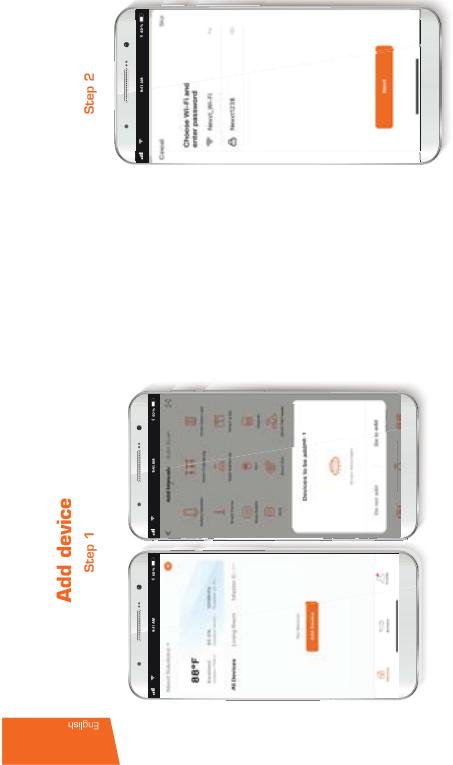

Select "Add device". If the device is not recognized automatically, select the smart downlight icon from the list of devices, and then tap "Go to add".

Verify that the smart downlight is powered on. You must connect to a 2.4GHz WiFi network, enter your network password. Ensure to use the correct password, otherwise the device will not connect.

English




Step 3



Step 4

Make sure the light is blinking. If it fails to blink, reset the daylight. To do so, turn the light on and off six consecutive times from the switch, until it begins to blink. Next, tap to confirm the light blinks rapidly.

Once the daylight is detected by the application, the notification 'Device added successfully' will be displayed. Click on 'Next' to continue.

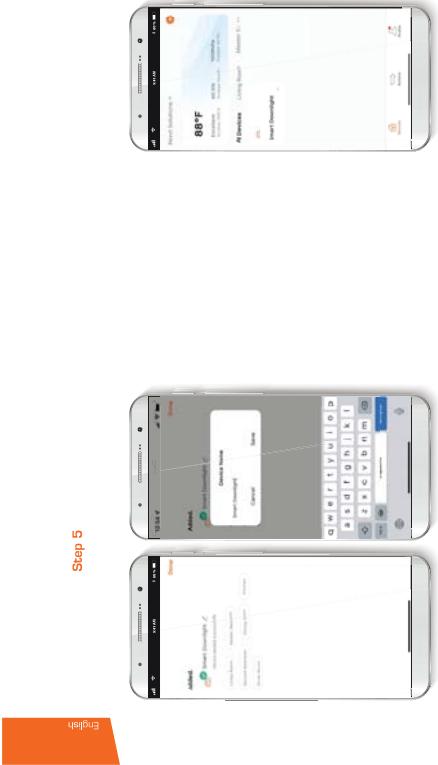


Step 5

English

If done, go back to the application main interface. The device is now ready to be used.

If you want to change the icon and the name of the device, and also design a different location, you can do it now or later through the Setting interface.

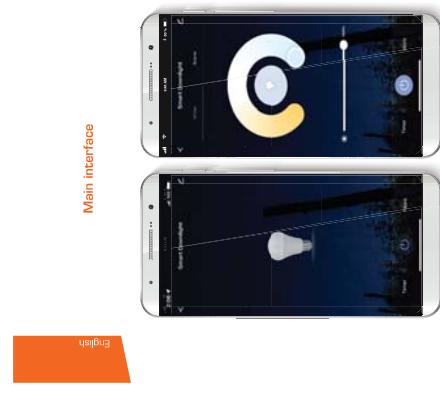

Main interface



Timer setup

Power button: Turns the light on and off.
White: Changes the brightness and white color temperature.

The timer function, located in the bottom left corner of the screen, allows users to set a countdown for a given amount of time to cause the device to turn on or off.



Located at the top right corner of the screen, this interface provides access to four pre-configured scenes. It also allows the creation and modification of scenes, such as Static, Blink or Breath.

The More option provides access to two submenus: Schedule and power-on behavior.



It allows users to program specific times and dates for the device to turn on or off. Select Schedule to access the Add schedule screen. Set the time you wish to program. Select Repeat to determine the frequency of the On/Off event. Be on the toggle button below to choose between the On/Off starts. Click on Save on the upper right-hand corner when done.

To remove a Schedule on iOS, slide item to the left, and for Android, press and hold Schedule, followed by Delete.

Delete setup

Schedule setup

Engage

Power-on memory



Settings

Device information: displays detailed information relative to the device.
Device name: changes the icon and the name of the device, and it also allows the user to assign a different location.
Note: click on the pencil icon to access the device name menu.

Tap-to-Blink and Automation: links the Wi-Fi downlight with other smart products to automatically control them through a customized command.

Three-party control: enables the voice recognition feature through Alexa and Google Assistant.

Share device: allows sharing the WiFi downlight with family and friends.

Create group: makes management of devices easier by grouping and arranging multiple components under a single group.


Feedback: lets you know if you have any issues setting up the product.

Location information: allows access to the device's location, which is used for action or scene segmentation within the home.

Add home screen: adds a shortcut of the device to the main screen on your phone.

Device update: we will sometimes add new features or provide updates with a new firmware upgrade.

Remove device: allows you to unbind the device from the Neato Home Account.

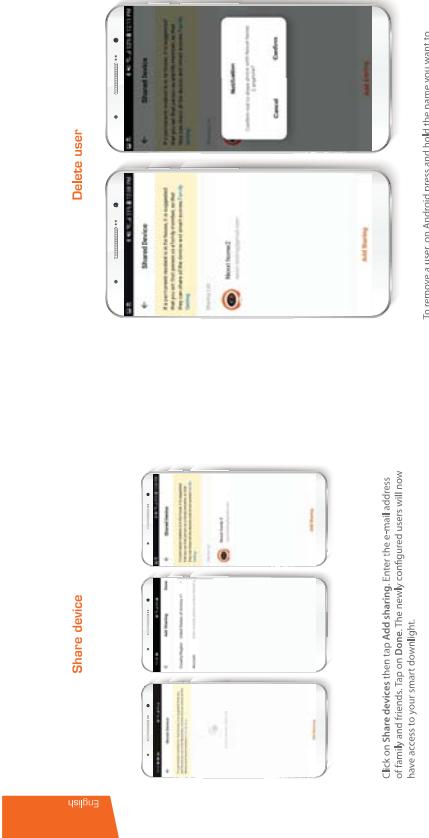

Delete user

Share device

Click on Share devices then tap Add sharing. Enter the e-mail address of family and friends. Tap on Done, the newly configured users will now have access to your shared content.

Note: family or friends will need their own Nextbit Solutions Home Account to access the device period.

To remove a user on Android press and hold the name you want to remove on the screen. Tap on the three dots at the top right corner. Click on Delete. A confirmation confirming you don't want to share the device with this user will be displayed. Click on Confirm.

FCC ID: XANHABW710

Nextbit, Nextbit logo, the Nextbit logo, #1 Screen, Chromecast, Chromecast Ultra and #1 Smart Streaming TV are registered trademarks, and #1 Screen, Chromecast, Chromecast Ultra and #1 Smart Streaming TV are trademarks of Nextbit, Inc. © 2014 Chromecast, Inc. All rights reserved. Chromecast is a trademark of Google LLC. All other brand names and trademarks are the property of their respective owners. Made in China.



Programación de horarios



Permite a los usuarios establecer horas y fechas específicas para provocar la conexión o desconexión del dispositivo.

Selección: Horario para ligarse a la pantalla. Configurar horario. Definir la hora que deseas programar. Seleccionar Repetir para determinar la frecuencia del evento. Pulse el último botón para ir a prendy y apagá la luz. Haz clic en el borde superior derecho de la pantalla para Guardar su configuración cuando termine.

Eliminar un horario



Con el fin de eliminar un horario, dedique el ítem a la izquierda en iOS, pero de utilizar Android, mantenga presionado el Horario respectivo, seguido de la opción Borrar al final.

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator, your body. Useonly the supplied antenna.