


## 2. User's manual (provisionally)

### REMOTE TRANSMITTER

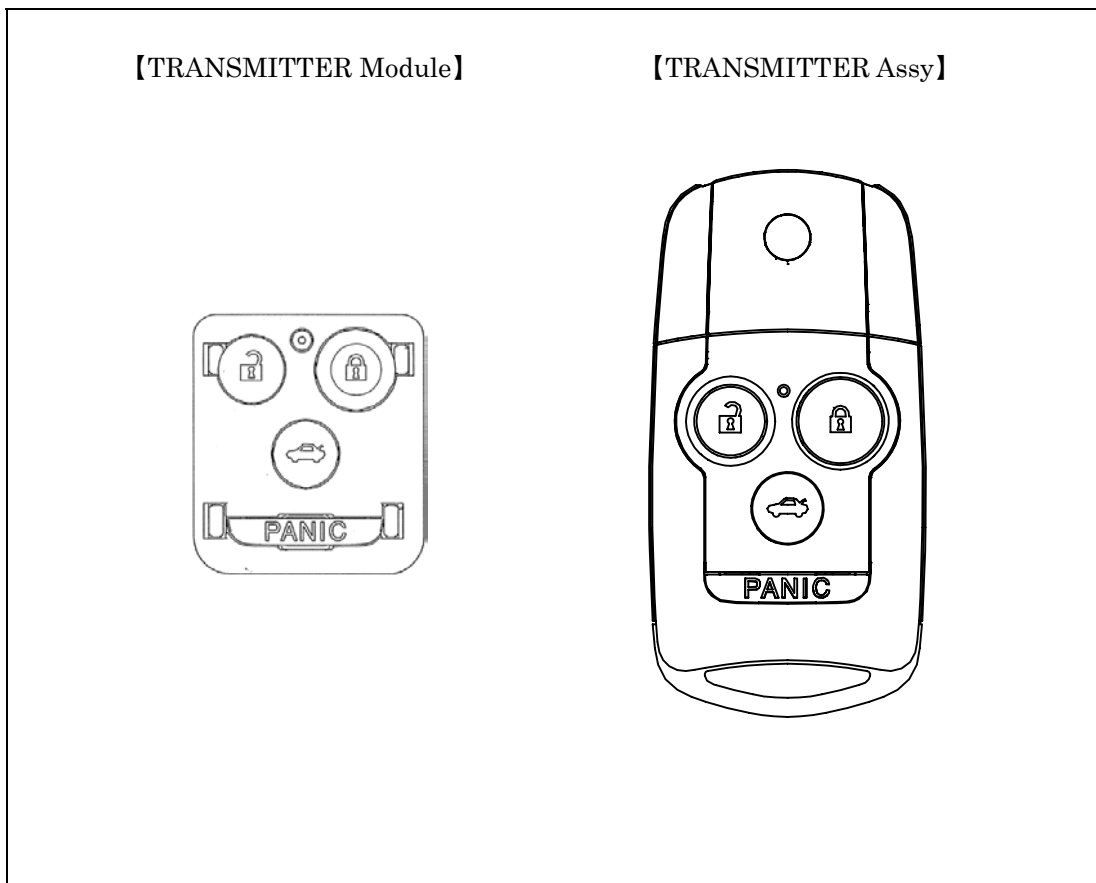

You can lock and unlock your vehicle with the remote transmitter.

#### **LOCK**

When you push the LOCK button, all the doors will lock.

You cannot lock any of the doors with the remote transmitter if any door is open or the key is in the ignition switch.

When you push the LOCK button more than about 1.0 second, the window will close.

#### **UNLOCK**

When you push the UNLOCK button, all the doors will unlock.

You cannot unlock any of the doors with the remote transmitter if the key is in the ignition switch.

When you push the UNLOCK button more than about 1.0 second, the window will open.

#### **BOOT RELEASE**

To open the boot, push the BOOT RELEASE button for approximately one second.

The boot will not open if the key is in the ignition switch.

#### **PANIC MODE**

Panic mode allows you to remotely sound your vehicle's horn to attract attention. To activate this mode, press and hold the PANIC button for about one second. Your vehicle's horn will beep for about 30 seconds.

To cancel Panic mode before 30 seconds, press any button on the remote transmitter. You can also turn the ignition switch is in ON.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

“Complies with RSS-GEN of Industry Canada”

**FCC WARNING**

Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.