


2. User's manual (provisionally)

REMOTE TRANSMITTER

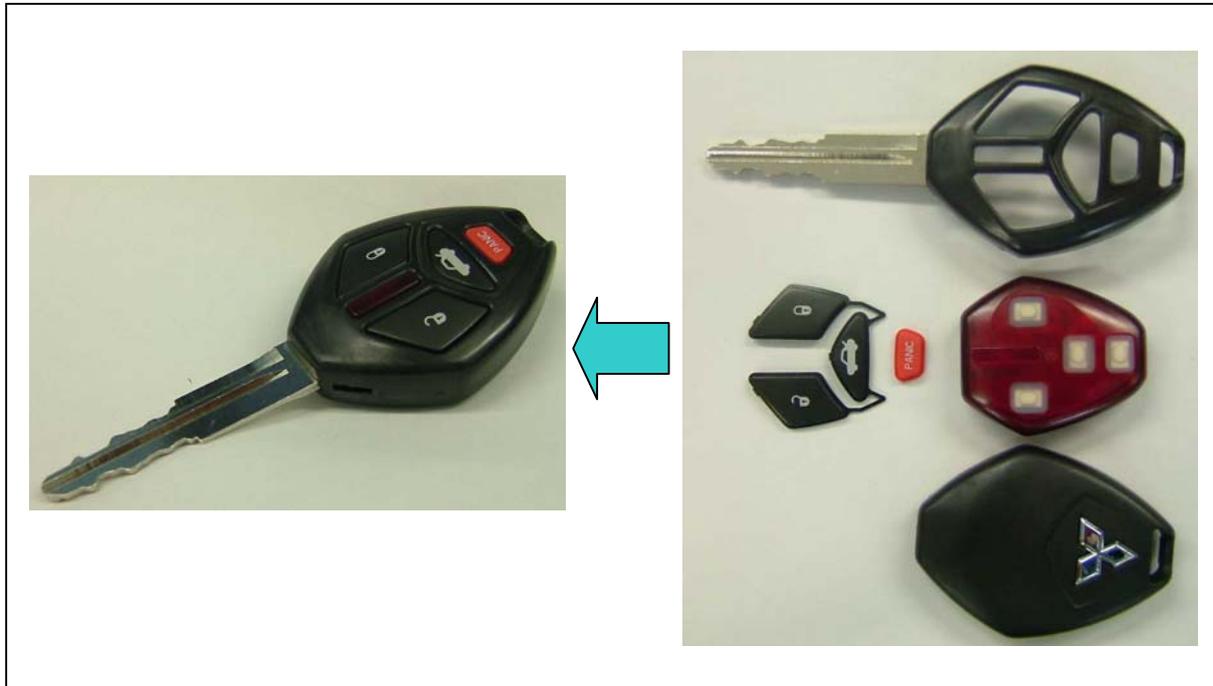

You can lock and unlock your vehicle with the remote transmitter.

LOCK

When you push the LOCK button, all the doors will lock.

You cannot lock any of the doors with the remote transmitter if any door is open or the key is in the Key cylinder.

UNLOCK

When you push the UNLOCK button once, only the driver's door unlocks. The remaining door unlock when you push the button a second time. If you unlock the doors with the remote transmitter, but do not open any of the doors within 30 seconds, the doors will automatically relocked.

You cannot unlock any of the doors with the remote transmitter if the key is in the key cylinder.

BOOT RELEASE

When you press the TRUNK button twice, the boots will open.

The boot will not open if the key is in the key cylinder.

PANIC MODE

When you press the PANIC button, the vehicle starts sounding the horn and flashing the headlight intermittently. These functions continue for 180 seconds unless any of the buttons on the transmitter are pressed.

OFCC WARNING

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules and RSS-Gen of IC Rules.. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

“Complies with RSS-GEN of Industry Canada”