


## USE AND CARE GUIDE

### 3-PACK WIRELESS INDOOR/OUTDOOR REMOTE CONTROL SWITCH

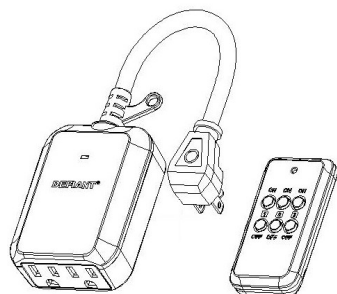

#### THANK YOU

We appreciate the trust and confidence you have placed in Defiant through the purchase of this outdoor wireless remote control. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Defiant!

## Maintenance

### 2 Replacing the battery



**WARNING:** Do not mutilate or place the battery in a fire. The battery may burst or release toxic materials. Do not short circuit or reverse polarity as this may cause burns.

- Remove the battery compartment cover from the back of the remote control by sliding the cover in the direction that its threads curve.
- Remove the old battery and place a new DC 3V CR2032 battery into the battery compartment, correctly observing the polarity indications (+/-) inside the battery compartment.
- Replace the battery compartment cover.
- Dispose or recycle spent/discharged batteries in compliance with all applicable laws. For detailed information, contact your local solid waste authority.

## Troubleshooting

Problem	Solution
The lights do not turn on and off via remote control.	Confirm remote operation after replacing batteries.
The lights do not turn on, even when the power indicator light indicates that the receiver is on.	Ensure the lights are functional by plugging them directly into the outlet.
	Be sure that the lights are in the "ON" position if they have their own switch.
	Be sure that the outlet that the receiver is plugged into is active.
Remote does not turn the device on or off.	Receiver and transmitter need to be re-synched. Replug the receiver into a properly grounded outlet and within 15 seconds press and hold the OFF(2) button on the transmitter for 1.5 seconds until the green indicator flash on the receiver, then press the ON(2) button.

## Safety Information

### Federal Communications Commission Interference Statement

This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

Store indoors when not in use.

This device complies with part 15 of FCC rule and Industry Canada: license-exempt RSS standard(s). Operation is subject to the following two conditions

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Avis d'Industrie Canada (IC): Cet appareil est conforme avec Industrie Canada exempts de licence standard RSS (s).

Son fonctionnement est soumis aux deux conditions suivantes:

- (1) cet appareil ne doit pas provoquer d'interférences et
- (2) cet appareil doit accepter toute interférence, y compris celles pouvant causer un mauvais fonctionnement de l'appareil.

### Information concernant l'exposition à l'énergie radiofréquence

Votre appareil est conçu et fabriqué pour ne pas dépasser les limites d'émission pour l'exposition à l'énergie RF établie par le gouvernement du Canada (IC). Les informations sur votre appareil sont en fichier avec l'IC et peuvent être trouvées sous la section Affichage Grant de <https://sms-sgs.ic.gc.ca/equipmentRechercher> après la recherche sur l'IC pour votre appareil, qui se trouve sur le λ l'arrière de l'appareil.


RATINGS
125 VAC, 60 Hz
15 A General Purpose
15 A Resistive
1000 W Tungsten
1/3 HP Motor

## Product Description



**NOTE:** This product is suitable for outdoor use and use in damp locations.

1. **Power indicator light:**  
The power indicator light indicates that the receiver is on.
2. **Outlet:**  
The outlet located on the bottom of the receiver allows the user to plug an array of devices into it. Plug the light or device to be controlled by the remote into the outlet.
3. **Remote control:**
  - Channel 1 2 3 :  
To control various devices with three different channels.
  - When the "ON" button is pressed, it will override the program to on function.
  - When the "OFF" button is pressed, it will override the program to off function.

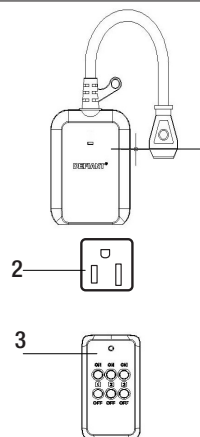

## Installation Instructions



**WARNING:** The device must be mounted in a vertical position with the receptacle facing downward and with the receptacle at least 2 ft. above the ground level to prevent water immersion.


## Installation Instructions

- Mount the receiver on a wall near a grounded electrical outlet. The nail or screw head must extend at least 3/16 in. out from the wall. Hang the receiver from the slot on the back of the unit onto a nail or screw. Plug the power supply cord of the receiver into the outlet.
- Plug the device cord into the receptacle at the bottom of the receiver.
- Remove the insulation tab from the battery compartment.

## Operating Instructions

### 1 Using the remote control

- To set up the three receivers (outlets) with various devices, locate channel 1, 2, 3, on the remote control and the 1, 2, 3, on each receiver and select ON/OFF function with the same channel (1,2,3) respectively.
- To activate the receiver, press the "ON" button of the remote control. The green LED of the remote control will illuminate momentarily and the LED of the receiver will remain illuminated.
- To turn the receiver OFF, press the "OFF" button of the remote control. The LED on the receiver will shut off.

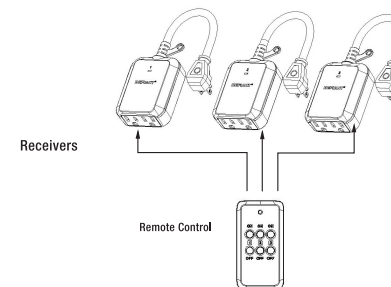

Receivers

Remote Control