


About the Keyboard

This section describes the special and standard functions available for your keyboard. A wireless keyboard may be supplied with your computer, based on the computer model purchased. See your computer's specifications sheet for details on your computer's supplied accessories.

FCC ID : AQ6-VGP-WKB3US

Set up your wireless keyboard and insert the batteries before attempting to establish communication between the keyboard and the computer.

 Wireless keyboard (bottom)

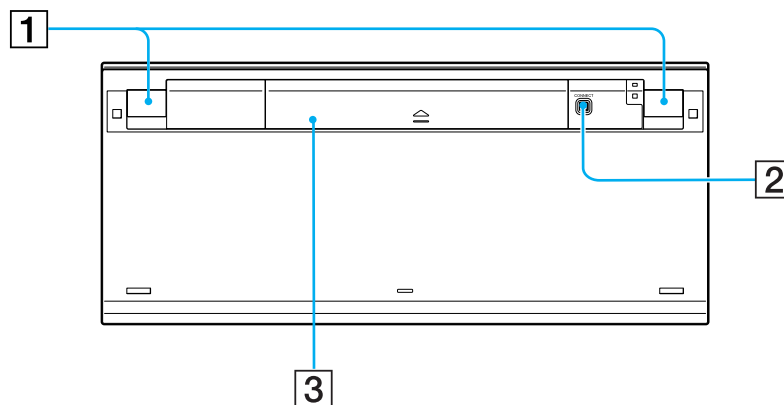


-
- | | |
|----------|--|
| 1 | Keyboard feet
Extend the feet to adjust the keyboard height. |
| <hr/> | |
| 2 | CONNECT button
Press to enable the wireless keyboard to communicate with the computer. |
| <hr/> | |
| 3 | Battery compartment
Compartment for the supplied AA batteries. |
-

Identifying keys and functions



 Your keyboard uses a standard key arrangement with additional keys that perform specific functions.

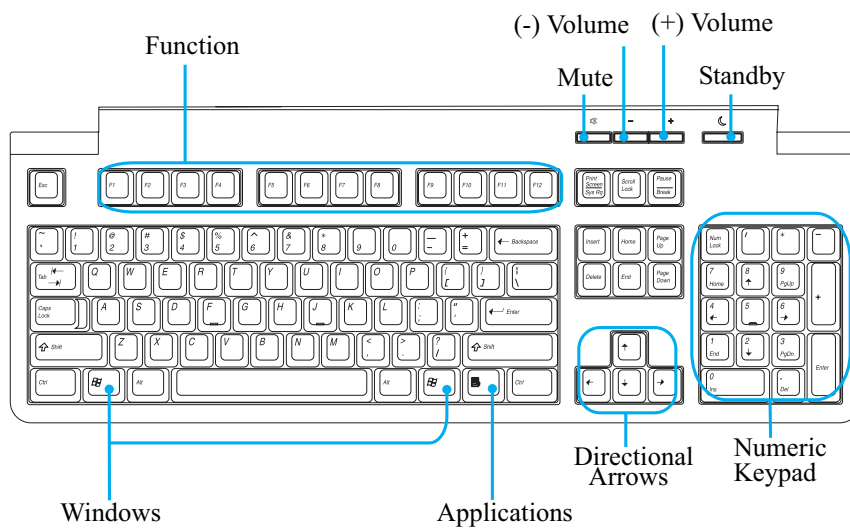Wireless keyboard




KEY	DESCRIPTION
Function	The 12 function keys along the top of the keyboard are used to perform certain tasks. The task associated with each function key may vary between software programs.
Numeric keypad	Use the numeric keypad area to type numbers or to perform basic math calculations. Press the Num Lock key to activate the numeric keypad. (The Num Lock indicator lights.) Press the Num Lock key again to deactivate the numeric keypad.

About the Keyboard

KEY	DESCRIPTION
Directional Arrows	The up, down, left, and right arrow keys move the pointer on the screen.
Applications 	The Applications key displays a shortcut menu in certain software programs. Pressing this key is equivalent to clicking the right mouse button.
Windows 	The key with the Microsoft® Windows® logo, displays the Start menu. Pressing this key is equivalent to clicking Start on the taskbar.

INDICATORS	FUNCTION
Num Lock	The Num Lock indicator lights when the numeric keypad is activated. When the indicator is off, the directional arrow and correction keys on the numeric keypad area are active.
Caps Lock	The Caps Lock indicator lights to advise you that the keyboard is set to type letters in uppercase. When the indicator is off, the letters appear in lower case as you type.
Scroll Lock	The Scroll Lock indicator lights to advise you that your screen's scrolling pattern has changed. When the indicator is off, the screen scrolls normally. This function is not available with all software programs.

 
To set up a wireless keyboard


Insert two AA batteries (supplied) into the wireless keyboard as shown. You can check your keyboard's battery power level by clicking  (wireless keyboard icon), located in the Windows® taskbar notification area. A warning message may also appear on the screen when the keyboard's battery power becomes low.



Do not mix old (used) and new batteries when replacing batteries in the wireless keyboard. Always use the same type and manufacture of battery. Using incompatible batteries or mixing used/new batteries can damage the keyboard.

Inserting batteries into the wireless keyboard

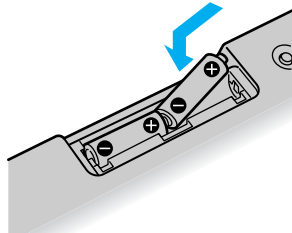

 If your wireless keyboard does not operate properly, the batteries may need to be replaced. When your wireless keyboard is not being used for extended periods of time, remove the batteries to avoid possible damage from battery leakage.

FCC information

Model No.: VGP-WKB3US (wireless keyboards), and VGP-WRC3 (wireless transceiver)

These devices comply with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.