
NOBUX

**L1810
WIND**

NOBUX, LLC
8600 NW SOUTH RIVER DR #103 MIAMI, FLORIDA 33166

User Guide

1 Welcome

Thank you for purchasing the GAL_S119. Your GAL_S119 is packaged with the following state of the art features:

- VGA Camera
- 2.8 Inch screen
- Audio Player
- FM Radio
- King Movie
- Video and FM Recording
- Dual SIM (GSM + GSM)
- T-Flash Card support (up to 8 GB)
- Indonesian Language support
- Touch Screen and Button support

Important

1. Please read the contents of this manual to fully utilize the features of this phone.
2. Please read the Guidelines section provided with this Reference guide.

Table of Contents

1	Welcome	2
2	Know Your Phone.....	7
2.1	Keys and Parts	7
2.2	Insert SIM Card	7
2.2	Insert SIM Card	7
2.3	Insert Memory Card	7
3	Basic Operations	8
3.1	Switch Phone ON/OFF	8
3.2	Unlock the phone	8
3.3	Make a call	8
3.4	Choose Profiles	9
4	Notable Features.....	9
4.1	Secure your Phone	9
4.2	Blacklist and Whitelist	10
4.3	Manage Your Files	10
4.4	Tools	10
4.5	Connect to Internet	11
5	Contacts Features	11
5.1	Add New Contact	12
5.2	Send SMS or MMS	12
5.3	Call a Contact	12
5.4	Delete Contacts	12
5.5	Delete multiple contacts	12
5.6	Move contacts	12

5.7	Add to blacklist	13
5.8	Import/Export Contacts	13
5.9	Send vCard	13
5.10	Same number delete	13
5.11	Others	13
5.12	Most used	14
5.13	Groups	14
6	Message	14
6.1	Write message	14
6.2	Use message Templates	15
6.3	Voice mail server	15
6.4	Settings	15
6.5	Delete all	15
6.6	Message capacity	16
7	Call Logs.....	16
7.1	View Call Logs	16
8	Internet	16
8.1	Internet	16
9	G-Space	17
9.1	G-Space	17
10	Java application	17
10.1	Java application	17
11	Facebook	18
11.1	Facebook	18
12	Yahoo message	18
12.1	Yahoo message	18

13	Twitter	18
13.1	Twitter	18
14	Settings	19
15	Camera	19
15.1	Camera	19
16	Multimedia	20
16.1	DV	20
16.2	King Movie	20
16.3	Audio	20
16.4	Video	21
17	FM radio	21
17.1	FM radio	21
18	Image	22
18.1	Image	22
19	Ebook	22
19.1	Ebook	22
20	Recorder	23
20.1	Recorder	23
21	Bluetooth	23
22	Calendar	23
22.1	Calendar	23
23	Alarm	24
23.1	Alarm	24
24	World clock	24
24.1	World clock	24
25	Calculator	24

User Guide

25.1	Calculator	24
26	Currency	25
26.1	Currency	25
27	Games	25
27.1	Games	25
28	STK	25
28.1	STK	25
29	Health and Safety Precautions	26
30	Taking Care of Your Device	28

2 Know Your Phone

2.1 Keys and Parts

Important keys and parts are listed here for you to use the phone better.

- | | | | |
|----------------------|-----------------|-------------|-------------|
| 1.Speaker | 2.Screen | 3.Left key | 4.Right key |
| 5.SIM1 dial key | 6.SIM2 dial key | 7.Music key | 8.End key |
| 9.Navigation key | 10.OK key | 11.Keypad | 12.Camera |
| 13.Hands-free socket | 14.USB socket | 15.Receiver | |

2.2 Insert SIM Card

The CROSS X350 is a Dual SIM mobile phone allowing you to use two SIM Cards.

1. Switch off the mobile phone and remove the rear cover and battery.

2.2 Insert SIM Card

1. Insert the SIM card correctly in the SIM slot(s).
2. Finally, insert the battery and replace the rear cover of the mobile phone.

2.3 Insert Memory Card

1. Switch off the phone and remove the rear cover and the battery.
2. Insert the memory card into the slot.

3. Finally, insert the battery and the rear cover of the mobile phone.

Note: Use only compatible memory cards approved by CROSS X350. Incompatible cards may damage the slot or corrupt the data stored in the card.

3 Basic Operations

3.1 Switch Phone ON/OFF

To switch ON/OFF your phone, press and hold the **End key** for a few seconds.

3.2 Unlock the phone

If you do not use the phone for a while, the screen is replaced with a locked screen.

1. Press any key to activate the screen.
2. Press **Left** key, and then press * key, or long press the lock icon.

3.3 Make a call

You can make a call in the following ways:

- Enter the desired number in standby mode and press the **Call key** to make the call.

- Go to **Menu > Contacts** and then select and dial the desired number.
- Just press the **Call key** to dial the contacts listed in Call History.
- You can also dial a contact from the messages.

3.4 Choose Profiles

Menu > Profiles

You can choose your profile such as Silent mode, Normal, Meeting, Outdoor, earphone and so on.

4 Notable Features

4.1 Secure your Phone

Menu > Settings > Security > Phone Locked

Let you lock/unlock your phone via a security password which you can change anytime.

The default security code to unlock the phone is **0000**.

Note: After you activate the phone lock, you would be asked for a password when you power on your phone next time.

4.2 Blacklist and Whitelist

Menu > Settings > Security > Blacklist

Blacklist undesired SMS senders and caller so that you do not receive SMS and calling from them.

Menu > Settings > Security > Whitelist

When you check the Whitelist settings, that only the list in the Whitelist can call and send messages.

4.3 Manage Your Files

Menu > My Files

You can view and manage your files available in the phone or memory card from the gallery. You can rename, view details, move, delete files and so on via the File manager.

4.4 Tools

Menu > Tools

Your phone provides you with the capability to organize your routines, tasks and much more with the following:

- **Stopwatch:** The time time, respectively.
- **Timer:** The countdown function
- **Unit conversion:** Conversion of unit length, and weight

- **Local search:** Quick search phone files
- **Memo:** Record daily life things
- **Flashlight:** The use of a flashlight

4.5 Connect to Internet

Menu > Settings>Connections

You can connect to the Internet via GPRS connection.

To identify network data automatically based on your SIM card.

5 Contacts Features

Your phonebook stores all your saved contacts for anytime use. Your phonebook data can be stored in your SIM card or your phone memory. You can manage your contacts from here.

Menu > Contacts

5.1 Add New Contact

Menu > Contacts > Left Key > New

5.2 Send SMS or MMS

Menu > Contacts > Left Key > Write message

5.3 Call a Contact

Menu > Contacts > Left Key > Call > Voice call

Allow you to make a call to the contact you are viewing. Or you can just highlight a number and press the Call key.

5.4 Delete Contacts

Menu > Contacts > Left Key > Delete

In the Contacts list, select the entry you want to delete.

5.5 Delete multiple contacts

Menu > Contacts > Left Key > Delete multiple

In the Contacts list, select the entry you want to delete.

5.6 Move contacts

Menu > Contacts > Left Key > Move

In the Contacts list, select the entry you want to move to SIM or phone.

5.7 Add to blacklist

Menu > Contacts > Left Key > Add to blacklist

Allow you to black list selected numbers. In this case the contact will be blocked from calling you up.

5.8 Import/Export Contacts

Menu > Contacts > Left Key > Import/Export/Copy

You can Import, Export or Copy contacts entries stored in the SIM card to the phone memory and vice-versa.

5.9 Send vCard

Menu > Contacts > Left Key > Send vCard

Allow you to send vCard to other numbers and export vCard.

5.10 Same number delete

Menu > Contacts > Left Key > Same number delete

Delete the phone number of contact person

5.11 Others

Speed dial

Menu > Contacts > Left Key > Others > Speed dial

Set speed dial and view memory status.

Memory Status

Menu > Contacts > Left Key >Others> Memory status

Check the memory status of SIM, and Phone.

5.12 Most used

Menu> Contacts > Right Key >Most used

View the contacts that most used.

5.13 Groups

Menu> Contacts > Right Key >Groups

Press the Left/Right navigation key to access the Group tab. Set up a list of numbers with similar preferences such as ringtone, profile etc.

6 Message

6.1 Write message

Menu > Messages > New chat

You can compose and send SMS and MMS. Pressing the **Left Key** during/after composing the message gives you a host of messaging features.

6.2 Use message Templates

Menu > Messages > Templates

Enter into preset message templates and use them. These preset templates can save you time if the theme of your message is the same as those existing in the template.

6.3 Voice mail server

Menu > Messages > Voice mail server

You can activate voicemail service to redirect your incoming calls (based on your call settings) to a voicemail server and retrieve them later via SMS alerts.

To divert incoming calls to a voicemail server, go to Settings>Phone tab > Call Divert> Voice> (choose the desired call divert condition)> Activate> Phone Number/Voicemail Number.

6.4 Settings

Menu > Messages > Options>Settings

You can set your desired parameters for SMS, MMS, push message and Others.

6.5 Delete all

You can choose all messages in the Inbox or others to delete.

6.6 Message capacity

Menu > Messages > Options > Message capacity

7 Call Logs

7.1 View Call Logs

Menu > Call logs

Tip: Directly access the call logs of by pressing the **Call** key in idle mode.

The Call log lists the calls you have recently dialed, received, missed for SIM1 and SIM 2.

Press the Left/right navigation keys to access various call logs and work on the call logs.

View the memory status of your SMS and MMS.

8 Internet

8.1 Internet

Menu > Internet

To access this menu, enter the Main Menu in the standby mode and then select Internet. You can use the network-related services with this function.

9 G-Space

9.1 G-Space

Menu > G-Space

Enter this menu, can access MSN, Nimbuzz, Ebuddy, Mxit and Skybuddy

10 Java application

10.1 Java application

Menu > Java application

Enter this menu, can access Opera Mini and Balloon Headed Boy games

11 Facebook

11.1 Facebook

Menu > Facebook

Enter this menu, can access Facebook

12 Yahoo message

12.1 Yahoo message

Menu > Yahoo message

Enter this menu, can access **Yahoo message**

13 Twitter

13.1 Twitter

Menu > Twitter

Enter this menu, can access **Twitter**

14 Settings

Choose various preferences to customize your handset according to your requirements. You can set:

- Phone Settings include Restore factory setting
- Display
- Security
- Call settings
- Connections

15 Camera

15.1 Camera

Menu > Camera

Press the centre key in camera mode to choose various settings

Shortcut keys: Press the number keys on the phone's keypad to choose various settings.

16 Multimedia

16.1 DV

Menu > Multimedia > DV

Press the **OK** Key to start recording.

- You can press **Options** switch to **Camera** and vice versa.
- You can also press **Options** key to choose memory
- Press Left key to choose various settings

Shortcut keys: Press the number keys as shortcuts on the phone's keypad to choose various video settings.

16.2 King Movie

Menu > Multimedia > King Movie

Your phone comes with pre-loaded movies for you to enjoy. Be ready to be entertained to your satisfaction.

16.3 Audio

Menu > Multimedia > Audio

The phone comes with an inbuilt audio player that plays all your favorite

songs stored in the phone memory or memory card.

- While in audio mode, press the Left key to choose various audio options
- **Adjust Volume:** Press Up and Down keys to adjust volume.

16.4 Video

Menu > Multimedia > Video

Let you play videos stored in your phone or memory card.

Press 2 key while playing a video to change the display mode.

17 FM radio

17.1 FM radio

Menu > FM radio

Your phone comes with an FM radio to let you listen to FM channels.

- Go to Options> Search Channels> Auto Search to fill up the channels.
- Press the number keys on your keypad in accordance to the channel list.

- Press OK key to start/stop the radio.
- Press the Up or Down key to increase/decrease the volume.
- Press the Left key for various radio options.

18 Image

18.1 Image

Menu >Image

Let you to view your saved images. You can also send the images via MMS or Bluetooth or use it as contact icon or wallpaper, etc.

19 Ebook

19.1 Ebook

Menu >Ebook

Enter the function menu, can download good books to read

20 Recorder

20.1 Recorder

Menu > Recorder

You can record surrounding sounds using this feature.

21 Bluetooth

- 21.1 **Bluetooth:** Use Bluetooth to exchange information with other Bluetooth devices. Select Bluetooth to have a host of options for scanning for and using Bluetooth feature.

22 Calendar

22.1 Calendar

Menu >Calendar

To access this menu, enter the Main Menu in the standby mode and then select Calendar. Lets you view the calendar and schedule tasks on selected dates.

23 Alarm

23.1 Alarm

Menu > Alarm

Lets you schedule alarms with the required settings.

24 World clock

24.1 World clock

Menu > Clock> World clock

Lets you view time across the major cities of the world.

25 Calculator

25.1 Calculator

Menu > Calculator

Access this menu, the calculator will be shown on the screen.You can use the numbers and operators to calculate.

26 Currency

26.1 Currency

Menu > Currency

This function can carries on the exchange rate.

27 Games

27.1 Games

Menu > Games

You can play Sokoban, Snake and Tetris in your free time.

28 STK

28.1 STK

Menu > STK

It offers some extra function depend on your SIM cards.

29 Health and Safety Precautions

Please read these simple guidelines. Not following them may be dangerous or illegal.

SAR Compliance

- Your phone is designed not to exceed the limits of emission of radio waves recommended by international guidelines.
- SAR (specific absorption rate) is the measurement of body-absorbed RF quantity when the phone is in use. SAR value is ascertained according to the highest RF level generated during laboratory tests.
- The SAR value of the phone may depend on factors such as proximity to the network tower, use of accessories or other accessories.
- The highest SAR value of the device at the head and body are 0.556 W/kg and 0.796 W/kg respectively averaged over 1 gm of human tissue.

SAR Recommendations

- Use a wireless hands-free system (headphone, headset) with a low power Bluetooth emitter.
- Please keep your calls short and use SMS whenever more convenient. This advice applies especially to children, adolescents and pregnant women

- Prefer to use your cell phone when the signal quality is good.
- People having active medical implants should preferably keep the cell phone at least 15 cm away from the implant.
- Maintain a preferable distance of 15 mm from the device.

Safe Driving

- Do not use the phone while driving. When you have to use the phone, please use the personal hands-free kit.
- Please do not put the phone onto any passenger seat or any place from which it may fall down in case of vehicular collision or emergency braking.

During Flight

- Flight is influenced by interference caused by the phone. It is illegal to use a phone on the airplane. Please turn off your phone during a flight.

In Hospitals

- Your Phone's radio waves may interfere with the functioning of inadequately shielded medical devices. Consult a physician or the manufacturer of the medical device to determine whether they are adequately shielded from external Radio Frequency. Switch off your device when regulations posted instruct you to do so.
- To avoid potential interference with implanted medical devices such as a pacemaker or cardioverter defibrillator:

- Always keep your phone at least 15.3 centimeters (6 inches) from the medical device.
- Do not carry the wireless device in a breast pocket.
- Turn off the phone if there is any reason to suspect that interference is taking place.
- Follow the manufacturer directions for the implanted medical device.
- If you have any questions about using your wireless device with an implanted medical device, consult your health care provider.

Unsafe Areas

- Please turn off your phone when you are close to a gas station or in the vicinity of any place where fuel and chemical preparations, or any other dangerous goods are stored.

30 Taking Care of Your Device

Your device is a product of superior design and craftsmanship and should be handled with care: The following suggestions will help you protect your phone:

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will rust electronic circuits. If your device does get wet, remove the battery without turning on the

device, wipe it with a dry cloth and take it to the service center.

- Do not store the device in high or cold temperature. High temperatures can shorten the life of electronic devices and damage batteries.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not attempt to open the device other than as instructed in this guide. Repairing this phone by yourself other than our authorized service agents/centers goes against the warranty rules.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not store your device near magnetic fields or allow your device to come in contact with magnetic fields for extended period of time.

Battery Recommendations:

- Please put the battery in a cool and well-ventilated place out of direct sunlight. We recommend you to charge the battery at room temperature range.
- Batteries have life cycles. If the time that the battery powers equipment becomes much shorter than usual, the battery life is at an

end. Replace the battery with a new battery of the same make and specification.

- Do not discard the battery with household trash. Please dispose of used battery according to your local environmental laws and guidelines.
- Use manufacturer approved batteries, chargers, accessories and supplies. G-TIDE-S119 will not be held responsible for user's safety when using unapproved accessories or supplies.

Recycle Your Handset



The WEEE logo (shown at the left) appears on the product (battery, handset, and charger) to indicate that this product must not be disposed off or dumped with your other household wastes. You are liable to dispose of all your electronic or electrical waste equipment by relocating over to the specified collection point for recycling, of such hazardous waste.

Specified collection points for recycling of such hazardous waste. Collection and proper recovery of your electronic waste equipments at the time of disposal will allow us to help preserve the environment. Recycling of the electronic waste equipment will ensure safety of human health and environment. For more information on best practices for disposal of electronic and electrical waste, please visit to our web site: www.micromaxinfo.com/weee.php.

Disclaimers

1. The colors and specifications shown/mentioned in the user manual may differ from the actual product. Images shown are for representation purpose only. Other product logos and company names mentioned herein may be trademarks or trade names of their respective owners.
2. G-TIDE-S119 keeps the right to make modifications to any of the content in this user guide without public announcement in advance. The content of this manual may vary from the actual content displayed in the mobile phone. In such a case, the latter shall govern.

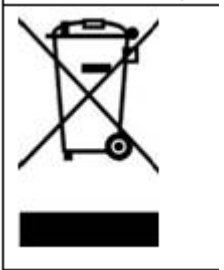
Copyrights

All rights reserved. Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of G-TIDE-S119 is strictly prohibited.

USB with load 200Ma

- The socket-outlet shall be installed near the equipment and shall be easily accessible.
-

Correct Disposal of this product

	<p>This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.</p>
---	---

The plug portion of the AC/DC adaptor is used as disconnect device. Therefore, the appliance should be placed near the socket outlet and easily accessible

Photo for reference only

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference

Changes or modifications not expressly approved by the party responsible for compliance

could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is

encouraged to try to correct the interference by one or more of the following

measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different

from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

Specific Absorption Rate (SAR) information:

This Mobile Phone meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: WIND (FCC ID: 2AEHF-WIND) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.153W/kg and when properly worn on the body is 0.234W/kg. This device was tested for typical body-worn operations with the back of the handset kept 10mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 10mm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of **10mm** must be maintained between the user's body and the handset, including

the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.