



**Cautions**

- Keep the speaker away from dirty environment; Damp, dusty, reeky and so on.
- Keep the speaker away from water and other liquid. If it occurs, please use a soft cloth to dry it.
- Don't use water or chemical liquid to clean it, please use a soft cloth to clean the surface of the speakers.
- Keep this product away from high temperature, not allowed roasting, baking or drying.
- Be sure the voltage for power is 3.5V
- Keep this product away from big or large external force.
- Keep the speaker away from strong magnetic.
- Don't open and repair the speaker by yourself.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

- Micro USB port:**  -2-
1. Recharge the built-in battery.
  2. Transfer data from PC to TF card via USB cable.
  3. AUX port instead of 3.5mm port.

**TF card slot:** 

Music format: MP3, MP4

- Recharge Indicator:** 
1. Charging red
  2. TF charged off

- Working Indicator:** 
- \* LED status mode
  - Stand by: turn left
  - Connected: turn left stop
  - \* TF mode
  - When searching card: turn left
  - Found: turn left stop

3. During talking on the phone, press it once to hang up the call
  4. During talking on the phone, press it for 2 seconds to hold the call
- **TF card situation**
    1. Press it once again and again, change between play and pause
    2. Press it more than 2 seconds to change folder
  - **AUX situation**
    1. Press it once again and again, change between mute and play
    2. Press it more than 2 seconds, invalid
  - [▶] [◀] **Preview/Next**
    - **Bluetooth music mode**
      1. Press once to change the music list or next one
      2. Press it more than 2 seconds to increase or decrease the volume
    - **Answer call in Bluetooth mode**
      1. Press it once to accept the call
      2. Press it more than 2 seconds to reject the call
      3. your music will continue after the call ended
  - **TF Card mode**
    1. Press it once to change the music list or next one
    2. Press it more than 2 seconds to increase or decrease the volume
  - **AUX mode**
    1. Press it once, invalid
    2. Press it more than 2 seconds to increase or decrease the volume

### Function operation

This speaker has 3 different modes:Bluetooth/TF card/AUX. Press "M" to skip among 3 modes.Each button have different under different mode

#### Switch

1. Press it for 2 seconds to turn on/off the speaker
  2. Press it for 2 seconds to ask among functions of Bluetooth, TF card and AUX
- Remark: If there is no TF card/AUX card in the speaker, press it once no function

#### Play/Pause/Folder Skip

##### • Card by situation

1. Press it once to play/pause
2. Press it for 2 seconds to function


##### • Bluetooth music mode

- Bluetooth connecting password:0000(when needed)**
1. Press it once to play/pause
  2. Press it for 2 seconds to function

##### • Answer call in Bluetooth mode

1. Press it once to answer the phone
2. Press it for 2 seconds to refuse the phone

### Product Structure and Functon

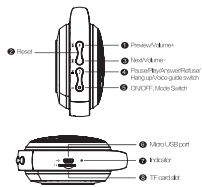

### Specification

Category	Item	Description
Bluetooth	Standard	Bluetooth 3.0
	Frequency	2.4G-2.48 GHz
	Range	30M
Audio	Power	USB, AUX, AV/BC
	Speaker Unit	40mm
	Rated Power	3W
	Response Frequency	100Hz - 20KHz
	Impedance	16Ω
Music	FM	4-Channel
	THD	THD < 1%
Music	File Format	MP3
Storage Device	Type	TF (Micro SD) card
	Data Transfer	Via USB card
Power	Type	Li-Ion battery
	Rated Voltage	3.7V
Interface	AUX Input	Micro USB
	MP Input	Micro USB
Spec	DC- IN Input	Micro USB
	Cell Size	30x30x108mm
Spec	Speaker Size	90x90x41mm
	Speaker Weight	110g

Package Including



Speaker: 1 pc



Manual: 1 pc



Silicon band: 1pc

 


Step hook: 1pc



USB cable: 1 pc

Remark: if you want to use the hook in outdoor, please use the silicon band to connect the hook with speaker.



AUX cable: 1 pc

