

FIRST AUDIO MANUFACTURING LTD. 飞达音响专业器材有限公司

ARTWORK APPROVAL FORM / 美术稿确认表

Part No. / 编号: IB-2740 Job No./ 工作表编号: FA-11-0302

Part Name / 品名: Instruction Book ModelNo./型号: NH-6000

 
Brand Name / 名牌: NYNE Date / 日期: 2012-03-15

Content / 内容:

1.A5纸双面印刷

2. 白底黑字

3. 80g书写纸

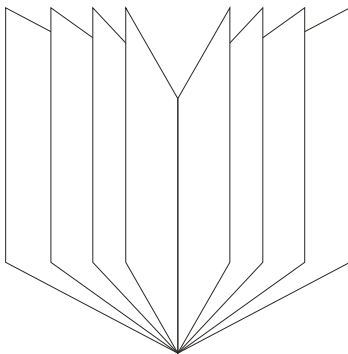


Remarks / 备注:

Composed By / 制表人: 温彩霞 Confirmed By / 确认人: \_\_\_\_\_ Date / 日期: \_\_\_\_\_

# n4ne
 
## **User Manual**

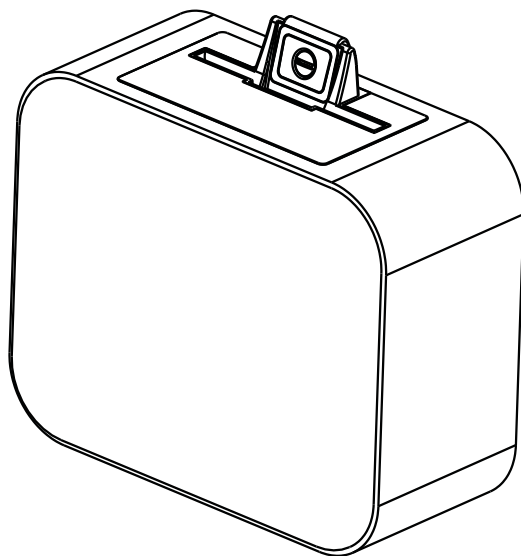








### **NH-6000**

2.0 Speaker for iPod/iPhone/iPad

# CONTENTS

Important Safety instructions-----	1
Features-----	3
Functional illustration-----	4
Remote control-----	5
Remote control setup-----	6
Connection-----	7
Operation-----	8
Specifications-----	13

# IMPORTANT SAFETY INSTRUCTIONS

 <p><b>CAUTION</b> RISK OF ELECTRIC SHOCK DO NOT OPEN</p> 	<p><b>CAUTION:</b> To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified personnel.</p>
 <p><b>Précaution</b> Risque du choc électrique Ne jamais ouvrir</p> 	<p><b>AVERTISSEMENT:</b> Pour réduire le risque de choc électrique, ne jamais exposer cet appareil sous la pluie ou dans un environnement humide. Aucune pièce concernant l'utilisateur n'est à l'intérieur. Pour la réparation, référez-vous à un personnel de service qualifié.</p>
<p><b>CAUTION:</b> Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.</p>	
<p><b>ATTENTION:</b> Risque d'explosion si la pile n'est pas insérée correctement. Remplacez la pile par une pile identique ou de type équivalent.</p>	
	<p>The lightning flash with arrowhead symbol inside an equilateral triangle is intended to alert the user to the presence of uninsulated "hazardous voltage" within the product's enclosure, which may be of sufficient magnitude to induce a risk of electric shock to persons.</p>
	<p>The exclamation mark inside an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.</p>
	<p>This symbol means that this unit is double insulated. An earth or ground Connection is not required.</p>

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other.  
A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

# IMPORTANT SAFETY INSTRUCTIONS

11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus.  
When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
16. The battery shall not be exposed to excessive heat such as sunshine, fire or the like.
17. The MAINS plug is used as the disconnect device, which shall remain readily operable.
18. Warning: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture .



Portable Cart Warning

iPod is a trademark of Apple Computer, Inc., registered in the U.S. and align other countries.

## FCC part 15.21

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## FCC part 15.105

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

 
If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.


# FEATURES

- ◆ iPod/iPad/iPhone compatible.
- ◆ Bluetooth
- ◆ AUX input to connect to external devices.
- ◆ Video out for iPod.
- ◆ LED display and light switch.
- ◆ Integrative cabinet design.
- ◆ Easy to use Remote Control.
- ◆ Touch screen control.
- ◆ Alarm clock.


# FUNCTIONAL ILLUSTRATION

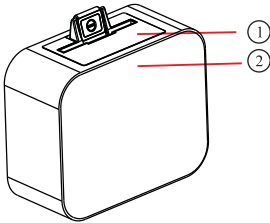

 - 1.iPod input
- 2.IR receiver

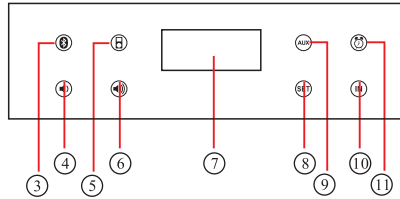


 - 3.Bluetooth
- 4.Vol-
- 5.iPod indicator
- 6.Vol+
- 7.LED display
- 8.Set
- 9.AUX indicator
- 10.Input selection
- 11.Alarm indicator

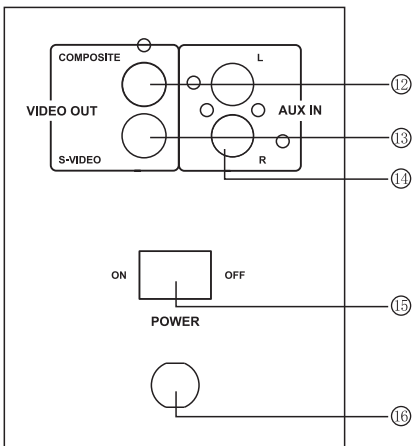

- 12. iPod composite video out
- 13. iPod S-Video out
- 14. AUX input
- 15. Power switch
- 16. AC input

# REMOTE CONTROL

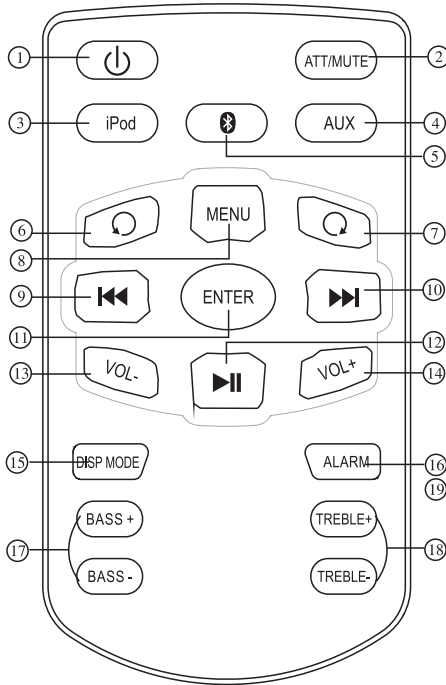 


- |                                |                              |
|--------------------------------|------------------------------|
| 1. Standby                     | 10. Next track/ Fast forward |
| 2. Mute/VOL decrease           | 11. Enter                    |
| 3. iPod input selection        | 12. iPod play/ pause         |
| 4. Aux Audio input             | 13. Master Vol- adjust       |
| 5. Bluetooth                   | 14. Master Vol+ adjust       |
| 6. iPod menu up                | 15. Display Functions        |
| 7. iPod menu down              | 16. Alarm Set                |
| 8. iPod menu                   | 17. Bass adjust              |
| 9. Previous track/ Fast rewind | 18. Treble Channel Up        |



# REMOTE CONTROL SETUP
 
## Battery Installation

1. Release the side latch and pull out the battery holder
2. Install only a 3 volts Cr2025 battery cell and place battery polarity + respectively to the + sign of the holder.
3. Replace the battery holder.

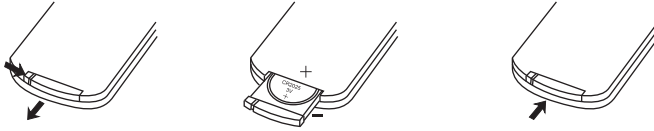

## Notes:

 
1. Use only the size and type of battery specified.
2. Be sure to follow the correct polarity when installing the battery as indicated in the battery compartment. A reversed battery may cause damage to the device.
3. Do not drop or step on the remote control, this may cause inner damage to the device.
4. If not using the remote control for a long period of time, remove the battery to avoid possible damage due to battery leakage.

Remote control effective range:


Aim the remote control at the unit IR receiver. The distance to the unit should be less than 5 meters and within 30° .

The remote control may be less effective if:

1. Unit is placed under intense ambient lighting.
2. There are obstacles between the remote control and IR receiver.
3. Other remote controls are operated at the same time.
4. Low battery power.

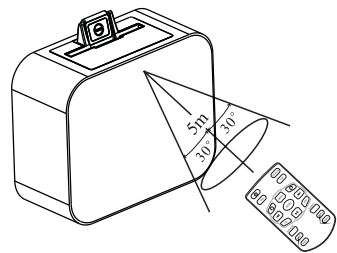

# CONNECTION

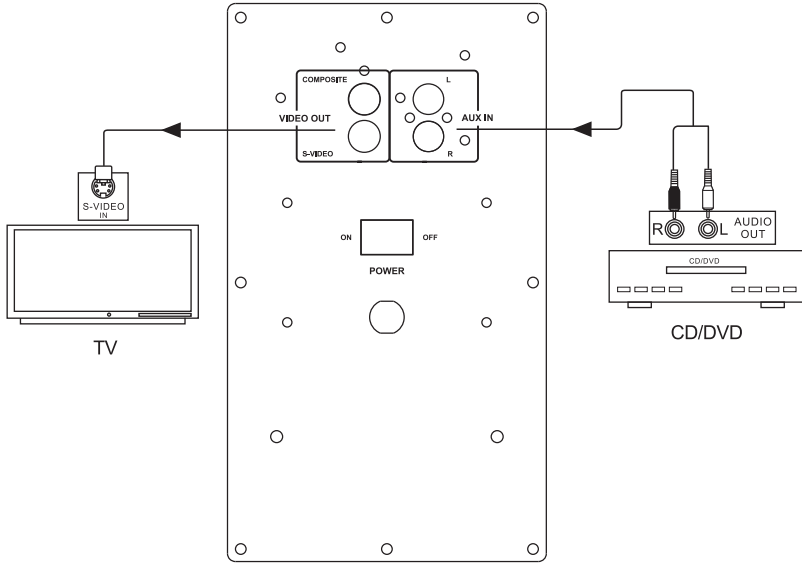 

\*\* Please note - Connection to the TV or CD/DVD is optional.

# OPERATION

## START

---



LED

Flick the toggle switch on the rear of the unit to the ON position. The display window will reveal a clock.

Press the red standby button on the remote control.

The buttons on the display window will illuminate.

## STANDBY

---



LED

To turn the unit back into Standby mode, press the red Standby button on the remote. Display backlight will disappear.

Press STANDBY button once again, the unit returns to the normal operation mode, and LED displays the current input source.

Alternately, you can touch the + and - buttons simultaneously on the touch panel to set to standby mode.

## MUTE

---



LED

By pressing the MUTE button on the remote control, the volume of the unit will decrease by 5db, LED does not display the MUTE icon.

By pressing the MUTE button a second time, the unit will go into MUTE mode and LED window will display MUTE.

By pressing it for a third time, MUTE mode is cancelled, and MUTE icon on the LED display will disappear.

## INPUT

 
---



LED

The IN button on the front panel of the unit will navigate through the relevant options which include the options highlighted below in the flow chart.

Alternatively use the remote control by pressing the iPod or AUX buttons.



# OPERATION

## VOLUME

---



LED

Touch the VOL+/- button on front panel or press VOL +/- button on remote control to adjust the master volume.

Press VOL+ to increase or press VOL- to decrease the volume.

LED displays the volume level accordingly.

The maximum volume is 40dB, the minimum value is 0dB.

## TREBLE

---



LED

Press the TREBLE +/- on remote control to adjust the treble.

The adjusting range is  $\pm 14$ dB.

## BASS

---



LED

Press the BASS +/- on the remote control to adjust the BASS of the sub woofer. The adjusting range is  $\pm 14$ dB.

## TIME SETUP

---



LED

1. Press the ALARM SET button on the remote control.

TIME will be displayed. Press the ENTER button.



LED

2. The hour digits will flash. Press the  $\lll/\ggg$  buttons to adjust the hour. Press ENTER to lock the hour digits in.



LED

3. Next the minutes digits will flash. Press the  $\lll/\ggg$  buttons to adjust the minutes. Press ENTER to lock the digits in.

Please note that this clock is a 24 hour clock.



LED

 
Touch +/- on the front panel of the unit or press the  $\lll/\ggg$  on remote control to adjust the minutes.

# OPERATION


## SLEEP




Press the ALARM.S key twice. The Sleep indicator icon will flash. Press ENTER to confirm. Press the ◀◀ or ▶▶ to increase and decrease sleep intervals as shown below.



## ALARM

 

 1. Press the ALARM SET button on the remote control THRICE. ALM icon will flicker. Press the ENTER button to confirm



2. ON will flicker on the display window. Press the ENTER button to confirm.



3. To turn the alarm settings off, follow the steps above and press the ▶▶ button to switch from ON to OFF.



 
4. Once ON is confirmed, the hour digits will flicker on the screen. Use the ◀◀ or ▶▶ to select the hour of choice (please note that clock is a 24 hour clock). Confirm hour selection by pressing the ENTER button.



5. The back 2 digits ( minute selection) will flicker. Use the ◀◀ or ▶▶ to select the minutes of choice. Press the ENTER button to confirm.



6. Once minute selection has been confirmed, the system will then prompt two alarm options. These are as follows:



Use the ◀◀ or ▶▶ to scroll through the options and press ENTER to confirm.

# OPERATION

7. During the operation of alarm settings, if the interval time exceeds 6 seconds, the current setting will be cancelled.
8. To halt the alarm when alarm rings
  - a. Press standby button on the remote control to cancel the alarm directly.
  - b. Touch any button on the front panel or remote control twice to cancel alarm.

\* Press the standby key once to turn the unit on, once alarm has been silenced.

## 9. SNOOZE

Touch any button on the front panel or press any button except standby button on the remote control once, the alarm stops ringing and the unit enters into SNOOZE mode. Both SNOOZE and ALARM icons blink when the unit is in SNOOZE mode, the alarm stops ringing for 9 minutes, then continues to beep as a reminder.

---

 
## DISPLAY MODE

Press the Display Mode button to turn on off the LED display in standby mode.

---

## iPod/iPhone/iPad CONNECTION

1. Please adjust the iPod adjustment knob accordingly.

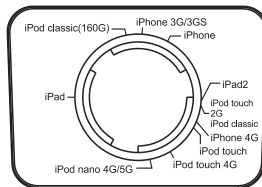

Insert the iPod/iPhone/iPad once adjustment is made.  
Ensure that the unit is set to iPod mode by pressing the iPod button on the remote control.


# OPERATION
 
## 2.Video output selection(for iPod/iPhone/iPad only)

When playing video content from ipod, press the "iPod" on the remote-control for three seconds,you can toggle the video output mode-video display on local screen of iPod/iPhone/iPad (V TV) or on TV which connected to this unit( V IP)

## 3. iPod/iPhone/iPad control



iPod control button on the remote control works simultaneously as the iPod's click wheel, for more details, please refer to iPod instruction.



## BLUETOOTH FUNCTION

---

### Control by remote control:

1. Press the “” button in remote control, and speaker will turn to Bluetooth mode. At this moment, it can connect Bluetooth device with speaker.
2. Pressing the “” button for a bit long time, speaker will turn to searching mode (search other Bluetooth devices), and the indicating light will twinkle with SCAN showing in screen.
3. When connecting successfully, please turn on music player function of Bluetooth device, and the speaker will play music from Bluetooth device.

### Control by touching panel:

1. Press “IN”of touch panel to change the running style ,and turn into Bluetooth mode.
2. Touching “IN”and“SET” together at same time, and the speaker will turn to searching mode (search other devices). At this moment, the indicating light will twinkle with “SCAN” showing in screen.
3. When connecting successfully, please turn on music player function of Bluetooth device, and the speaker will play music from Bluetooth device.

# SPECIFICATION

VOLTAGE RATING: AC110/115/120V 60Hz; AC220/230/240V 50Hz

(Depends on distribution area, please refer to back panel of this unit)

POWER CONSUMPTION: 80W

POWER CONSUMPTION STANDBY:  $\leq 1W$

OUTPUT POWER :

L/R CH(Nominal): 12W+12W (THD = 10%)

FREQUENCY RESPONSE L/R CH (60Hz-20KHz at +1 / -2dB)

SENSITIVITY L/R:650mV

OVERLOAD SOURCE e.m.f.  $\geq 2V$

SEPARATION  $\geq 55dB$

S/N  $\geq 70dB$

REMOTE CONTROL  $\geq 5m/30^\circ$

DIMENSION (with base plate) 390 (W) $\times$  182(D) $\times$  320(H)mm



n4ne