
# nyne Aqua


- GB für einen portablen Bluetooth-Lautsprecher
- Rövidített használati útmutató Pārnēsājams Bluetooth skaļrunis
- Stručná příručka uživatele Lühike kasutusjuhend
- es verkürztes Benutzerhandbuch
- Hordozható Bluetooth hangszóró Saīsināta Lietotāja Rokasgrāmata


- Garsiakalbio vartotojo vadovas
  Przenośnego głośnika
  Bluetooth
- RO Difuzor portabil Bluetooth Prenosného reproduktoraBluetooth
- Skrócony Przewodnik Ghid de referință rapidă
- Sk Stručná príručka užívateľa

nyne.com


**C** € 2200

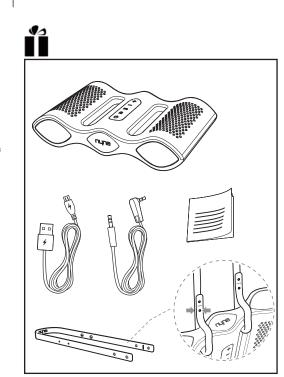

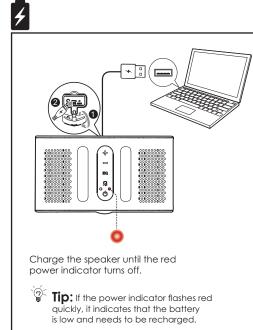

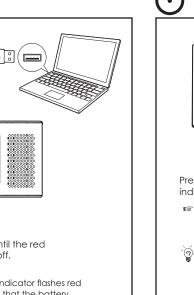



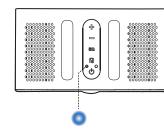


Press and hold 🖰 until the Bluetooth indicator flashes blue.

For first-time use, the Bluetooth indicator flashes blue quickly, indicating that the speaker is in pairing mode.

Tip: When you power on the speaker again after Bluetooth setup, the speaker will search for the paired device and the Bluetooth indicator will flash slowly. If no paired device is found, it will flash quickly and the speaker will enter pairing mode.



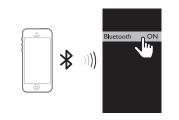



1 Make sure that the speaker is in pairing mode. 2 Enable Bluetooth on your device to

be paired with the speaker.

3 Select 'NYNE AQUA' from the available devices (enter the password '0000' if necessary) to start pairing and connection with the speaker.

4 After successful connection, the Bluetooth indicator turns solid blue and the speaker beeps.



Tip: This speaker supports automatic connection with a previously paired device after power-off and power-on again.

You can press and hold 🖬 for more than 2 seconds to enter manual pairing mode. In this way, you can pair the speaker with a new Bluetooth device.

You can press and hold both +/- for more than 5 seconds to clear all paired Bluetooth devices.


This speaker is compatible with the voice assistant on your smart device.

NYNE Aqua\_Quick User Guide\_20140623.indd 1-6 2014/6/23 20:10:46 QUG-Aqua-06-23-2014-V1.0

.bevreserved. Nyne Multimedia Inc. property of their respective owners. All registered and unregistered trademarks are



8 17/1

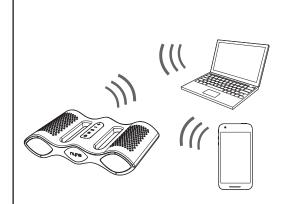

Play music on your device paired and connected with the speaker.

Note: This speaker supports automatic connection with a previously paired device after power-off and power-on again.

#### During music play:

- Press +/- to adjust volume.
- Press and hold +/- to skip to the previous or next song.
- Press 🕠 to pause or resume music play.
- Press E@ to select your favorite preset sound effect: FLAT, ROCK, POP or JAZZ.
- Press and hold EQ for more than 3 seconds to return to FLAT at any time.
- The Bluetooth indicator flashes blue once when you select a sound effect other than FLAT.
- The Bluetooth indicator flashes blue twice when you select FLAT.

When you make a call or there is an incoming call, you can use the speaker as a speaker phone.

 
- When there is an incoming call, you can press 😭 to receive the call or press 🖬 twice to reject the call.
- During a call, you can press 🚮 to end the call.
- In BT mode, you can press 쥒 twice to access the voice assistant on your smart device. To exit the voice assistant, press 🚮 twice again.



**Tips:** Music play is paused during a call and resumed automatically when the call ends.

You can press and hold 🚮 to disconnect the current Bluetooth connection. If no source is detected, the EQ button does not function.






### FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: This device complies with Part 15 of the FCC Kules. Operation is subject to the following two conditions:

1) This device may not cause harmful interference, and (2) This device must accept any interference caceived, including interference that may cause undesired operation. 2. Changes or modifications not expressly automatically. When it is unplugged, the opproved by the party responsible for compliance could void the user's authority to operate the equipment.

## FCC Radiation Exposure Statement:

 - 1 Connect an auxiliary audio device to the speaker through the supplied 3.5mm audio cable.
- 2 Play and control music on the audio device, and use +/- on the speaker to adjust volume if necessary.



The  $\mathbb{E}^{\mathbb{Q}}$  button also functions in AUX IN mode. The voice assistant function does

not work in AUX IN mode.

In case of abnormality, you can hold the **RESET** button to reset the speaker.

NYNE Aqua\_Quick User Guide\_20140623.indd 7-12 2014/6/23 20:10:50