

nyne


## Rock

- Portable Bluetooth speaker
- Mobile Bluetooth Lautsprecher
- Barbarigjälter med bluetooth
- Allt-i-ett Bluetooth portat
- Kammatava Bluetooth-kaiutin
- Enceinte portable Bluetooth
- Altavoz portátil Bluetooth
- Draagbare Bluetooth-luidspreker
- Quick User Guide
- Kurzanleitung
- Hurtig brugervejledning
- Guia rápida del usuario
- Snelle gebruikershandleiding

nyne.com

CE 2200

OU-G-Nyne Rock-11-17-2015-A.0

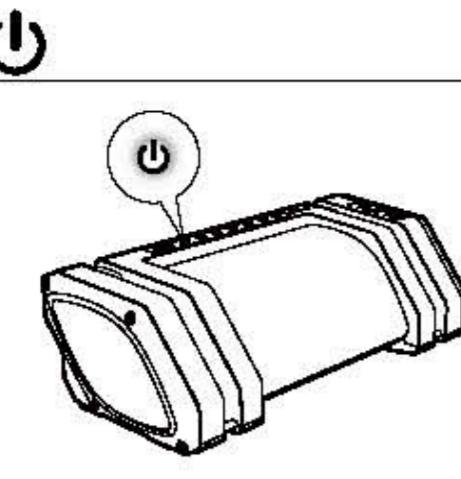

EN Press and hold until the speaker powers on.

- The power button lights up white.
- For first time use, the Bluetooth indicator flashes blue quickly, indicating that the speaker is in pairing mode.

**Tip:** When you press and hold again after Bluetooth status, the speaker will search for a previously paired device and the Bluetooth indicator will flash slowly. If no paired device is found, it will flash quickly and the speaker will enter pairing mode.

**DA** Tryk på og hold den nede, indtil højttaleren tændes.

- Tænd/uknappens tændes og lyser hvidt.
- Først gang du bruger enheden, blinker Bluetooth-indikatoren hurtigt, da det angiver, at højttaleren er i paringsstand.

**Vijje:** När du tändar høyttalenen efter Bluetooth-oppstart, såger høyttalenen etter en tidligare parert enhet, og Bluetooth-indikatoren blinker raskt. Hvis ikke finnes en paret enhet, blinker indikatoren hurtigt, og høyttalenen skifter til paringsstadi.

- DE** Gedrückt halten, bis sich die Lautsprecher einschalten.  
Die Betriebsleiste leuchtet weiß.  
Bei der ersten Benutzung blinkt die Bluetooth-Anzeige rasch blau; dies zeigt an, dass sich der Lautsprecher im Pairing-Modus befindet.
- Tipp:** Wenn Sie den Lautsprecher nach der Bluetooth-Benutzung erneut einschalten, sucht der Lautsprecher nach dem gesuchten Gerät und die Bluetooth-Anzeige blinks langsam. Wenn kein gesuchtes Gerät gefunden wird, blinkt die Anzeige schnell, was darauf hindeutet, dass der Lautsprecher weiterhin im Pairing-Modus befindet.

**ES** Mantenga pulsado hasta que se encienda el altavoz.

- El botón de encendido se ilumina en color blanco.
- Si es la primera vez que utiliza el unidad, el indicador Bluetooth parpadea rápidamente en color azul para indicar que el altavoz se encuentra en modo de sincronización.

**Consejo:** Cuando vuelva a encender el dispositivo después de configurar la función Bluetooth, el altavoz buscará el dispositivo sincronizado previamente y el indicador Bluetooth parpadeará lentamente. Si no se encuentra ningún dispositivo sincronizado, parpadeará rápidamente y el altavoz entrará en modo de sincronización.

**FL** Pida **ON**-painiketta painettuna, kunnes kaiutin kytkyy päälle.

- Tausta/uknappi tändes ja lyser valkoinen.
- Edmäistäksikäytössä kaiutinvalo vilkkuu nopeasti. Tämä ilmasee kaupunkien clevan yhdystämisellä.

**Vijje:** Kun kaiuttimen kytketään virtaan Bluetooth-yhteyden mukaan taivutetaan jälkeen, kaiutin pyrkii yhdystämisään laiteparin. Tässä taivutessa Bluetooth-ilmastointivalo vilkkuu hitaasti. Jos laiteparia ei löydy, ilmastoja vilkkuu nopeasti ilman kaiuttimen clevan yhdystämisellä.

- FR** Appuyez sur et maintenez cette touche enfoncée jusqu'à ce que l'enceinte s'allume.  
Le bouton d'alimentation s'allume en bleu.  
Pour la première utilisation, le voyant Bluetooth clignote rapidement en bleu, ce qui indique que l'enceinte est en mode d'appairage.

**Astuce :** si vous rallumez l'enceinte après la configuration Bluetooth, celle-ci recherche un appareil précédemment à pairé et le voyant Bluetooth se met à clignoter lentement. Si aucun appareil n'est détecté, le voyant se met à clignoter rapidement et l'enceinte passe en mode d'appairage.

**IT** Tenere premuto fino che l'altoparlante non si accende.

- Il pulsante di accensione si accende con luce bianca.
- Se è la prima volta che utilizza lo unidad, il indicatore Bluetooth lampeggia in blu rapidamente, indicando che l'altoparlante si trova in modalità di abbinamento.

**Suggerimento:** alla successiva accensione dopo la configurazione Bluetooth, l'altoparlante cerca un dispositivo precedentemente abbinato e il indicatore Bluetooth lampeggiava lentamente. Se non viene rilevato alcun dispositivo, il indicatore lampeggiava rapidamente e l'altoparlante entra in modalità di abbinamento.

**DE** Houd **ON**-ingeschakeld tot dat luidspreker inschakelt.

- De aan-uitknop licht op.
- Voor het eerste gebruik kript de Bluetooth-aansluiting snel om aan te geven dat de luidspreker zich in de koppelingsmodus bevindt.

**FL** Tip: Wanneer u de speaker opnieuw inschakelt na installatie van Bluetooth, zoekt de luidspreker naar een voorheen gekoppelde apparaten. De knipper van Bluetooth-verbindingssignalen blijft langzaam. Als geen gekoppelde apparaten worden gevonden, kript de speaker weer snel in de koppelingsmodus.

**Vijje:** Muusikat paukkaudella soittaa automaattisesti uudelleen, kunnes laitepariin tullaan.

**DA** Afspil musik på den enhed, der er parret og tilsluttet højttaleren.

**DE** Bemerk: Højttaleren understøtter automatisk slukning i et tidligere parret enhed, efter at den er blevet slukket og tændt.

**Under musikafspilning:**

- Tryk på +/- for at justere lydstyrken.
- Tryk på **ON/OFF** for at gå til forrige eller næste musiknummer.
- Tryk på **PAUSE** for at sætte en musik afspilning på pause.

Når du forstørger opkald eller modtager et opkald, kan højttaleren bruges som telefon-højttaler.

- Når du modtager et opkald eller modtager et opkald, skal du tryke på **PAUSE** for at acceptere opkaldet eller tryke på **END** for at afslute opkaldet.

- Under et opkald skal du tryke på **PAUSE** for at tænde for stemmetimer på din smartphone. Du kan nu slukke din smartphone ved at trykke på **PAUSE**.

**FL** Voi toistaa musiikkia laitteesta, josta on muodostettu laitepariutus kaiuttimen kanssa.

**DE** Huomaa: Tämä kaiutin tukee automaattista yhdystämistä aiemmin määritettyyn laitepariin sammuttaessasi ja käynnistys jälkeen.

Musiikin soiton aikana:

- Säädä **+**/**-** soi voluumea.

Sirry edelläisen tai seuraavan kaupaleeseen painamalla **ON/OFF**.

Kekeytä tai laita toiselle painamalla **PAUSE**.

Voi käyttää kaiutinta myös puhelimen kaiuttimena.

- Voit varata puhelin painamalla **PAUSE** tai yhdistä puhelin painamalla **PAUSE** painiketta kaiuttiin.

Voi päästä vapaaksi painamalla **PAUSE** painiketta.

Bluetooth-tilassa voi toistaa automaattisesti painamalla **PAUSE** painiketta kaiuttiin.

Voi päästä vapaaksi painamalla **PAUSE** painiketta kaiuttiin.

**DA** Voi toistaa musiikkia laitteesta, josta on muodostettu laitepariutus kaiuttimen kanssa.

**DE** Hinweis: Dieser Lautsprecher unterstützt die automatische Verbindung mit einem vorher abgesetzten Gerät nach dem Ausschalten und Wiederauenschaltung.

Während der Musikwiedergabe:

- Drücken Sie +/-, um die Lautstärke anzupassen.

Drücken Sie **ON/OFF**, um zum vorherigen oder nächsten Titel zu wechseln.

Drücken Sie **PAUSE**, um die Musikwiedergabe zu anhalten bzw. fortzusetzen.

**FR** Voulez-vous écouter une autre chanson? Appuyez sur +/- pour régler le volume.

Appuyez sur **ON/OFF** pour passer à la piste précédente ou suivante.

Appuyez sur **PAUSE** pour interrompre ou reprendre la lecture.

**IT** Per la riproduzione di musica: premere +/- per regolare il volume.

Premere **ON/OFF** per passare al brano precedente o successivo.

Premere **PAUSE** per pausare la riproduzione musicale.

**NL** Speel muziek af op het apparaat, dat gekoppel is aan een verbonden is met de luidspreker.

**Opmerking:** Deze luidspreker ondersteunt automatische verbinding met een vooraf gekoppelde apparaat nadat deze werd uitgeschakeld.

Tijdens de muziekafspeling:

- Druk op +/- om het volume aan te passen.

Druk op **ON/OFF** om de vorige of volgende song te gaan.

Druk op **PAUSE** om de muziek te pauzeren of te herstarten.

Wanneer u de telefoon of een oproep binnentrekkt, kunt u de luidspreker als luidsprekertelefoon gebruiken.

Wanneer er een oproep binnenkomt, kunt u op **PAUSE** drukken om de oproep te aannemen, of twee keer op **PAUSE** drukken om de oproep weg te gooien.



Tijdens een oproep kunt u op **PAUSE** drukken om de oproep te beëindigen.

In de BT-modus kunt u twee keer op **PAUSE** drukken om de spaatsensor stop te zetten.

Om muziek te luisteren, moet u de AUX-IN aansluiting op uw smartphone aaparaat te starten. Om de spaatsensor te sluiten, drukt u nogmaals twee keer op **PAUSE**.

**Tip:** De muziekwiedergave wordt geactiveerd tijdens een oproep en automatisch hersteld wanneer de oproep wordt beëindigd. Kunt u **PAUSE** ingedrukt houden om de huidige Bluetooth-verbinding te verbreken.

auhu

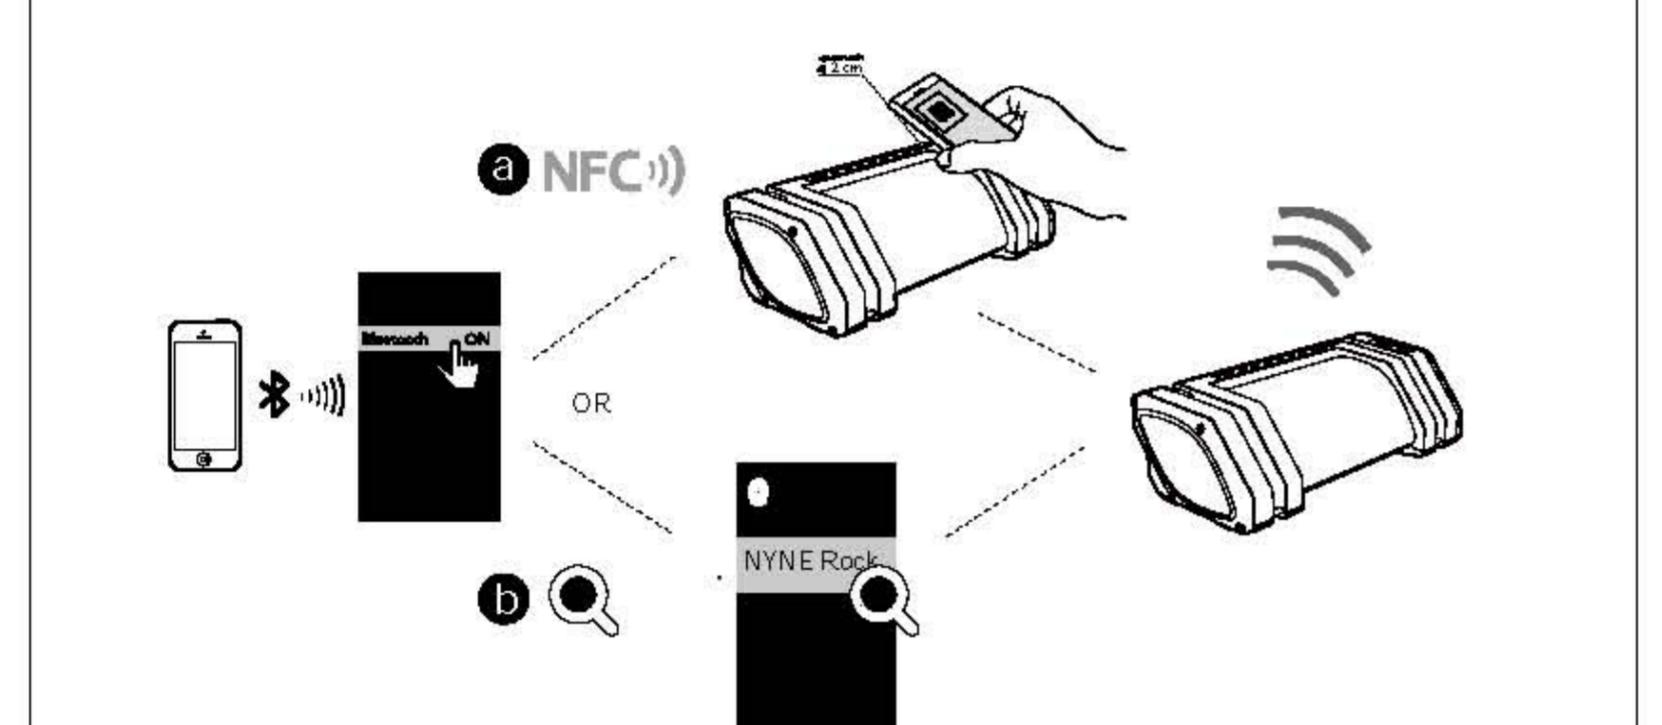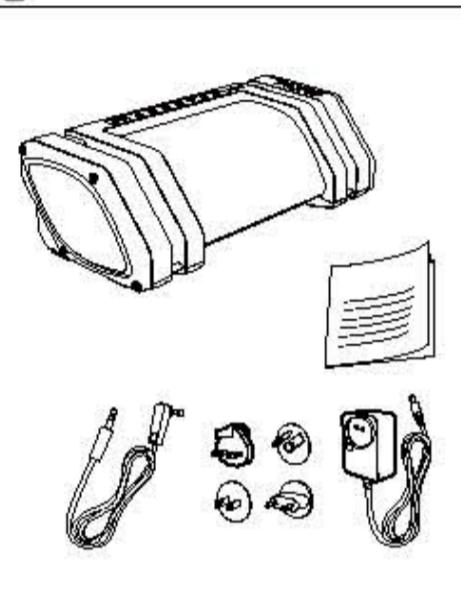**NFC**) / **Q**

- EN** 1 Make sure that the speaker is in pairing mode.  
2 Ena Bluetooth on your device to be paired with the speaker.

- a. Enable NFC on your Bluetooth device, and then touch the NFC tag on your device with the NFC area of the speaker.
- b. Select 'NYNE Rock' from the available devices (if necessary, enter the password such as '0000' or '1234') to start pairing and connection with the speaker.

3 After successful connection, the Bluetooth indicator turns solid blue and the speaker beeps.

**Tip:** This speaker supports a automatic connection with a previously paired device after power off and power on again.

You can press and hold **ON** for more than 2 seconds to enter manual pairing mode. In this way, you can pair the speaker with a new Bluetooth device. You can press and hold **ON** for more than 10 seconds to clear all paired Bluetooth devices. This speaker is compatible with the voice assistant on your smartphone.

**DA** 1 Kontroller, at højttaleren er i paringsstand.  
2 Aktiver Bluetooth på den enhed, der skal parres med højttaleren.

- a. Aktiver NFC på din Bluetooth-enhed, og lad din NFC-sender responde NFC-området.
- b. Vælg 'NYNE Rock' blandt de tilgængelige enheder (hvis behov) for at starte paringen.

3 Når der er oprettet et forbindelse, lyder Bluetooth-indikatoren blå og højttaleren bipper.

**Tip:** Højttaleren understøtter automatisk tilslutning til et tidligere parret enhed, efter at den er blevet slukket og tændt.

Tryk på **ON** og hold den nede i mindst 2 sekunder, tilstede afstand mellem enhederne, og den føder automatisk til den nærmeste Bluetooth-enhed. Du kan trykke på **ON** i mindst 10 sekunder for at tømme alle parrede Bluetooth-enheder.

**DA** 1 Læsnede den Lautsprecher auf, bis alle fünf Ladeanzeigen auf alle farben leuchten.

**Tip:** Du kan trykke på **LEVEL** for at kontrollere batteristatus. Når de fleste af opladningsindikatorerne er slukket, betyder det, at batteriet er ved at løbe ud.

**DE** 1 Stellen Sie sicher, dass sich der Lautsprecher in pairing-Modus befindet.

- a. Aktivieren Sie NFC auf Ihrem Bluetooth-Gerät, und bringen Sie NFC-bereich des NYNE Rock in den NFC-Bereich der Lautsprecher.
- b. Selektieren Sie "NYNE Rock" aus der Liste der verfügbaren Geräte (falls erforderlich, geben Sie ein Passwort wie z.B. "0000" oder "1234") und starten Sie die Verbindung.

3 Nach erfolgreicher Verbindung ist der Bluetooth-Pausen- und Wiederaufnahmeknopf permanent blau und die Lautsprecher piept.

**Tip:** Dieser Lautsprecher unterstützt eine automatische Verbindung mit einem vorher gepaarten Gerät nach dem Ausschalten und Wiederauenschaltung.

Drücken Sie **ON** und halten Sie die Taste mehr als 2 Sekunden lang gedrückt, um den manuellen Pairing-Modus zu starten. Auf diese Weise können Sie den Lautsprecher mit einem neuen Bluetooth-Gerät paaren. Selektieren Sie **ON** über 10 Sekunden, um den Pausen-Modus zu starten. Dieser Lautsprecher ist mit der Sprachassistentin kompatibel.

**ES** 1 Corgue el altavoz hasta que los cinco indicadores de carga se iluminen todos una vez para indicar que la batería está totalmente cargada.

**Consejo:** Puede pulsar **LEVEL** para comprobar el estado de la batería. La mayoría de los indicadores de carga están apagados, significa que la batería está prácticamente agotada y precisa cargarla.

**FR** Chargez l'enceinte jusqu'à ce que les cinq témoins de charge s'allument tous une fois pour indiquer que la batterie est complètement chargée.

**Astuce :** vous pouvez appuyer sur **LEVEL** pour vérifier l'état de la batterie. Quand la plupart des témoins de charge sont éteints, cela signifie que la batterie est entièrement déchargée et doit être rechargeée.

**IT** Coricare l'altoparlante fino a cinque indicazioni non ci accenderanno contenuto preavvertendo indicando che la batteria è completamente carica.

**Suggerimento:** premere **LEVEL** per verificare lo stato della batteria. Quando la maggior parte degli indicatori risulta spenta, il livello della batteria è scarso e necessaria una ricarica.

**DA** Lad den luidspreker op tot vijf opblaadmogigheden tegelijk optellen om aan te geven dat de batterij volledig geladen is.

**Tip:** I kult op LEVEL drukken om de batterijstatus te controleren. Waar de meeste oplaadindikatoren uitgeblinkeerd zijn, betekent dit dat de batterij bijna leeg is en moet worden opgeladen.

- DE** Gedrückt halten, bis sich die Lautsprecher einschalten.  
Die Betriebsleiste leuchtet weiß.  
Bei der ersten Benutzung blinkt die Bluetooth-Anzeige rasch blau; dies zeigt an, dass sich der Lautsprecher im Pairing-Modus befindet.

**Tipp:** Wenn Sie den Lautsprecher nach der Bluetooth-Benutzung erneut einschalten, sucht der Lautsprecher nach dem gesuchten Gerät und die Bluetooth-Anzeige blinks langsam. Wenn kein gesuchtes Gerät gefunden wird, blinkt die Anzeige schnell, was darauf hindeutet, dass der Lautsprecher weiterhin im Pairing-Modus befindet.



**nyne**


BC

# Rock

EN Portable Bluetooth Speaker


EN Safety Guide

## Important Safety

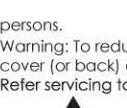

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of un-isolated, dangerous voltage within the inside of the device that may be of sufficient magnitude to constitute a risk of electric shock to persons.

Warning: To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.

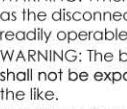

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and servicing instructions in the literature accompanying the device.

**WARNING:** Where the mains plug/appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

**WARNING:** The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.

Read these instructions before operation.

Keep these instructions for future reference.

Follow all instructions for installation, use and maintenance of the device.

This device complies with the IPX3 waterproof standard.

Before using the device in the rain or moisty conditions or rinsing the device with fresh water, always securely close the protective cover at the back of the device.

Never open the protective cover when the device is still wet after use. Always clean with a soft dry cloth and let it dry in a well-ventilated place away from direct sunlight.

To clean the device, disconnect power first. Clean only with soft and dry cloth.

To ensure compatibility, only use accessories recommended by the manufacturer.

When the device is suddenly moved from cold to warm surroundings, condensation may form in the housing of the device. Before use, leave the device in the warm environment until the moisture evaporates.

Keep the device away from heat sources, such as a radiator, heater, oven, amplifier, naked flames or direct sunlight.

No naked flame sources, such as lighted candles, should be placed on the apparatus.

When you use the flashlight or warning light features of the device, the lens may get very hot after some time. This is not a malfunction.

Never block any ventilation openings. Install in accordance with the manufacturer's instructions.

- Do not expose the device to sand or dust, or cover it with items, such as newspapers, table cloths, or curtains.
- Do not operate the device in an enclosed cabinet. Leave sufficient free space around the device for adequate ventilation.

Do not attempt to repair or service the device yourself. Opening or removing the cabinet may expose you to electric shock, and other hazards. If repair is required, contact your dealer and refer all servicing to qualified service personnel.

Do not use the device if any abnormality occurs. If any smoke or odor becomes apparent, contact your dealer immediately. Do not try to repair the device yourself.

Avoid using dropped or damaged appliances. If the device is dropped and the housing is damaged, the internal components may not function normally. Stop use and contact your dealer for repair. Continued use of the device may cause fire or electric shock.

To reduce the risk of electric shock, do not touch any connector with wet hands.

Never remove the housing of the device.

Never lubricate any part of the device.

Never place the device on top of any other electrical equipment.

This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

## Notice

### Modification

Any modification (such as removing the speaker grill) to the device, without prior authorization from the manufacturer, may void your warranty and authority to operate the device.

### FCC compliance statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.


This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.

This device and its antenna(s) must not be co-located or in conjunction with any other antenna or transmitter.

### CE statement

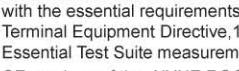

This product complies with the radio interference requirements of the European Community.

### Recycling Packaging

#### Declaration of Conformity

We declare on our sole responsibility that this equipment complies with the essential requirements of the Radio and Telecommunications Terminal Equipment Directive, 1999/5/EC, and that any applicable

Essential Test Suite measurements have been performed.

CE versions of the NYNE ROCK (M/N: NYNE ROCK ) which display the CE symbol on the product label, comply with the essential requirements of the European Radio and Telecommunications Terminal Directive 1999/5/CE.

### WEEE NOTICE

The Directive on Waste Electrical and Electronic Equipment (WEEE), which entered into force as European law on 13th February 2003, resulted in a major change in the treatment of electrical equipment at end-of-life.

The purpose of this Directive is, as a first priority, the prevention of WEEE, and in addition, to promote the reuse, recycling and other forms of recovery of such wastes so as to reduce disposal.

The WEEE logo on the product or on its box indicating collection for electrical and electronic equipment consists of the crossed-out wheeled bin, as shown below.

This product must not be disposed of or dumped with your other household waste. You are liable to dispose of all your electronic or electrical waste equipment by relocating over to the specified collection point for recycling of such hazardous waste. Isolated collection

and proper recovery of your electronic and electrical waste equipment at the time of disposal will allow us to help conserving natural resources. Moreover, proper recycling of the electronic and electrical waste equipment will ensure safety of human health and environment. For more information about electronic and electrical waste equipment disposal, recovery, and collection points, please contact your local city center, household waste disposal service, shop from where you purchased the equipment, or manufacturer of the equipment.



### ROHS COMPLIANCE

This product is in compliance with Directive 2011/65/EU of the European Parliament and of the Council of 8 June 2011 on the restriction of the use of certain hazardous substances in electrical and electronic equipment.

### FOR PRODUCTS THAT INCLUDE BATTERIES

#### EU Batteries Directive 2006/66/EC

A new battery directive 2006/66/EC on Battery and Accumulator replacing directive entered into force on the 26th September 2008. The directive applies to all types of batteries and accumulators (AA, AAA, button cells, lead acid, rechargeable packs) including those incorporated into appliances except for military, medical and power tool applications.

The directive sets out rules for collection, treatment, recycling and disposal of batteries, and aims to prohibit certain hazardous substances and to improve environmental performance of batteries and all operators in the supply chain.


### Instructions for Users on Removal, Recycling

To remove the batteries from your equipment or remote control, reverse the procedure described in the owner's manual for inserting batteries.

For products with a built-in battery that lasts for the lifetime of the product, removal may not be possible for the user. In this case, recycling or recovery centers handle the dismantling of the product and the removal of the battery. If, for any reason, it becomes necessary to replace such a battery, the procedure must be performed by authorized service centers. In the European Union and other locations, it is illegal to dispose of any battery with household trash. All batteries must be disposed of in an environmentally sound manner. Contact your local waste-management officials for information regarding the environmentally sound collection, recycling and disposal of used batteries.


**WARNING:** Danger of explosion if battery is incorrectly replaced.

To reduce risk of fire or burns, don't disassemble, crush, puncture, short external contacts, expose to temperature above 60°C (140°F), or dispose of in fire or water. Replace only with specified batteries.

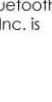


The symbol indicating 'separate collection' for all batteries and accumulators shall be the crossed-out wheeled bin shown below. In case of batteries, accumulators and button cells containing more than 0.0005 % mercury, more than 0.002 % cadmium or more than 0.004 % lead, shall be marked with the chemical symbol for the metal concerned: Hg, Cd or Pb respectively.

Please Refer to the below symbol:

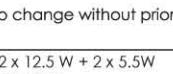

### Copyright

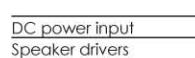

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Nyne Multimedia Inc. is under license.

### Specifications

The technical specifications are subject to change without prior notice.

Output power	Main: 2 x 12.5 W + 2 x 5.5W Woof: 1 x 25W
DC power input	18VDC
Speaker drivers	Main: 2 x 76mm + 2 x 25mm Woof: 1 x 152mm
S/N	>50dB
THD+N	<10%
Dimension	21.18 (W) x 6.5 (H) x 9.72 (D) inches
Weight	7.6kg
Audio input	1 x 3.5 mm socket 1 x wireless input (Bluetooth)
Wireless	Bluetooth 4.1 CLASS 2
Bluetooth profiles	HFP, A2DP, AVRCP
Battery capacity	7.4V 6600mAh
Battery type	Lithium-ion
Play time	8 - 10 hours