



M11-870 GPS watch User Manual

Ref: XT7 M11-870D sw01-022

Introduction

Thank you for purchasing the GPS watch. This GPS watch is packed with personal Training features like speed, trip time, laps, etc. GPS navigation features were integrated in various modes like Run mode and Waypoint mode. GPS can display your current location in an electronic map. It has also a dedicated Altimeter sensor for altitude and atmospheric pressure measurement. Watch features include 12/24H Time format, Chronograph, World time, 5 daily Alarms, Data, and Set modes. This watch can communicate with a PC to store and review your performance. This watch also has a power saving mode to increase operating hours. It uses a rechargeable battery that can be charged through USB port of your PC. It also uses HRM belt (optional unit) with 2.4 GHz technology to monitor your heart rate for all your HR related information.

Caring for your GPS watch:

Clean your GPS watch and heart rate monitor with a dampened cloth preferably with mild detergent solution. Wipe dry using a dry cloth. Do not use chemical cleaners and solvents that may damage plastic components.

Do not store your GPS watch to prolonged exposure to extreme temperatures as this may result to permanent damage to your unit.

About GPS:

Global Positioning System (GPS) is a satellite- based navigation system made up of a network of 24 or more satellites. GPS works best in clear weather condition, anywhere in the world, 24 hours a day. Tall buildings may interfere with GPS accuracy. When 3 satellite signals are received, the watch will have 2D GPS fixed (Latitude and Longitude). When 4 or more satellite signals are received, the watch will have 3D GPS Fixed (Latitude, Longitude, and Altitude).

Water immersion:

This GPS watch is designed to be water resistant up to 3 ATM. It can resist water pressure up to 30 meters. After submersion to water, please make sure to wipe dry and air dry the unit before using or charging.

Caution: This unit is not intended to be used while swimming. Prolonged water submersion may cause electronic shorting in the unit which may cause minor skin burn or irritation.

Getting Started

Step 1) Know your watch:

Push button location:



Push button Function:

- S1** – Start / Lap / Increase adjust / Fast increase adjust
- S3** – Stop / Save/ Decrease adjust / Fast decrease adjust
- S5** – View / Confirm
- S7** – Mode / Exit
- S9** – GPS On / Hold to turn Off GPS
- S11** – Light

Note: Actual color of the watch and artwork may vary from style to style.



Power Saving Screen:

This watch has a power saving feature to prolong battery life. When GPS is OFF, HRM is not linked, and no key operation for 1 minute, the display will auto go to Power saving screen. In power saving Screen, Press S7 to go to Run mode. Press any other key will go from power saving screen to Time mode.

Power saving screen



Note: If GPS is ON or Chronograph is running, it will not go to power saving screen.

The watch will display only the date, battery level indicator and time in power saving screen.

Step 2) Charging the Battery:

Charge the unit for at least 4 hours before first use. The length of time for a fully charged battery will last depend on the actual usage. It is recommended to regularly re-charge your battery every 1-2 months even if it is not used to maintain good battery condition.

2.1) Plug your USB PC link cable to your PC

2.2) Align the charging clip with the contacts on the back of the watch.



2.3) Connect the charging clip securely to the watch.



Note: Please thoroughly dry the charging contacts and surrounding area to ensure proper electrical contact and to prevent corrosion.

When the battery is low, it is time to charge the GPS watch.

Note: You cannot turn ON the GPS when the battery is low.

When it displays check the charger, re-adjust the clip and make sure there are no contamination or dirt between the contacts of the clip and the back of the watch.

Once the battery is full, it will display CHARGING COMPLETE.

Step 3) Configure your watch:

Before using your GPS watch, you have to do the following:

- 3.1) Set the Alarm, Time 1, Time 2, and display format. Go to **Time sub modes** for the details on how to set these parameters. Time and Alarm can also be set in **SET** mode.
- 3.2) Go to **SET** mode to set **TIME**, **ALARM**, **UNITS**, **USER** details, **DISPLAY** format, **AUTOLAP**, **BAROMETER**, **ALTIMETER**, **HRM**, **HRM LINK**, **HRM ON/ OFF**, **LCD CONTRAST**, **KEYTONE**, and **NIGHT** mode.

Step 4) Acquire Satellite signals:

In order to get the correct time of day and begin using your GPS watch, you have to acquire GPS signals. It may take a few minutes to get the signals.

4.1) Go outside to an open area away from tall buildings and trees. Orient the GPS antenna towards the sky for best reception. The antenna is located at the 6 o'clock position of the watch.



Note: In order to accurately navigate the GPS, you need to have a good line of sight to the satellites.

4.2) Stand still and do not begin moving while searching the Satellites until the signals are already received.

4.3) **How to Turn ON the GPS:** Press S9 to turn ON the GPS. The watch will start locating the satellites. After receiving the satellite signals, it will automatically go to RUN mode ready for the exercises. The watch will display the relative signal strength on the upper right side of the display:





4.4) If you press S9 again, the watch will momentarily display GPS / INDOOR. User can select GPS or INDOOR by pressing S1/S3. If you select GPS, it will display your current location, and then go to RUN mode. If you select INDOOR, the watch will go direct to RUN mode and you will have no GPS function.

4.5) **How to turn OFF the GPS:** If you wish to turn OFF the GPS, press and hold S9 for about 3 seconds and the watch will momentarily display GPS OFF and then return to Time view.

GPS signals and its meaning:


GPS signal searching	
GPS signal received	
No GPS signal	

You will hear a beep sound when the watch has received a GPS signal or when the GPS signal has been lost. LOST GPS signal will also be displayed in the screen. If no Satellite signals received, the watch will display "NO GPS".


Step 5) Using your Heart Rate monitor:

The HRM belt is on standby and ready to send data to your watch. Wear the belt directly on your skin just below your breastplate. It should be snug enough to stay in place during your run.

- 5.1) Push one tab on the strap through the slot in the HRM transmitter.
- 5.2) Wet both electrodes with a damp cloth on the back of the HRM belt. This will help create a strong electrical connection between your chest and the HRM transmitter.

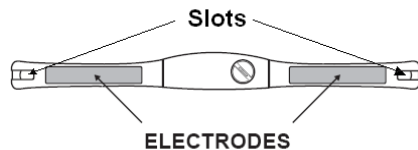

5.3) Wrap around the chest belt around your rib cage just below the pectoral muscles and attach the other end of the strap to the HRM transmitter. The elastic strap should be adjusted so that it is snug enough so that it will not move during use but not so tight as to restrict breathing.

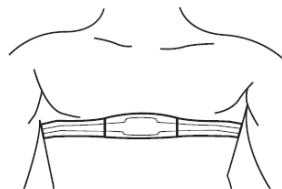

5.4) Bring the GPS watch within range of the HRM transmitter (3 meters). Got to **SET mode/ HRM LINK** to start linking the HRM belt with the watch. The watch will auto detect the HR

belt ID. Click **YES** to accept. The watch will then automatically go to **RUN** mode. Your Heart rate information will now be displayed in the watch.

5.5) If the heart rate will not be displayed, or you have an erratic heart rate data, follow the following tips :

- 5.1.1) Make sure the HR belt is snugly fit to your body
- 5.1.2) Reapply water or electrode gel to the electrode of the HR belt
- 5.1.3) Clean the electrodes from possible contamination that may interfere with heart rate signals
- 5.1.4) Wear a cotton shirt or if possible, wet your cotton shirt. Synthetic fabrics that rubs with your skin may create static electricity and interfere with the heart rate signal
- 5.1.5) Move away from strong electromagnetic fields and other wireless sensors which can interfere with your heart rate sensor. Possible sources of wireless interference may include high voltage power lines, electric motors, microwave ovens, cordless phones, and wireless LAN or access points.

Note: Set your Heart rate zone in **SET mode/ HRM**.

Step 6) Go for a Run:

Before going for a run, it is highly recommended that you set your user profile first so that the calories will be calculated properly. Go to **SET mode / USER** to do this.

6.1) Using Run mode:

- 6.1.1) Press S1 or S7 from Time mode to go to RUN mode.
- 6.1.2) The watch will prompt you to select **GPS** or **INDOOR**. The default is **GPS**. Press S1/S3 to select. If you select **GPS**, The watch will automatically search for GPS signal. If you select **INDOOR**, you will be performing your exercise without **GPS** signal.
- 6.1.3) After your selection, the watch will display the remaining **BATTERY** power level, remaining **DATA TRACK MEMORY** and then display view 1. Press S5 to change views.
- 6.1.4) Press S1 to **START** or **TAKE LAP**. If auto lap function is set, the watch will take lap automatically based on auto lap setting. The EL will turn ON and there is also a beep sound during taking of auto lap.
- 6.1.5) Press S3 to stop after completing your run.
- 6.1.6) Press and hold S3 to save your data

When the chronograph is stopped or reset, the GPS will automatically turn OFF after 15 minutes and return to time mode.

6.2) Using Chronograph mode:

RUN mode and **CHRONOGRAPH** mode has the same timer counter. When the chronograph is started or stopped in RUN mode, the same thing happens in Chronograph mode. They just differ in the views when you press S5. This mode is dedicated to chronograph, lap time, exercise time, Heart rate, and distance travelled.

- 6.2.1) Press S7 from **RUN** mode to go to **CHRO** mode.



- 6.2.2) The watch will prompt you to select **GPS** or **INDOOR**. Press S1/S3 to select. If you select **GPS**, the watch will automatically search for GPS signal. If you select **INDOOR**, you will be performing your exercise without **GPS** signal.
- 6.2.3) After your selection, the watch will display the remaining **BATTERY** power level, remaining **DATA TRACK MEMORY** and then display view 1. Press S5 to change views.
- 6.2.4) Press S1 to **START** or **TAKE LAP**. If auto lap function is set, the watch will take lap automatically based on auto lap setting. The EL will turn ON and there is beep sound during taking auto lap.
- 6.2.5) Press S3 to stop after completing your run.
- 6.2.6) Press and hold S3 to save your data.

6.3) Using HRM mode:

RUN mode and **HRM** mode has the same timer counter. When the chronograph is started or stopped in **RUN** mode, the same thing happens in **HRM** mode. They just differ in the views when you press S5. This mode is dedicated to HRM views

- 6.3.1) Press S3 from Time to HRM mode or press S7 from **CHRO** mode to go to **HRM** mode.
- 6.3.2) The watch will prompt you to select **GPS** or **INDOOR**. Press S1/S3 to select. If you select **GPS**, the watch will automatically search for GPS signal. If you select **INDOOR**, you will be performing your exercise without **GPS** signal.
- 6.3.3) After your selection, the watch will display the remaining **BATTERY** power level, remaining **DATA TRACK MEMORY** and then display view 1. Press S5 to change views.
- 6.3.4) Press S1 to **START** or **TAKE LAP**. If auto lap function is set, the watch will take lap automatically based on auto lap setting. The EL will turn ON and there is also a beep sound during taking auto lap.
- 6.3.5) Press S3 to stop after completing your run.
- 6.3.6) Press and hold S3 to save your data.

6.4) Using Altimeter mode:

- 6.4.1) Press S7 from **Barometer** mode to go to **Altimeter** mode.
- 6.4.2) The watch will prompt you to select **GPS** or **INDOOR**. Press S1/S3 to select. If you select **GPS**, The watch will automatically search for GPS signal. If you select **INDOOR**, you will be performing your exercise without **GPS** signal.
- 6.4.3) After your selection, the watch will display the remaining **BATTERY** power level, remaining **DATA TRACK MEMORY** and then display the view 1. Press S5 to change the views.
- 6.4.4) Press S1 to **START** or **TAKE LAP**. If auto lap function is set, the watch will take lap automatically based on auto lap setting.
- 6.4.5) Press S3 to stop after completing your run.
- 6.4.6) Press and hold S3 to save your data.

Important note:

Before User can perform above steps, the ff. should be set in SET mode:

- Go to SET mode.

- Press S1 or S3 to select **ALTI**
- Press S5 to enter
- Press S1 or S3 to change the value. **ALTI** should be set / calibrated based on the current location (current weather / Barometric sea level pressure).
- Press S5 to confirm setting.
- Press S7 to exit.
- Press S7 again to go to Altimeter mode.

6.5) Using Barometer mode:

- 6.5.1) Press S7 from Time mode to go to **BARO** mode (the watch will display the Temp. /Sea Level/current Barometric pressure).
- 6.5.2) The watch will prompt you to select **GPS** or **INDOOR**. Press S1/S3 to select. If you select **GPS**, The watch will automatically search for GPS signal. If you select **INDOOR**, you will be performing your exercise without GPS signal.
- 6.5.3) After your selection, the watch will display the remaining **BATTERY** power level, remaining **DATA TRACK MEMORY** and then display the view 1. Press S5 to change the views.
- 6.5.4) Press S5 to change view to 24 hour recall view.
- 6.5.5) Press S1 or S3 to change the hourly record for the past 24 hours.
- 6.5.6) Press S7 to exit.

6.6) Using GOTO waypoint function in WAYPOINT mode

If there is no **GPS** signal, **RUN** mode, or **GO BACK** function of Run Data mode is running, you cannot use **GOTO** waypoint function. Also there should also be a waypoint save in the memory to go to.

- 6.6.1) Press S7 from Run Data mode to go to Waypoint mode. The watch will display the list of available waypoints.
- 6.6.2) Press S1/S3 to select which waypoint to go to.
- 6.6.3) Press S5 to open **GOTO/ VIEW/ EDIT/ DELETE/ EXIT** sub modes.
- 6.6.4) Press S5 to select **GOTO** sub mode. The chronograph will automatically start.
- 6.6.5) Press S5 again to change views.
- 6.6.6) Press S1 to **START** or **TAKE LAP**. If auto lap function is set, the watch will take lap automatically based on auto lap setting.
- 6.6.7) Press S3 to **STOP** after you complete your exercise.
- 6.6.8) Press and hold S3 to save your exercise.

6.7) Using GOBACK function in RUN DATA mode:

- 6.7.1) Press S7 from **RUN** mode to go to **RUN DATA** mode. The watch will display the list of available Data files.
- 6.7.2) Press S1/S3 to select which file to open.
- 6.7.3) Press S5 to view the details of the selected file. Press S1/S3 to scroll through the details
- 6.7.4) Press S5 to open the **RUN DATA** sub modes: **GO BACK**, **VIEW**, **EDIT**, **DELETE**, **DELETE ALL**, and **EXIT**.
- 6.7.5) Press S1/S3 to select which sub mode to use. In this case select **GO BACK**.



- 6.7.6) Press S5 to start your exercise (the chronograph will auto start).
- 6.7.7) Press S5 again to change views
- 6.7.8) Press S1 to START or TAKE LAP. If auto lap function is set, the watch will take lap automatically based on auto lap setting.
- 6.7.9) Press S3 to STOP after you complete your exercise.
- 6.7.10) Press and hold S3 to save your exercise.

Note: If there is no GPS signal, **RUN** mode, or **GO TO WAYPOINT** function is running, you cannot use **GO BACK** function.


Step 7) Download your data to PC:

The watch comes with PC software to make communication between your watch and PC easy and enjoyable. Please install the PC software to your PC using the installer provided. The watch is using a USB PC link cable to connect the watch to PC.

Run the GPS PC software on your PC. Plug the USB cable with the watch clamped in the other end of the cable. PC software will then prompt you to download the data. Click the download button to begin downloading. User has the option to delete the data in the watch or not. The PC software installation and instruction guide can be found at the end of this manual. Please take time to read the guide.

General Operations

The watch has the following main modes: Time, Run, Chronograph, HRM, Route, Barometer, Altimeter, RUN Data, Waypoint and Set modes. Press S7 to scroll through these modes.

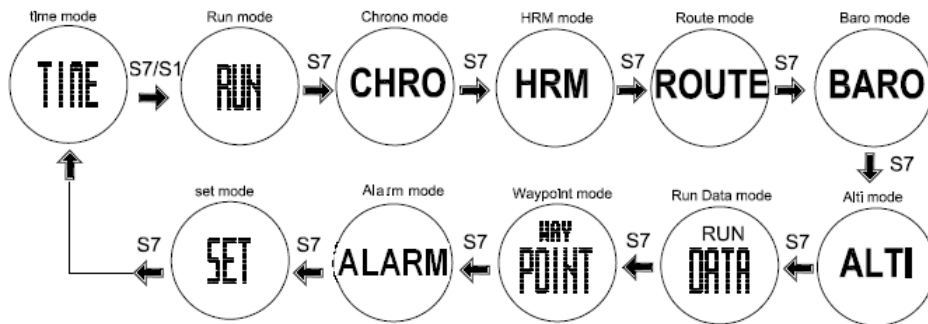

Note: Press S1 or S7 from **TIME** mode to go to **RUN** mode.

EL backlight:

This watch has a night mode function. Following are the options in the setting mode and their functions:

PUSH ON – Pressing any key will turn ON the EL for 10 seconds from 6:00 pm to 7:00 am every day.

STAY ON – EL back light will be continuous ON from 6 am to 7 pm if GPS is ON and Chronograph is running.

Outside the time frame from 6 pm to 7 am, only press S5 can turn ON the EI for 10 seconds.

You can set the night mode function in **SET** mode and **Run sub mode**.

TIME MODE

Press S7 from **SET** mode to **TIME** mode. Press S5 to scroll through the following views with the corresponding information displayed:

View 1 → Time 1, Week day, Month, Date, Battery level indicator, GPS relative signal strength

View 2 → Time 1, Temperature, weather forecast

View 3 → Time 1, Altitude


View 4 → Time 1, Barometric pressure

View 5 → Time 2, Week day, Month, Date, Battery level indicator, GPS relative signal strength

View 6 → Time 2, Temperature, weather forecast

View 7 → Time 2, Altitude

View 8 → Time 2, Barometric pressure

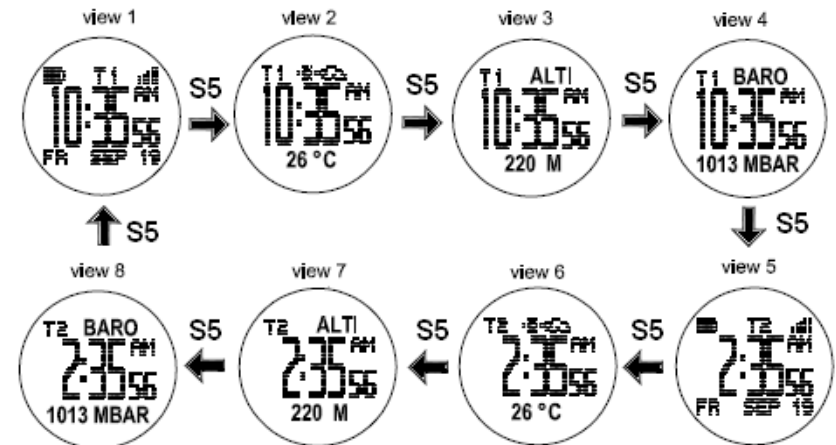

TIME 1 setting in SET MODE:

You have two options in setting the watch, **AUTO** or **MANUAL**. In manual setting, you can manually set the time. If you select the **AUTO** option, the watch will be automatically set base on the data from GPS satellites. Also note if User select **MANUAL**, the **AUTO ON** display will be auto change to **AUTO OFF**.



- Select **TIME 1** by pressing S5
- Select **AUTO** or **MANUAL setting** by pressing S1 or S3 and then press S5 to enter.

AUTO setting:

- Select **TIME ZONE** by pressing S1/3 and then press S5/S7 to enter. There are 106 cities to select in this time zone setting.
- Select **DST ON** or **OFF** by pressing S1/S3 and then press S5/S7 to enter.
- The watch will display the **CONFIRM** screen and then go back to view 1 of Time 1

MANUAL setting:

- Set the **HOUR** by pressing S1/3 and then press S5/S7 to enter.
- Set the **Minute** by pressing S1/3 and then press S5/S7 to enter.
- Set the **SECOND** by pressing S1/3 and then press S5/S7 to enter.
- Set the **YEAR** by pressing S1/3 and then press S5/S7 to enter.
- Set the **MONTH** by pressing S1/3 and then press S5/S7 to enter.
- Set the **DATE** by pressing S1/3 and then press S5/S7 to enter.
- Set the **12/24 hour** by pressing S1/3 and then press S5/S7 to enter.
- The watch will display the **CONFIRM** screen.

TIME 2 setting in SET MODE:

You have two options in setting the watch, **AUTO** or **MANUAL**. In manual setting, you can manually set the time. If you select the **AUTO** option, the watch will be automatically set base on the data from GPS satellites.

The procedure in setting time 2 is the same with time 1 setting.

12/24 hour Display format setting:

You can select **12H** or **24H** format. Press S5 to enter setting mode. Press S1 or S3 to select 12H or 24H format. Press S5 or S7 to confirm and exit.

EXERCISE MODES

The watch has the following major exercise modes: **RUN**, **Chronograph**, **HRM**, **Barometer**, **Altimeter** and **WAYPOINT** mode. After setting the watch and wearing your HRM belt, the user can now start doing the various exercise modes.

RUN mode:

Press S1 or S7 from **Time** mode to enter **RUN** mode. The watch will display the following in succession:

RUN → **RUN/ GPS / INDOOR** → **LOCATING SATELLITES** → **BATTERY** level → **DATA TRACK MEMORY** → **view 1** of **RUN** mode

If the power level of the battery is low, the GPS cannot be turned on. The watch will display **BATT.LOW**.

Different views in Run mode:

Following are the various views that User can choose by pressing S5 in **CHRO** mode.

View 1 → Exercise time / Distance / HR%Max (This view is hidden if HR belt is not linked)

View 2 → Exercise Time/ Distance / Clock

View 3 → Exercise Time/ Distance/ Speed

View 4 → Exercise Time/ Distance / Pace

View 5 → Exercise time/ Distance/ Calorie

View 6 → Exercise time/ Speed/ HR%Max

View 7 → Exercise time/ Distance/ Altitude

View 8 → Exercise time/ ASC/DSC/ Temperature

View 9 → Track view (Exercise time/Speed/Distance/ HR icon or auto Route scale).

Notes:

- When you enter Run mode and the GPS signal is not yet received, the watch will display **LOCATING SATELLITE**.
- While in Run mode, then the GPS signal suddenly becomes weak for any reason, the watch will display **LOST GPS** signal until it receives GPS signal again.

CHRONOGRAPH mode:

Press S7 from **RUN** mode to enter **CHRONOGRAPH** mode. **RUN** and **CHRONOGRAPH** modes have the same timer counter. When the chronograph is started or stopped in **RUN** mode, the same thing happens in **Chronograph** mode. They just differ in the views when you press S5. This mode is dedicated to chronograph, lap time, exercise time, Heart rate, and distance travelled. The watch will display the following in succession:

CHRO → **RUN/ GPS/ INDOOR** → **LOCATING SATELLITES** → **BATTERY** level → **DATA TRACK MEMORY** → **view 1** of **CHRONOGRAPH** mode

If the power level of the battery is low, the GPS cannot be turned on. The watch will display **BATT.LOW** after the screen **GPS OFF**.

Different views in CHRO mode:

Following are the various views that User can choose by pressing S5 in **CHRO** mode.

View 1 → Lap / HR%Max / Exercise Time (This view is hidden if HR belt is not linked)

View 2 → Lap/ Distance/ Exercise Time

View 3 → Lap Time/ Exercise Time

View 4 → Lap Time

HRM mode:

Press S7 from **CHRONOGRAPH** mode to enter **HRM** mode. **RUN** and **HRM** modes have the same timer counter. When the chronograph is started or stopped in **RUN** mode, the same thing happens in **HRM** mode. They just differ in the views when you press S5. This mode is dedicated to **HRM** views. The watch will display the following in succession:

HRM → **RUN/ GPS/ INDOOR** → **LOCATING SATELLITES** → **BATTERY** level → **DATA TRACK MEMORY** → **view 1** of **HRM** mode



If the power level of the battery is low, the GPS cannot be turned on. The watch will display **BATT.LOW**.

Different views in HRM mode:

Following are the various views that User can choose by pressing S5 in **HRM** mode.

- View 1 → Exercise Time/ HRM %Max/ Calorie
- View 2 → Exercise Time/ HRM %Max/ In Zone
- View 3 → Exercise Time/ HRM %Max/ Distance
- View 4 → Exercise Time/ HRM %Max/ Clock
- View 5 → Exercise Time/ HRM %Max/ Speed
- View 6 → Exercise Time/ HRM %Max/ Pace

ROUTE mode:

Press S7 from **HRM** mode to enter **ROUTE** mode. RUN and ROUTE modes have the same timer counter. When the chronograph is started or stopped in RUN mode, the same thing happens in Route mode. They just differ in the views when you press S5. This mode is dedicated to track map view. The watch will display the following in succession:

HRM → RUN/ GPS/ INDOORF → LOCATING SATELLITES → BATTERY level → DATA TRACK MEMORY → Track map with Speed, Distance, Exercise time and Auto Route scale.

If the power level of the battery is low, the GPS cannot be turned on. The watch will display **BATT.LOW**.

BAROMETER mode:

Press S7 from **ROUTE** mode to enter **Barometer** mode. The watch will momentarily display BARO and then display Temperature/ Sea Level/ Current Barometric pressure. Press S5 to change view to 24 hour recall view. Press S1/S3 to change the hourly record for the past 24 hours. Press S7 to exit.

Note: The thermometer takes a reading once every minute. Pressure sensor range is 300 to 1,100 mbar /Hpa.

ALTIMETER mode:

Press S7 from **Barometer** mode to enter **Altimeter** mode. RUN and Altimeter modes have the same timer counter. When the chronograph is started or stopped in RUN mode, the same thing happens in Altimeter mode. They just differ in the views when you press S5. This mode is dedicated to Altitude related views. The watch will display the following in succession:

HRM → RUN/ GPS ON / GPS OFF → LOCATING SATELLITES → BATTERY level → DATA TRACK MEMORY → view 1 of ALTI mode

If the power level of the battery is low, the GPS cannot be turned on. The watch will display **BATT.LOW** after the screen **GPS OFF**.

Different views in ALTI mode:

Following are the various views that User can choose by pressing S5 in **ALTI** mode.

- View 1 → Exercise Time/ Altitude/ Distance
- View 2 → Exercise Time/ Altitude/ Slope
- View 3 → Exercise Time/ Difference/ Asc/Dsc Speed
- View 4 → Exercise Time/ Altitude/ temperature
- View 5 → Ascending/ Descending / Altitude
- View 6 → Exercise Time/ Altitude/ Clock
- View 7 → Exercise Time/ Altitude / Speed
- View 8 → Exercise Time/ Altitude / Pace
- View 9 → Exercise Time/ Altitude / Calorie
- View 10 → Exercise Time/ Altitude / HR% Max

RUN DATA MODE

Press S7 from **ALTI** mode to enter **Run DATA** mode. The watch will display the Data list view. In this view you can see how many files are saved in RUN data. The watch will show the list of data files with newest on the top of the list.

1. Press S1/S3 to scroll thru the list.
2. Press S5 to enter the selected data file. Press S7 to exit.
3. Press S1/S3 to view the details of the data file. Following are the details available:
 - Start/ End Time/ Trip Distance
 - Speed Data (Exercise time/ Distance/ Ave Speed/PACE/ HR)
 - Exercise Time/ Average Speed/ Average Pace
 - Total Ascending/ Descending
 - Maximum/ Minimum Altitude
 - Track Map- If GPS is OFF during making the data, this view is hidden
 - Lap 1 Time/ Distance/ ave speed / ave HR
 - Lap 2 Time/ Distance/ ave speed / ave HR
 - Lap 3... ETC...
4. Press S7 to exit

Data numbering system/ Legend:

Following is the data numbering system.

Sample data number: **0704102 G**



- 07 - Month
- 04 - Day
- 1 - Data is referred to Time 1 or 2 for Time 2
- 02 - File number of the day
- G - Data with track from GPS (if replaced with H- data w/o track, w/o GPS)

Data mode Sub-modes

Press S5 from any view in Data mode to enter the sub modes. Following are the sub modes:

- GO BACK**
- VIEW**
- EDIT**
- DELETE**
- DEL ALL**
- EXIT**


Press S1/S3 to scroll thru these sub modes.

GO BACK sub-mode:

GO BACK function means going from current location to the starting point of the selected data track. See below table for more details. User cannot use this function if GPS is OFF.

1. Select the **GO BACK** sub mode and Press S5 to start. Chronograph will start and 2 seconds later, the watch will display view 1 with the remaining distance to the destination and the chronograph time.
2. Press S5 to change view to track map (View 2). Press S5 to change view to view 3 with Speed, HRM, and Exercise time. Continue pressing S5 to change views. The views are the same with RUN mode views except for views 1 and 2.
3. Press S1 to take Lap. When Auto lap is ON, the watch will automatically take laps based on the settings.
4. Press S3 to stop. Press S1 to re-start.
5. While the chronograph is stopped, press S3 to save the current Track.
6. While Chronograph is running, you can change views by pressing S5.

At the upper right side of the screen or lower left side, there is an indicator whether you are in GO BACK, GOTO function, or you have exceeded your destination.

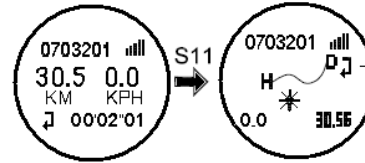

Icon	Function	Definition	
	GO BACK	from end point to starting point.(RunData)	from current location to starting point.
	Exceed destination while Go back or Goto	when you exceed your destination	when you are away from your destination.

If there is no GPS signal, or the Run mode is running, you cannot use the GO BACK or GOTO function.

When the Chronograph mode is running in the background and the user wants to use the GO BACK function, the watch will display below to remind the user to stop the Chronograph first before going to GO BACK function.



When you arrived at your destination, the watch will display "ARRIVED DEST".

VIEW sub-mode:

Press S5 to enter view mode then Press S1/S3 to change views.

EDIT sub-mode:

1. Press S5 to edit the name of the data file.
2. Press S1/S3 to change values of the highlighted digit.
3. Press S5 to set the next digit. Press S7 to exit setting mode.

DELETE sub-mode:

1. Press S5 to enter delete sub mode. The watch will display the data list. In this view, the oldest file is on the top of the list. At the bottom of the list is the **DEL ALL** option.
2. Press S1/S3 to select which file to delete.
3. Press S5 to confirm delete.

WAYPOINT mode

Press S7 from Run Data mode to enter Waypoint mode. The watch will momentarily display WAYPOINT and then display the list of saved waypoints. If there are no waypoints saved in memory, the watch will display "NO DATA". In Waypoints mode, Press S5 to choose your saved waypoint. Press S1 / S3 to select or view various waypoints in memory. The "DELETE" selection will display after the last waypoint. Press S5 to delete all Waypoints. The watch will ask for your confirmation, YES or NO. Press S1/S3 to choose, Press S5 to CONFIRM.



Going to your saved WAYPOINT

At Waypoint Mode, Press S1 / S3 to select a desired Waypoint. Press S5 to choose a waypoint. After pressing S5 you will be prompted with **GOTO / EDIT / DELETE** options. Press S1 / S3 to scroll thru these options. Press S5 to confirm. If there is no GPS signal, the user cannot use the **GOTO** waypoint function.

Choose **GOTO** to start your exercise. You will be going from your current location to the coordinates of the selected Waypoint.

Choose **EDIT** to change the name of the saved Waypoint.

Choose **DELETE** to delete the selected Waypoint.

GOTO function:

1. Press S5 to confirm start after selecting the GOTO function. Chronograph will start running. 2 seconds later, the watch will the remaining distance to your destination and the chronograph time. 3 seconds later, the watch will display the electronic map of your current location and destination.
2. Press S5 to change views. The views when you press S5 are the same views in RUN modes except for View 1 and View 2
3. Upon selecting your view, you have started your exercise. Press S1 to take Lap, when Auto lap is ON, the watch will automatically take lap. You will also hear a beep sound.
4. Press S3 to stop. While chronograph is stopped, press S3 to save data.

At the lower left side of the screen, there is an icon to signify you are in GOTO function, or you have exceeded your destination.



	GOTO	from starting point to end point.(Waypoint)	from current location to end point
	Exceed destination while Go back or Goto	when you exceed your destination	when you are away from your destination.

If there is no GPS signal, or the Run is running, you cannot use the **GOTO** function.

When you arrived at your destination, the watch will display '**ARRIVED DEST**'.

Saving your WAYPOINT

1. Press and hold S11 from any view then release. The watch will display the locations' coordinates (Latitude, longitude, and Altitude). 3 seconds later it will prompt the user to save the location. The default name of the saved waypoint is the date of Time 1. The

format (sample: 001 072201) The first 3 digits are for the Data file number, the second two digits means for the month, the next two digits means for the day and the last two digits means the number for the day.


2. Press S1/S3 to select data to edit.
3. Press S5 to enter.
4. Press S5 again to edit the first digit.
5. Press S1/S3 to edit individual digits. You can edit the location name up to 7 digits.
6. Press S5 to set the next digit.
7. Press S7 to exit setting mode. After saving the location name, it will be saved in the Waypoints list. Maximum of 100 locations can be saved in memory.

When the user is saving the waypoint and the watch is not receiving the GPS signal, it will display "GPS NOT AVAILABLE".

SET MODE

Press S7 from **Waypoint** mode to **Set** mode. seconds later the watch will display the setting options: **AUTOLAP / TIME / UNITS / USER / HRM / HRM LINK / HRM On/Off / ALTI / BARO / DISPLAY / NIGHT / CONTRAST / KEY TONE/ ALARM / PROD ID / EXIT**. Press S1/S3 to scroll through these options. Press S5 to enter selected option to set. Press S7 to exit to Time mode.

If there is no key operation after 1 minute in this mode, the watch will auto exit to Time mode.

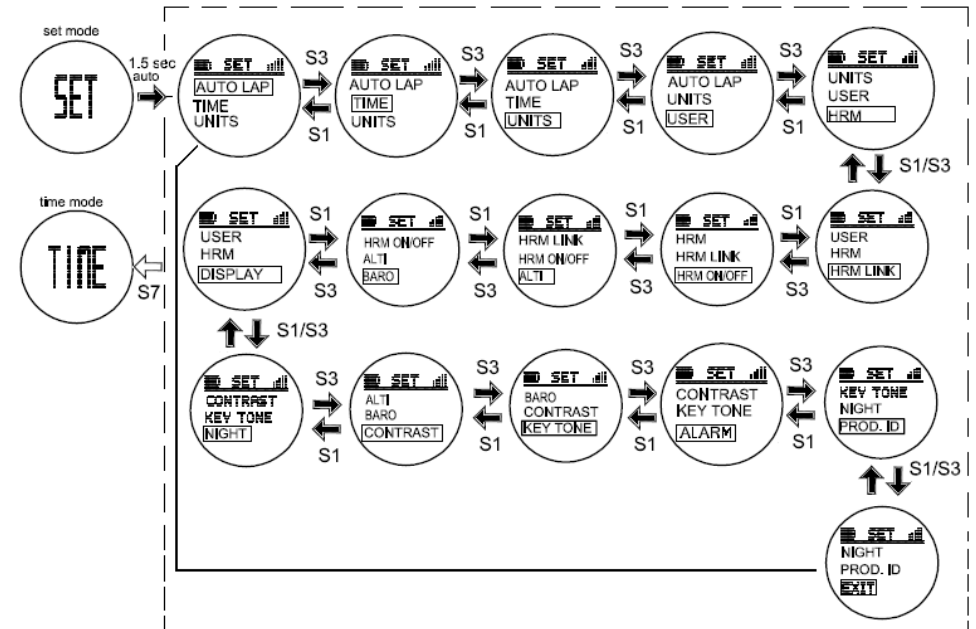



TIME setting in SET mode:

TIME sub modes:

Press S5 to enter the time sub mode. In these sub modes, you can set the **TIME 1**, **TIME 2**, **Time zone**, etc. Press S1/S3 to scroll through these sub modes.

TIME 1 setting:

You have two options in setting the watch, **AUTO** or **MANUAL**. In manual setting, you can manually set the time. If you select the AUTO option, the watch will be automatically set base on the data and time data from GPS satellites.

- Select **TIME 1** by pressing S5
- Select **AUTO** or **MANUAL setting** by pressing S1 or S3 and then press S5 to enter.

AUTO setting:

- Select **TIME ZONE** by pressing S1/S3 and then press S5/S7 to enter. There are 106 cities to select in this time zone setting.
- Select **DST ON** or **OFF** by pressing S1/S3 and then press S5/S7 to enter.
- Select 12H or 24H format setting by pressing S1/S3. Press S5/S7 to enter.
- The watch will display the **CONFIRM** screen.

MANUAL setting:

- Set the **HOURL** by pressing S1/S3 and then press S5/S7 to enter.
- Set the **Minute** by pressing S1/S3 and then press S5/S7 to enter.
- Set the **SECOND** by pressing S1/S3 and then press S5/S7 to enter.
- Set the **YEAR** by pressing S1/S3 and then press S5/S7 to enter.
- Set the **MONTH** by pressing S1/S3 and then press S5/S7 to enter.
- Set the **DATE** by pressing S1/S3 and then press S5/S7 to enter.
- Set the **12/24H** by pressing S1/S3 and then press S5/S7 to enter.
- The watch will display the **CONFIRM** screen.

TIME 2 setting:

You have two options in setting the watch, **AUTO** or **MANUAL**. In manual setting, you can manually set the time. If you select the AUTO option, the watch will be automatically set base on the data and time data from GPS satellites.

The procedure in setting time 2 is the same with time 1 setting.

12H/24H format setting:

You can select **12H** or **24H** format. Press S5 to enter setting mode. Press S1 or S3 to select 12H or 24H format. Press S5 or S7 to confirm and exit.

AUTOLAP setting:

You can use auto lap to automatically take the lap at specific traveled distance. This setting is helpful for comparing your performance over different part of the RUN.

To set the Auto lap:

1. Press S5 to set the Auto lap.
2. Press S1/S3 to select the various settings. Following are the auto lap preset range: OFF, 0.5 Km, 1 Km, 2 Km, 3 Km, 4 km and 5 Km. Default value is 1.0 KM.
3. Press S5/S7 to save the selection and exit.

UNITS setting:

1. Press S5 to enter UNITS setting
2. Press S1/S3 to change the Units
3. Press S5/S7 to accept selected unit and exit.

Units: KM/M/KG or MI/FT/LBS

Setting the User's information:

1. Press S5 to enter USER setting. GENDER parameter will be displayed.
2. Press S5 again to set the parameter. The parameters to set are Gender → AGE → WEIGHT → HEIGHT.
3. Press S1/S3 to change values.
4. Press S7 to exit

Weigh range : 20 to 255 Kg (44 to 561 Lbs)

Height range: 89-241 cm(2'11"- 8'00" ft' inch")

Age Range : 7 to 99

Gender : Male or Female

HRM setting:

You can set the HR zones and Zone alarm here.

1. Press S5 to enter HR Zone setting
2. Press S1/S3 to change values Zone 1 to 3
3. Press S5 to set the Low limit of the selected zone.
4. Press S1/S3 to change the Low Limit value. There is a default value but you change it if you want.
5. Press S5 to accept the setting and set the High limit of the selected zone.
6. Press S1/S3 to change the High Limit value. There is a default value but you change it if you want.
7. Press S5 to accept the value and set the Zone Alarm.
8. Press S1/S3 to turn ON or OFF the Alarm.
9. Press S5/S7 to accept and exit.

Heart rate range: 30 to 240 BPM

Low Limit setting range = 30 BPM to High limit value

High Limit setting range = Low Limit Value to 240 BPM

Max HR = 220- Age

HR Zone Table:

Zone	1	2	3
% of Max HR	60~70	70~80	80~90



HRM LINK setting:

Press S5 to start linking your HRM belt. The watch will display the old HRM ID and then start searching for new HRM ID. If a new belt ID is found, it will display new the ID and then prompt the user to use the new ID (YES or NO). If you select NO by pressing S1/S3, it will use the OLD ID and go to **RUN** mode.

HRM ON or OFF setting:

1. Press S5 to enter HRM ON/ OFF setting.
2. Press S1/S3 to turn ON or OFF the HRM.
3. Press S5 to accept and exit.

Altimeter setting:

You can set the Current Altitude.

1. Press S5 to enter Altimeter setting.
2. Press S1/S3 to set your current Altitude.
3. Press S5 to accept value and exit.

BAROMETER setting:

You can set the current weather and barometric pressure here.

1. Press S5 to set the current weather.
2. Press S1/S3 to change values.
3. Press S5 to set the Sea level barometric pressure.
4. Press S1/S3 to change values.
5. Press S5 to set the UNIT for Temperature
6. Press S1/S3 to change deg C to deg F or vice versa.
7. Press S5 to accept the value and exit.

Setting the DISPLAY:

1. Press S5 to enter.
2. Press S1/S3 to turn ON or OFF the **2 line views** and /or the **4 line views**.
3. Press S5/S7 to confirm setting.

Contrast setting:

Contrast Range is 0 to 100%.

1. Press S5 to enter Contrast setting.
2. Press S1/S3 to change values. The range is 0 to 100%.
3. Press S5 to accept and exit.

Key tone setting:

You can set the key tone ON or OFF. If key tone is on, there is confirmation sound every time you press a button.

1. Press S5 to enter Key tone setting.
2. Press S1/S3 to turn ON or OFF
3. Press S5 to accept and exit.

Alarm setting:

- Select **ALARM** by pressing S5
- Select **ALARM 1** to **ALARM 5** by pressing S1 or S3 and then press S5 to enter.
- Set the **HOURLY**. Press S1/S3 to change values. Press S5 to enter
- Set the **MINUTE**. Press S1/S3 to change values. Press S5 to enter
- Set the alarm time referred to **T1** or **T2**. Press S1/S3 to change values. Press S5 to enter
- Set the alarm **ON** or **OFF**. Press S1/S3 to change values. Press S5 to enter
- Press S7 to exit alarm setting

Night mode setting:

Press S5 to enter Night setting. Press S1/S3 to Select **PUSH ON** or **STAY OFF**.

PUSH ON – Pressing any key will turn ON the EL for 10 seconds from 6:00 pm to 7:00 am every day.

STAY ON – EL back light will be continuous ON from 6 am to 7 pm if GPS is ON and Chronograph is running.

Outside the time frame from 6 pm to 7 am, only press S5 can turn ON the EI for 10 seconds.

Viewing PRODUCT ID:

Press S5 when PROD. ID is highlighted to View the current Software code of the watch. Press S7 to exit.

EXIT :

Press S5 or S7 to exit to Time mode. Nothing to set here.

Battery:

Watch is using a rechargeable Lithium Ion battery that will require approximately 4 hours charging time using the USB cable. While battery is charging, the watch cannot be used and all buttons are disabled. User needs to recharge the battery when the watch indicates a low battery level.

Battery Life: Approximately 8 hrs minimum in training mode.



GPS watch troubleshooting guide:

PROBLEM/ QUESTION	SOLUTION/ ANSWER
I cannot get a GPS signal	Take your GPS watch outdoors and away from trees and tall buildings. Remain stationary and try acquiring GPS signal again. Be sure that the antenna is pointing towards the sky for better signal reception.
Can I reset the watch?	You can reset the watch by pressing S1, S5, S7, and S11 together. The date and time will be reset to default values. You can set it again manually or automatically thru GPS.
Will my data and personal settings be lost after watch reset?	Your data and personal settings are saved in the flash memory and will not be lost after watch reset.
The battery indicator does not seem to be accurate	Allow your GPS watch to fully discharge and then fully charge it without interruption. It is recommended to regularly re-charge your battery every 1-2 months even if it is not used to maintain good battery condition.
My heart rate data seems inaccurate.	<ul style="list-style-type: none">- Make sure the HR belt is snugly fit to your body- Reapply water, saliva, or electrode gel to the electrode of the HR belt- Clean the electrodes from possible contamination that may interfere with heart rate signals- Wear a cotton shirt or if possible, wet your cotton shirt. Synthetic fabrics that rubs with your skin may create static electricity and interfere with the heart rate signal- Move away from strong electromagnetic fields and other wireless sensors which can interfere with your heart rate sensor. Possible sources of wireless interference may include high voltage power lines, electric motors, microwave ovens, cordless phones, and wireless LAN or access points.



City code Table:

Following is the list of city codes used in view 3 of Time mode and the corresponding differential time with respect to GMT:

GMT Differential	CITY CODE	CITY
-11	PPG	PAGO PAGO
-10	HNL	HONOLULU
	PPT	PAPEETE
-9	ANC	ANCHORAGE
-8	YVR	VANCOUVER
	SFO	SAN FRANCISCO
	LAX	LOS ANGELES
	LAS	LAS VEGAS
	SEA	SEATTLE
	US-P	Pacific standard Time
-7	DEN	DENVER
	ELP	EL PASO
	US-M	Mountain Standard time
-6	MEX	MEXICO CITY
	CHI	CHICAGO
	HOU	HOUSTON
	DFW	DALLAS/ FORT WORTH
	MSY	NEW ORLEANS
	YWG	WINNIPEG
	US-C	Central Standard Time
-5	MIA	MIAMI
	NYC	NEW YORK
	YUL	MONTREAL

GMT Differential	CITY CODE	CITY
-5	DTW	DETROIT
	BOS	BOSTON
	PTY	PANAMA CITY
	HAV	HAVANA
	ATL	ATLANTA
	YYZ	TORONTO
	WAS	WASHINGTON
	US-E	Eastern Standard time
-4	CCS	CARACAS
	LPB	LA PAZ
	SCL	SANTIAGO
-3	RIO	RIO DE JANEIRO
	GRU	SAO PAULO
	BUE	BUENOS AIRES
	BSB	BRASILIA
	MVD	MONTEVIDEO
0	LON	LONDON
	DUB	DUBLIN
	LIS	LISBON
	CAS	CASABLANCA
	DKR	DAKAR
	ABJ	ABIDJAN
+1	PAR	PARIS
	MIL	MILAN
	ROM	ROME
	BER	BERLIN
	MAD	MADRID
	FRA	FRANKFURT

GMT Differential	CITY CODE	CITY
+1	AMS	AMSTERDAM
	VIE	VIENNA
	ALG	ALGIERS
	STO	STOCKHOLM
	HAM	HAMBURG
	ZRH	ZURICH
+2	IST	ISTANBUL
	CAI	CAIRO
	JRS	JERUSALEM
	ATH	ATHENS
	HEL	HELSINKI
	DAM	DAMASCUS
+3	CPT	CAPE TOWN
	JED	JEDDAH
	MOW	MOSCOW
	KWI	KUWAIT
	ADD	ADDIS ABABA
+3.5	NBO	NAIROBI
	THR	TEHRAN
	SYZ	SHIRAZ
+4	DXB	DUBAI
	AUH	ABU DHABI
+4.5	MCT	MUSCAT
	KBL	KABUL
+5	KHI	KARACHI
	MLE	MALE
+5.5	DEL	DELHI
	BOM	MUMBAI

GMT Differential	CITY CODE	CITY
+6	DAC	DHAKA
	CMB	COLOMBO
+6.5	RGN	YANGON
+7	BKK	BANGKOK
	JKT	JAKARTA
+7	PNH	PHNOM PENH
	HAN	HANOI
+8	SIN	SINGAPORE
	HKG	HONG KONG
	KUL	KUALA LUMPUR
	TPE	TAIPEI
	PER	PERTH
	PEK	BEIJING
+9	MNL	MANILA
	SHA	SHANGHAI
	SEL	SEOUL
+9.5	TYO	TOKYO
	ADL	ADELAIDE
+10	DRW	DARWIN
	GUM	GUAM
	SYD	SYDNEY
+11	MEL	MELBOURNE
	NOU	NOUMEA
+12	WLG	WELLINGTON
	CHC	CHRISTCHURCH
	NAN	NADI
	AKL	AUCKLAND



GPS NE PRO PC software

Your GPS watch comes with PC software. This software is compatible with the following operating system:

- Windows 7
- Windows XP SP 1, 2, 3
- Windows Vista SP 1, 2
- Windows 2000 SP 4
- Windows 98


You can use the software to view and analyze your data.

A) Software installation:


- 1) Install the GPS NE PRO PC software to your computer. The installer is bundled in the box with your GPS watch.
- 2) Follow the installation guide of the software. This is just a simple installation procedure. You will be prompt on what drive you want to install the software. Default location is Program files\GPS NE PRO. You may change the location if you wish.
- 3) Click FINISH to complete the installation.
- 4) You may need to re-start your PC after installation.
- 5) GPS NE PRO icon will be placed in your desktop after installation.

B) How to use the software:

- 1) Run the software by double clicking the icon on your desktop. The welcome screen will appear on your desktop.
- 2) Clip the USB cable to your watch. This is the same cable used to charge the battery of the GPS watch. Make sure the four pins of the clip have a good connection to the four electrical contacts at the back of the watch.
- 3) Connect the USB cable to the USB port of your PC. The first time you do this, the PC will automatically install the drivers for the device.
- 4) The Software will prompt you to download the data.

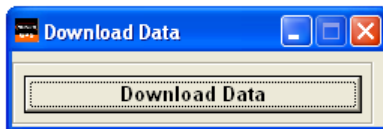


- 5) Click on the Download Data tab. Data will be automatically downloaded to your PC. If there no proper contact between the USB clip and the watch, an error may occur and the software will prompt you to check the cable. Repeat the downloading after checking the cable.

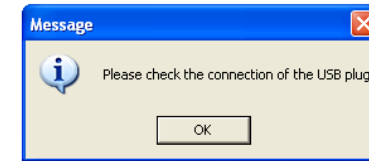


- 6) After downloading the data, the software will prompt you to delete all data in the GPS watch. Default option is NO.

WARNING! If you select yes, all data in the watch will be deleted.

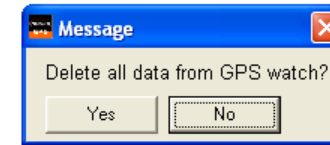

- 7) Click the ENTER tab to open Home page below

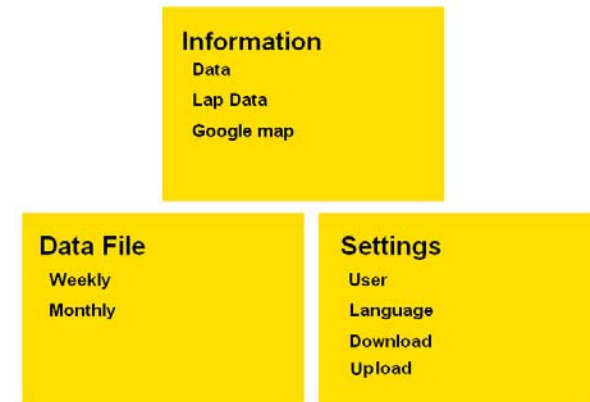

- 8) Click on any of the tabs to open up the desired window. A new window will open with the various tabs. Click any of the tabs to view your activity.





FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.