Pioneer DDJ-T1


[For Mac] Upgrading from TRAKTOR T1 EDITION to TRAKTOR PRO

- A connection to the Internet is required to perform the procedure below. TRAKTOR is a registered trademark of Native Instruments
- Launch TRAKTOR T1 EDITION.
- From the TRAKTOR Help menu, select [Upgrade].




TRAKTOR guits, then Service Center launches.


Input your e-mail address and password to log in.

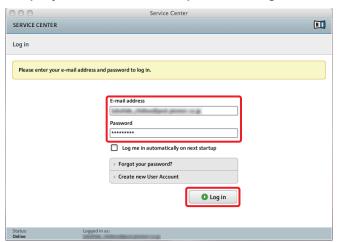

Input the TRAKTOR PRO/SCRATCH PRO serial number, then click the activate button.

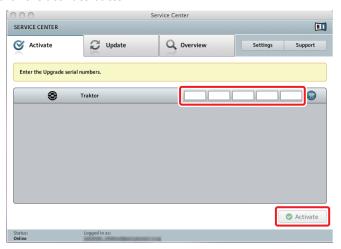

5. When "All the selected products have been activated." is displayed, activation is completed.

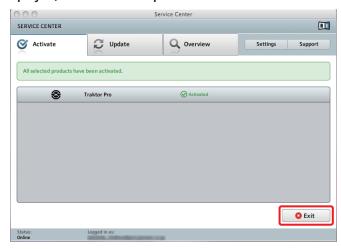

[Reference] Flow for launching TRAKTOR PRO the first time

1. When TRAKTOR PRO is launched the first time, the Setup Wizard opens.



2. USB controller is correct, so select [Yes].



3. Select [Pioneer] and [DDJ-T1].



4. If not using the NI audio interface, select [No].



5. This completes the initial setup.







NOTE:

The preferences are reset after upgrading.

Note that the audio settings below are required at a minimum in order to use the DDJ-T1.


(1) Audio Setup

Audio Device : PIONEER DDJ-T1



(2) Output Routing

- Mixing Mode : Internal
- Output Monitor:
 - L 3: DDJ-T1 PHONES L R 4: DDJ-T1 PHONES R
- Output Master:
 - 1: DDJ-T1 MASTER L
 - R 2: DDJ-T1 MASTER R

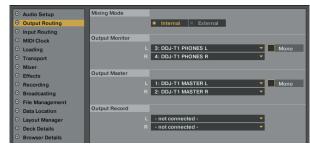

(3) Input Routing

Below are the initial settings of TRAKTOR PIONEER DDJ-T1 EDITION.
If you were using the external inputs with the initial settings, please make the settings below.

These settings are not required if you will not be using the external inputs.

- Input Channel D:
 - L 1: DDJ-T1 AUX/MIC L
 - R 2: DDJ-T1 AUX/MIC R

