


HALO

INSTALLATION INSTRUCTIONS FOR HALO-2 SERIES L2001 12V POWER SUPPLY FOR USE WITH HALO TRACK SYSTEMS ONLY


To Adjust Halo-2 Series L2001 12V Power Supply

Halo-2 L2001 Power Supply can be used with Halo Miniature or Halo-2 Power-Trac systems. An adjustable contact allows you to select the circuit position. Use a narrow blade screwdriver, as shown, to adjust the contact. Lift or lower the contact until it touches the plastic stop of contact assembly. For Circuit #1 move contact to the down position. For Circuit #2 move contact to the up position.

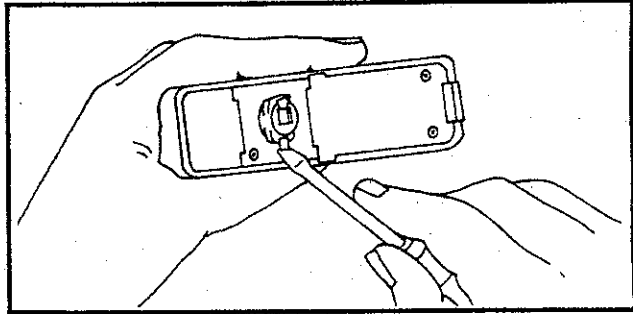



To Use Halo-2 L2001 12V Power Supply with Miniature Power-Trac

When using Halo-2 L2001 with the Miniature Power-Trac System (L650, L651, L652, L653) adjustable contact must be in Circuit #1 (DOWN) position.

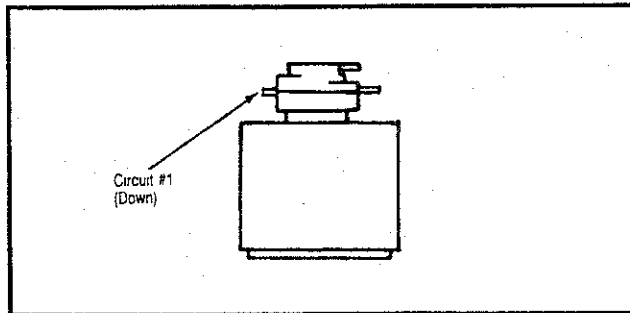

To Use Halo-2 L2001 12V Power Supply with Halo-2 Power-Trac

When using Halo-2 L2001 with the Halo-2 Power-Trac System (L640, L641, L642, L643) adjust the contact position of each lampholder to the desired circuit — Circuit #1 (DOWN) or Circuit #2 (UP).

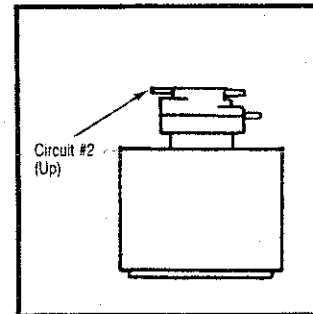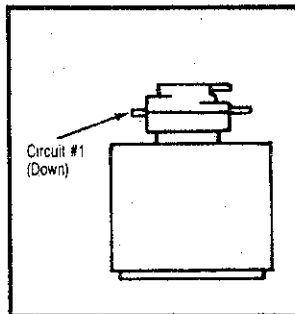

COOPER
Cooper Lighting

Halo • 400 Busse Road • Elk Grove Village, IL • 60007 699977

HALO

WARNING:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a RF lighting device, pursuant to Part 18 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- Consult the dealer or an experienced radio/TV technician for help.

MAINTENANCE:

No serviceable parts inside the Power Supply Unit. Contact factory for service. Opening unit will void warranty.

Disconnect the Power Supply from the Halo Track System when not to be used for a long period. Disconnect power before servicing.

Allow lamp to cool down before changing to avoid getting burn.