

E-Reader Device

Model name: E60QP2

Thank you for choosing this E Reader Device. Before using your e-reader, carefully read this quick-start guide.

Box contents:

Before using your this Device for the first time, please check the content of the package. If any of the following items is not in the package, contact the retailer where you purchased the device.

- E Reader
- microUSB-USB cable
- Documentation

INSTRUCTIONS

To properly use the device, carefully read this quick-start guide before using it. Instructions are based on factory settings of the device.

Images and screenshots in this guide may not exactly match those of the final product.

Parts of the content may not exactly match the operation of the product owing to firmware updates of the device.

This Device is not liable for any performance problems or incompatibilities caused by the user's editing of the registry.


Part of the content and services accessed through this device belong to third parties and are protected by copyright, patent, registered trademark and/or other intellectual property laws. This device does not guarantee the content or the services provided.

Trademarks

Other Trademarks and their copyrights are property of their respective owners.

General views of the device

Buttons and ports

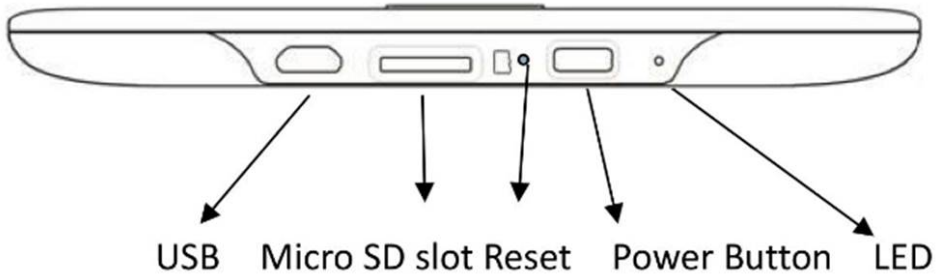

■ **Power Button**

Long press the power button 3 seconds and wait for device power on. To switch it off, Press and hold down the button and choose the "√" option. To activate the Sleep mode, please press the power button. And press it again to resume reading.

■ **Reset hole**


Reset the device.

■ **microSD card slot**

Allows you to insert a microSD card and access the files stored on it.

■ **microUSB port**

Allows you to connect your Device to a computer in order to transfer files. You can also use the microUSB cable to charge your device.

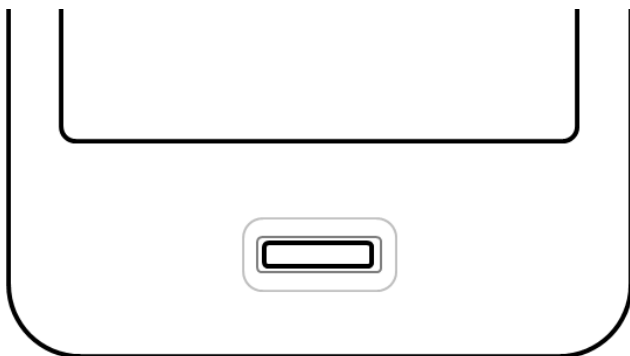

■ **Home**

Takes you back to the Home screen.

SET UP

When you turn on your e-reader, you have to select your language, connect Wi-Fi and create an account to link your device (or use an already existing account).

If you have registered before with other device, you can access by entering your e-mail address and password.

If you have not registered before, you will need to create an account. You will be asked to provide an e-mail address, password and bank-card details (optional) for the Store.

If you have made purchases or downloaded items from the Store before, these will appear directly in the Library.

Remember that the device must be connected to the Internet in order to link it and create an account.

GETTING STARTED

■ Battery

This device contains a rechargeable battery. To charge your device's battery use the micro USB cable included with your EREADER Device.

■ Switch on / switch off

Long press the Power button and wait for the device is on. To switch off, Press and hold till screen shows "√" option and select it.

To enter stand-by mode, slide the switch once. Slide the switch again to continue the reading.

If your device suffers an expected error, just press the reset hole on bottom side, and device will reboot itself.

You should fully charge the battery before using the E Reader Device for the first time. The charging time is approximately 8 hours.

The computer must be on, not in sleep mode during charging.

■ Insert / remove the microSD card

To install the microSD card, insert it in the slot and press until it clicks into place. To remove the microSD card, press it to remove it from the slot.

■ Transferring files

To transfer files from your e-reader to a computer or vice versa, do the following:

1. Connect the microUSB cable to the microUSB port on your e-reader and insert the USB connector into the USB port on the computer. The computer will identify the e-reader as a Removable storage device and the e-reader will temporarily become inoperative.
2. On the computer, select the files you wish to transfer to your e-reader and copy them onto the removable storage device.
3. Securely disconnect the USB to microUSB cable from the computer and e-reader.

Do not disconnect the cable while files are being copied. If you are transferring them to a microSD card inside the device, do not remove the card.

■ Home Page

From the Home Page you can access your current and recent reading material. You can also access your library, the store, configure your device's settings and connect to the Internet.

TOUCH SCREEN

Press the surface of the screen with your fingertips to select an element or menu. To read a book, go to the Library by pressing book icon.

If you have already started to read a book and you want to continue reading it, press the icon.

Next, press the icon of the book. It will open at the first page, or at the page you were last on if you have already started reading the book. To turn the page, slide the screen to right direction to go forward and the left direction side to go back. When you have finished reading, press the menu button to go back to the Library.

GO TO A PAGE Go directly to the page number selected.

APPEARANCE Allows change the size font in EPUB and PDF formats. You can also change the margins, line spacing, font and select the font to the publisher defaults in EPUB.

SEARCH Allows you to search for text in the book you are reading.

When a e-book is open, long-press on a word to access the context menu for reading. From here, you can:

■ Create note

This option allows you to add new notes to the book you are reading. Select Add note to bring up a virtual keyboard you can use to write your note. Once you have saved the note, the text you long-pressed on to create the note will remain highlighted and you can edit or delete the note click on it again.

■ Underline

This option underlines a word or sentence. To select more than one word, long-press on the first word of the text you wish to

■ Highlight and drag your finger to the end of the desired section.

■ Define

This option allows you to check the definition or translation of a word using the dictionary you have set as the default. You can change it at the time.

■ Search

Search the selected word in the eBook you are reading.

For eBooks in PDF format it is not possible to open dictionaries, underline text or add notes. Nor can you change the typeface or line spacing.

Wi-Fi CONNECTION

To browse the Internet you first need to connect the device to a Wi-Fi network, as follows:

1. Go to Settings > Wi-Fi Settings. Switch on Wi-Fi.
2. A list will appear, containing the names of the Wi-Fi networks (SSID) detected. Scroll down the list of available networks and press the name of the selected network.

Enter the password and press Connect. The Wi-Fi icon and signal intensity indicator will appear in the upper bar.

CTM Front lighting

With two kinds of front lighting color: cold-white and warm-white.
Users could set up the color temperature by software.

SAFETY PRECAUTIONS

- To use the device safely, please observe the following safety precautions:
- Do not use damaged power cords or connectors or loose sockets.
- Do not touch the power cord with wet hands or pull on the cord to disconnect the charger.
- Do not fold or damage the power cord.
- Do not use the device while charging or touch it with wet hands.
- Do not strike or drop the charger or battery.
- Do not charge the battery with chargers that have not been approved by the manufacturer.
- Do not use the device during a lightning storm.
- Do not handle damaged or leaky Li-ion batteries.
- Handle and dispose batteries and chargers with precaution.
- Do not use the device near a pacemaker: if possible, avoid using the device at a distance of less than 15 cm from the pacemaker, as the device may interfere with it.
- Do not use the device in a hospital or near medical equipment which is vulnerable to interference caused by radiofrequency.
- If you use medical equipment, contact the manufacturer to ensure that the equipment is protected from radiofrequency. If you use a hearing aid, contact the manufacturer for further information on radio interference.
- In potentially explosive environments, turn off the device instead of removing the battery. Observe all rules, instructions and warning signs in potentially explosive environments.
- Do not use the device in fuel loading areas (service stations) or near fuels or chemicals in explosive areas.
- Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the device, its parts or accessories.
- Turn off the device when on board a plane.
- Electronic devices in a motor vehicle may behave in a wrong way due to the device's radiofrequency.
- Operation temperature: 0°C~45°C

Cleaning

Before cleaning the device, turn it off and disconnect all the system and power cords.

- Ensure that the device is completely dry before connecting again the cords and turning it on.
- Do not use any cleaning liquids or sprays directly on the surface of the screen or the case.
- Use a soft, clean and lint-free cloth to remove dust and dirt from the screen. For fingerprints and stains, use a cloth with mild cleaning products.
- Moisten the cloth with clean water, wring it well and clean the case to remove any leftover detergent.



(Electric and electronic device waste)

(Applicable in the European Union and in European countries with selective waste collection systems).

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, easily separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

CORRECT DISPOSAL OF THIS PRODUCT

DECLARATION OF CONFORMITY

E Reader Device

complies with the provisions of Directive 2014/53/EU on the harmonisation of the laws of Member States relating to Electrical Equipment designed for use within certain voltage limits and Directive 2014/53/EU on Electromagnetic Compatibility complying with the harmonized standards:

EN 300 328 V2.1.1 (2016-11)

EN 50566: 2013 + AC: 2014

EN 62209-2:2010

EN 301 489-1 V2.1.1 (2017-02)

EN 301 489-17 V3.1.1 (2017-02)

EN 55032:2015+AC:2016

EN 55024:2010+A1:2015

EN 60950-1:2006+A11:2009+A1:2010+A12:2011+A2:2013

The frequency and maximum transmitted power in EU are listed as belows,
2412 - 2472 MHz: 19.96 Dbm

Manufacturer: NETRONIX, INC.

Manufacturer Address: NETRONIX, INC.

Federal Communication Commission Interference Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Radiation Exposure Statement:

The product comply with the FCC portable RF exposure limit set forth for an uncontrolled environment and are safe for intended operation as described in this manual. The further RF exposure reduction can be achieved if the product can be kept as far as possible from the user body or set the device to lower output power if such function is available.

Note: The country code selection is for non-US model only and is not available to all US model. Per FCC regulation, all WiFi product marketed in US must fixed to US operation channels only.