

Features – operated by the transmitter:

1. START: Move switch on bottom of vehicle to the "ON" position. The vehicle will automatically go in reverse turning action.
2. FORWARD: Press button continuously on transmitter.
3. REVERSE & TURNING: Release button.
4. STOP: Move switch on bottom of vehicle to the "OFF" position.

Batteries: (not included)

Vehicle – 2 "AA" size batteries are required, positioned in the base of the car.

Transmitter – 2 "AA" size batteries are required, positioned in the side of the transmitter.

Follow the illustration on the base of the battery compartments for correct placement of batteries.

Always replace all batteries. Do not store with batteries fitted. Alkaline batteries are recommended. Do not use rechargeable batteries. Do not mix alkaline, standard or rechargeable batteries.

The reception performance may be affected under a strong interference disturbance environment.

This product would not perform normally under a strong electrostatic environment.

In location subject to radio frequency interference, the product may malfunction and require you to reset the product.

We wish you many happy hours of pleasure with your New Bright toy.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ENGLISH

FCC CAUTION: The manufacturer is not responsible for radio interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

