


Battery Installation

1. Open the battery compartment cover of the controller.
2. Insert 6 AA alkaline batteries. Be sure the (+) and (-) are properly matched.
3. Replace battery compartment cover.

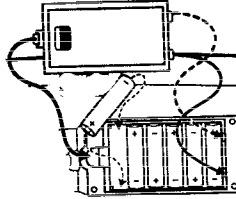


Charging the battery

1. Be sure the on/off switch of the controller and the plane is switched to the off position.
2. Plug the wire of the remote controller into the socket at the bottom of the plane. (white color socket near the on/off switch of the plane)
3. Red light on the controller will light up.
4. When charging is completed, red light will lights-out.
5. Disconnect the wire of the remote from the plane socket.

Features and Functions

1. Be sure to charge the plane before use.
2. Be sure the on/off switch of the controller and the plane is switched to the on position.
3. Pull Trigger A for flying forward.
4. Pull Trigger A and turn the Turn Wheel (B) for left and right steering.
5. Pull Trigger A and press the red button continuously for accelerating and climbing action.

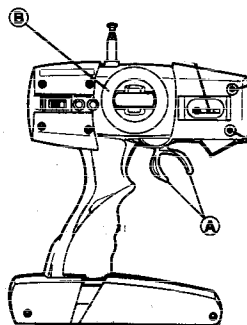

Do not mix old and new batteries.

Do not mix alkaline, standard or rechargeable batteries.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

F.C.C. CAUTION:

The manufacturer is not responsible for radio interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.



NEW BRIGHT

JN332-03