



NEW BRIGHT

CAUTION-ELECTRICALLY OPERATED PRODUCT:
NOT RECOMMENDED FOR CHILDREN UNDER 8 YEARS OF AGE.
AS WITH ALL ELECTRIC PRODUCTS, PRECAUTIONS SHOULD BE
OBSERVED DURING HANDLING AND USE TO PREVENT ELECTRIC
SHOCK. INPUT: 120V AC 60Hz 6.5W. OUTPUT: 11.6V DC 165mA.

9.6V NiCd
RECHARGEABLE

**Radio Control
Watercraft**

OWNERS MANUAL

Please read and understand all precautions prior to use.

Thank you for choosing a premium New Bright product.

We're here to help!

Call us toll free at **1-866-697-2869**

8:00 am - 5:00 pm E.S.T. Mon.- Fri.

Or visit us on line at www.newbright.com

Do not return this toy to the store!

*We stand behind our product. If you experience any difficulty assembling,
charging or operating this toy, please call us and let us help.*


Table of Contents

- Page 1: Table of Contents**
- Page 2: Component Checklist**
- Page 3: Charging the Battery**
- Page 4: Battery Installation in Watercraft**
- Page 5: Watercraft Features**
- Page 6: Watercraft Antenna Plug**
- Page 7: Transmitter Battery Installation
Transmitter Features**
- Page 8: Operating and Caring for Watercraft**
- Page 9: Proper Use
Precautions and Care**
- Page 10: Trouble Shooting**
- Page 11: Cautions**


To protect components from damage, they may be packed in the styrofoam tray out of plain sight. Please search styrofoam tray and remove all of the components shown below.




1

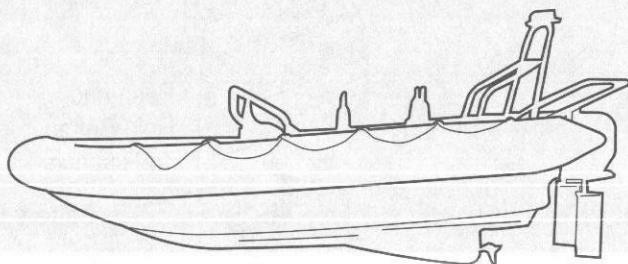

1

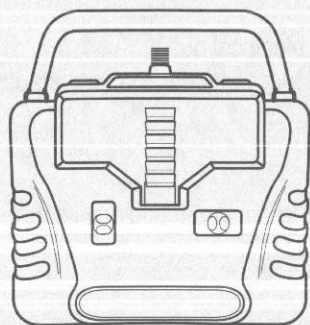

1

 


2

Charging the Battery

IMPORTANT!

The included 9.6V NiCd battery pack is NOT charged prior to shipment and must be charged at least 8 hours before the first use.

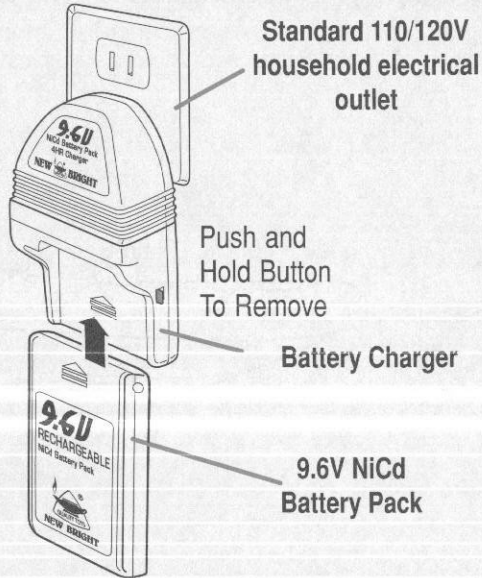

1. Plug the Charger into a standard 110/120V indoor electrical outlet.
2. Insert the 9.6V NiCd rechargeable battery pack securely into the charging cradle (as shown above). Be sure the arrows are properly matched.
3. Allow battery to charge for a minimum of 8 hours on the initial two charges. Subsequent charges require only 4 hours.
4. Charge will last approximately 15 minutes depending on terrain and driving style.
5. This power unit is intended to be correctly orientated in a vertical or floor mount position.

IMPORTANT: It is normal for the battery pack to become warm after charging and/or use. Be sure to allow the battery pack to cool before using or recharging. Recharging a warm battery pack will greatly reduce the battery life.

Battery pack can be charged up to 1,000 times!


ATTENTION PARENTS:

- The Battery Charger & Battery Pack need to be periodically examined for potential hazards. Any potentially hazardous parts need to be repaired or replaced.



Watercraft

Battery Pack Installation

4

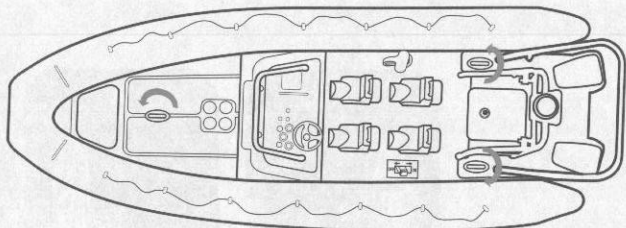

Twist tabs as shown to remove top of watercraft.

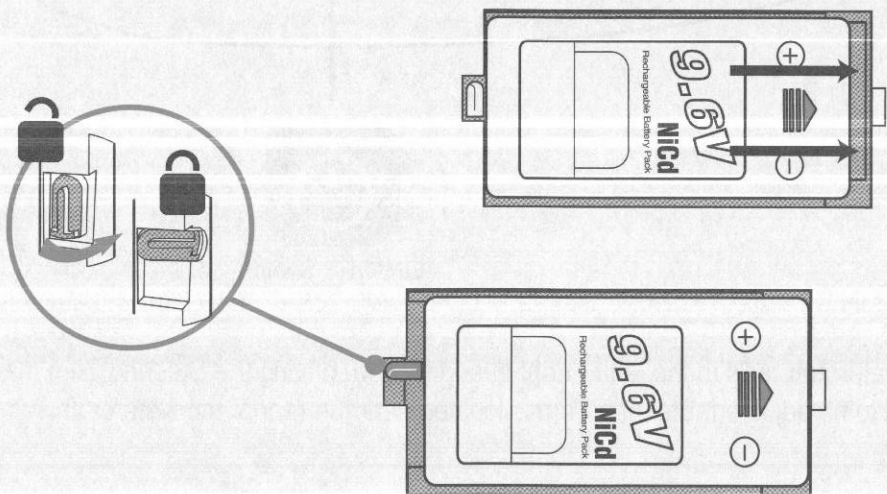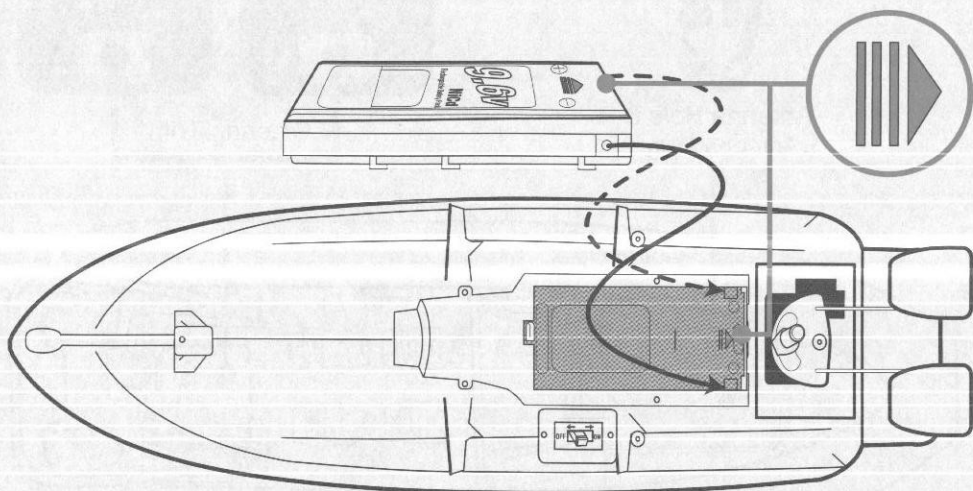


Watercraft

Features and Functions


5



Antenna Hole &
Antenna Plug

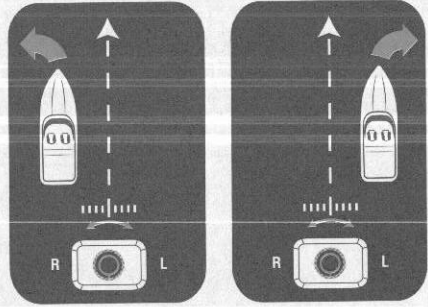

Steering Trim*

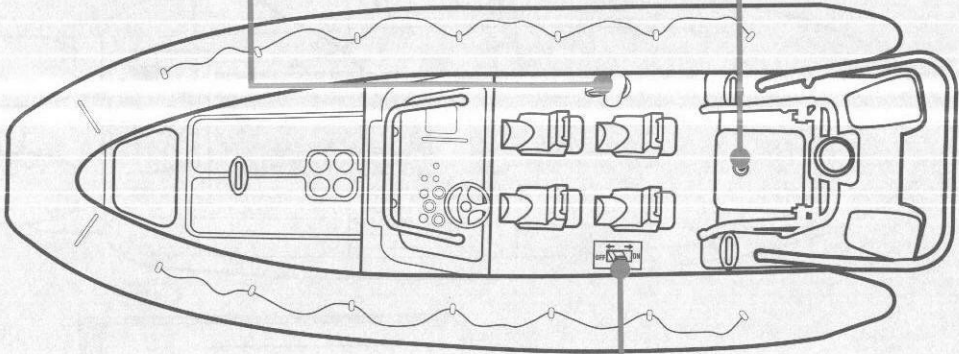

ON/OFF Switch

* If watercraft pulls to the left or right during forward driving the Steering Trim may need to be adjusted. Steering Trim is located near the rear of the watercraft.