

New Bright

1


Table of Contents

- Section 1: Table of Contents
Component Checklist
- Section 2: Vehicle Battery Installation
- Section 3: Vehicle Features
- Section 4: Charging the Transmitter
- Section 5: Transmitter Operation Instructions
- Section 6: Proper Use and Care
- Section 7: Trouble shooting

To protect components from damage, they may be packaged out of plain sight. Please search packaging materials and remove all of the components listed below. Packaging should be saved for storing your vehicle.



1

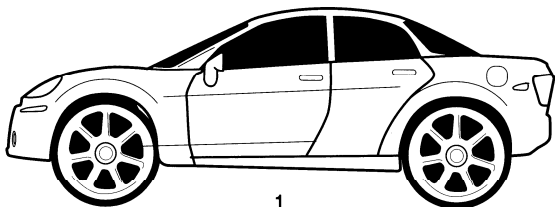

1


REF1629.1231

New Bright

2


Battery Installation

Install batteries as shown, making sure the (+) positive and (-) negative markings line up with the (+) and (-) marking in the battery compartment.

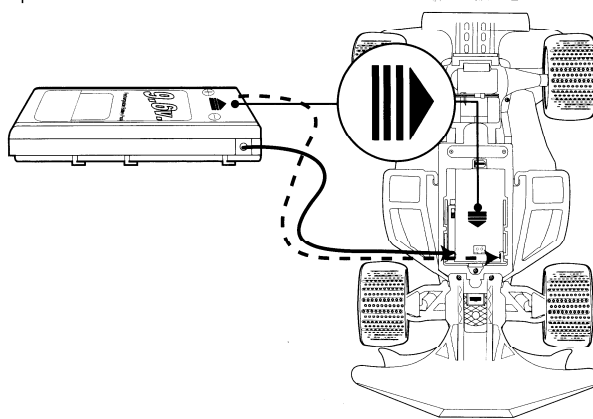

Vehicle

Features

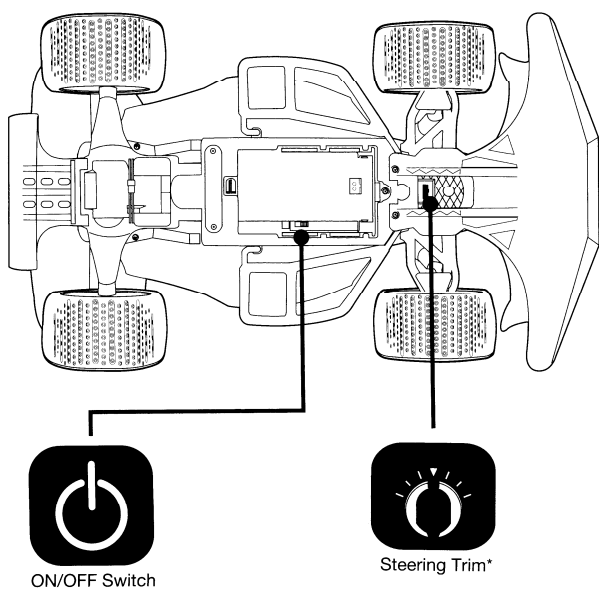

ON/OFF Switch

Steering Trim*

Note: ON/OFF switch must be in "OFF" position when charging the Transmitter.

Transmitter

4



Charging the Transmitter

1. Turn vehicle power switch to the "OFF" position before charging the Transmitter.
2. Locate the transmitter charging post on the underside of the vehicle between the rear wheels.





Transmitter Charging Post

3. Gently pull charging post until it is fully extended past the vehicle's rear bumper.

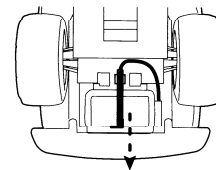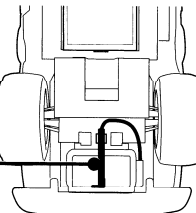

4. Next, rotate the charging post so that it is vertical and facing the top of the vehicle.
5. Return vehicle to its upright position.
6. Locate the charging receptacle on the bottom of the Transmitter.
7. Line up the R/C Touch Transmitter so that the charging post lines up with the Transmitter's charging receptacle.
8. Set the Transmitter firmly onto the charging post. The Transmitter lights will flash during charging. Flashing will stop when the Transmitter is fully charged. (You will know when your Transmitter needs charging when the lights flash for 10 seconds and then power off.)

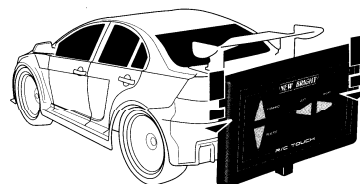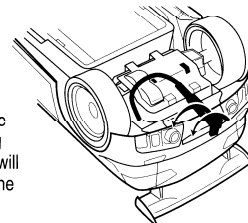

Your R/C Touch Transmitter is now charging. Make sure fresh batteries are in your vehicle before charging the Transmitter. Once fully charged, (after 30 minutes) the Transmitter will be functional for up to 4 hours.

Transmitter

Operation Instructions

Hold transmitter in two hands and operate by pressing arrows with your thumbs.



REVERSE MOTION:

Press and hold REVERSE arrow for continuous reverse motion. Release to stop.

FORWARD MOTION:

Press and hold FORWARD arrow for continuous forward motion. Release to stop.



LEFT TURNING:

Press and hold LEFT arrow while simultaneously pressing FORWARD arrow to turn left while driving forward. Press and hold LEFT arrow while simultaneously pressing REVERSE arrow to turn left while driving in reverse.

RIGHT TURNING:

Press and hold RIGHT arrow while simultaneously pressing FORWARD arrow to turn right while driving forward. Press and hold RIGHT arrow while simultaneously pressing REVERSE arrow to turn right while driving in reverse.

44166574



OWNER'S MANUAL

Please read and understand all precautions prior to use.

Thank you for choosing a premium New Bright product.

USA & Canada
30-Day Limited Warranty

New Bright Industries warrants to the original purchaser that this product will be free of defects in materials and workmanship for thirty (30) days from the date of purchase. In the event of such defect within the warranty period, New Bright will repair or replace the product at our sole discretion. This warranty does not cover damage resulting from unauthorized modifications, accident, misuse or abuse.

Should your item have a defect covered under this warranty, first call the toll free number listed below. Most problems can be resolved in this manner. If necessary, you will be issued a Return Authorization number (RA) and instructions on how to obtain a Product Return Form. The Product Return Form is to be used when returning a product to us (postage pre-paid and insured by the consumer).

When returning a defective product, please package the product, the Product Return Form and a copy of the dated sales receipt as proof of purchase. Be sure to mark the RA number on the Product Return Form. If the product is returned without a dated sales receipt, it will be excluded from coverage under this warranty. Please allow 4 to 6 weeks for delivery of repaired or replacement vehicles (depending on your location).

New Bright Industries' liability for defects in materials and workmanship under this warranty shall be limited to repair or replacement at our sole discretion. In no event shall we be responsible for incidental, consequential or contingent damages (except in those states that do not allow this exclusion or limitation).

Valid only in the USA & Canada.

Contact New Bright Industries Customer Service Toll Free at:
1-877-NBI-TOYS
(1-877-624-8697)

Monday through Friday, 8:00 AM to 5:00 PM Eastern Time **914.8 MHz**

L754100826/JN272-10

New Bright

Proper Use and Care

Do not recharge Transmitter if it appears to be damaged.

Do not attempt to disassemble Transmitter.

Always remove Batteries from vehicle Battery Compartment when not in use.

Do not dispose batteries in fire. Leakage, explosion and personal injury may occur.

Dispose of Batteries properly.

Do not attempt jumps or tricks with this vehicle.



Switch vehicle OFF when not in use.



Brush areas where dirt gets trapped.



Wipe body with a soft rag or cloth.



Do not use chemicals or water to clean.

Support

Trouble Shooting

Problem - Vehicle does not move or moves slowly.

- Make certain there are fresh batteries in the vehicle and that they have been installed in the correct position.
- Are the (+) and (-) markings on the batteries in the same position as the (+) and (-) markings in the vehicle battery compartment?
- Are the metal contact tabs touching, rusty or dirty in the battery compartment?
- Has the rechargeable battery in the transmitter been fully charged?
- Make certain that the vehicle ON/OFF switch is in the "ON" position.

Problem - Vehicle moves by itself or exhibits reduced range from the transmitter.

- Make certain there is no outside radio interference in your area. The best way to test this is to take the vehicle as far away from radio towers, electrical lines or tall buildings as possible to ensure no further radio interference will occur.

FCC CAUTION:

The manufacturer is not responsible for radio interference caused by unauthorized frequency modification to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.