

Transmitter



Operation Instructions

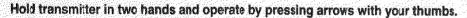

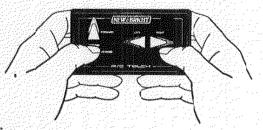


REVERSE MOTON:

Press and hold REVERSE arrow for continuous reverse motion. Release to stop.

FORWARD MOTION:

Press and hold FORWARD arrow for continuous forward moton. Release to stop.

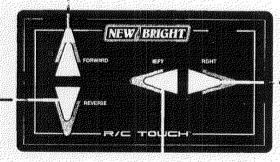

LEFT TURNING:

Press and hold LEFT arrow while simultaneously pressing FORWARD arrow to turn let while driving forward. Press and hold LEFT arrow while simultaneously pressing REVERSE arrow to turn left while driving in reverse.

RIGHT TURNING

Press and hold RIGHT arrow while simultaneously pressing FORWARD arrow to turn right while driving forward. Press and hold RIGHT arrow while simultaneously pressing REVERSE arrow to turn right while driving in reverse.



OWNER'S MANUAL

Please read and understand all precautions prior to use.

Thank you for choosing a premium New Bright product.

USA & Canada 3C-Day Limited Warranty

New Bright Industries warrants to the original purchaser that this product will be free of defects in naterials and workmanship for thirty (30) days from the date of purchase. In the event of such defect within the warranty period, New Bright will repair or replace the product at our sole discretion. This varranty does not cover damage resulting from unauthorized modifications, accident, misuse or shase.

Should your flem have a defect covered under this warranty, first call the toll free number listed below. Most problems can be resolved in this manner. I necessary, you will be issued a Return Authorization number (RA) and instructions on how to obtain a Product Return Form. The Product Return Form is to be used when returning a product to us (postage pre-paid and insured by the consumer).

When returning a defective product, please package the product, the Product Return Form and a copy of the dated sales receipt as proof of purchase. Be sure to mark the RA number on the Product Return Form. If the product is returned without a dated sales recept, it will be excluded from coverage under this warranty. Please allow 4 to 6 weeks for delivery of repaired or replacement vehicles (designating on your location).

New Brigh: Industries' liability for defects in materials and workmanship under this warranty shall be limited to repair or replacement at our sole discretion. In no event shall we be responsible for incidental, consequential or contingent damages (except in hose states that do not allow his exclusion or limitation).

Valid only in the USA & Canada.

Contact New Bright Industries Customer Service Toll Free at 1-877-NBI-TCYS (1-877-624-8697)

Moncay through Friday, 8:00 AM to 5:00 PM Eastern Time

Libertson del acquelle que della crisia dell

New Bright





Table of Contents



Section 1:

Table of Contents

Component Checklist

Section 2:

Vehicle Battery Installation

Section 3:

Vehicle Features

Section 4:

Charging the Transmitter

Section 5:

Transmitter Operation Instructions

Section 6:

Proper Use and Care


Section 7:

Trouble shooting


To protect components from damage, they may be packaged cut of plain sight. Please search packaging materials and remove all of the components listed below. Packaging should be saved for storing your vehicle.






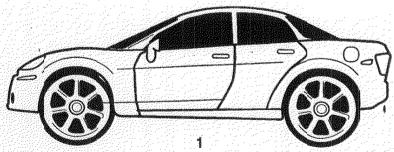

REF16291231

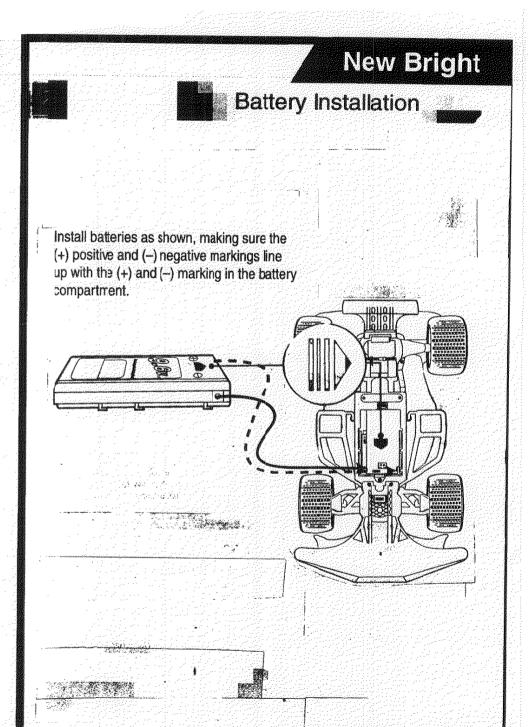

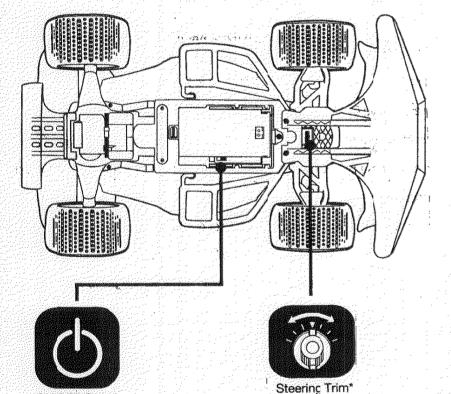

Note: ON/OFF switch must be in "OFF" position when charging the Transmitter.

ON/OFF Switch





Charging the Transmitter




- 2. Insert a fully charged 9.6V rechargeable battery into the battery compartment.
- 3. Return vehicle to its upright position.
- 4. Locate the charging receptacle on the middle part of the vehicle.
- Line up the R/C Touch Transmitter so that the charging post lines up with the Transmitter's charging receptacle.
- 6. Set the Transmitter firmly onto the charging receptacle. The Transmitter lights will flash during charging. Flashing will stop when the Transmitter is fully charged. (You will know when your Transmitter needs charging when the lights flash for 10 seconds and then power off.)

Your R/C Touch Transmitter is now charging.

Once fully charged, (after 30 minutes) the

Transmitter will be functional for up to 4 hours.

New Bright

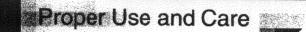



Do not recharge Transmitter if it appears to be damaged.


Do not attempt to disassemble Transmitter.

Always remove Batteries from vehicle Battery Compartment when not in use.

Do not dispose batteries in fire. Leakage, explosion and personal injury may occur.

Dispose of Batteries properly.

Do not attempt jumps or tricks with this vehicle.

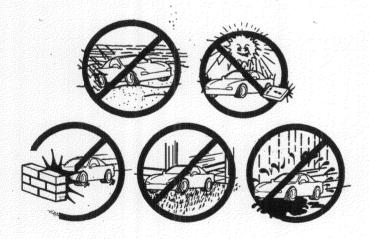



Switch vehicle OFF when not in use.



Brush areas where dirt gets trapped.



Wipe body with a soft rag or cloth.



Do not use chemicals or water to clean.

Support



Trouble Shooting



Problem - Vehicle does not move or moves slowly.

- Are the (+) and (-) markings on the |battery| in the same position as the (+) and (-) markings in the vehicle battery compartment?
- Are the metal contact tabs touching, rusty or dirty in the battery compartment?
- Has the rechargeable battery in the transmitter been fully charged?
- Make certain that the vehicle ON/OFF switch is in the "ON" position.

Problem - Vehicle moves by itself or exhibits reduced range from the transmitter.

- Make certain there is no outside radio interference in your area. The best way to test this is to take the vehicle as far away from radio towers, electrical lines or tall buildings as possible to ensure no further radio interference will occur.

FCC CAUTION:

The manufacturer is not responsible for radio interference caused by unauthorized frequency modification to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.