

Functions operated by the controller:

1. Forward/Reverse Drive – push/pull left side lever forward/backward.
2. Left/Right Steering – use right side lever.
3. Launch Darts (missiles) – Press center button and hold to launch, release to stop.

The Controller:

Insert 2 “AA” batteries in the battery compartment on the back of the transmitter. Be sure the (+) and (–) are properly matched.

The Vehicle:

1. Locate the battery compartment on the vehicle chassis.
2. Insert 3 “AA” batteries. Be sure the (+) and (–) are properly matched.
3. Replace the Battery Compartment Cover.
4. Turn the ON/OFF switch to the “ON” position.
5. The vehicle is now ready to use.

Loading and firing darts:

1. Align foam dart with peg and push into place.
2. Repeat until all darts have been loaded.
3. Manually raise or lower barrel to desired angle.
4. To fire, press “LAUNCH” button on transmitter. Hold the “LAUNCH” button until the darts (missiles) are fired.

Warning! Do not aim at eyes or face.

To avoid physical injury, do not use missiles other than those supplied by the manufacturer.

Steering Trim:

If the vehicle veers to the left or right, adjust steering trim on underside of vehicle until the desired alignment is reached.

Battery Requirements:

Transmitter – 2 “AA” batteries (not included)

Vehicle – 3 “AA” batteries (not included)

(Use alkaline batteries only.)

Notes:

 
 
 
 
 
1. Operate the vehicle within 80-100 feet (25-30 meters) range.
2. Switch off the toy when not in use.
3. Remove all batteries when not in use for long periods.
4. If the vehicle is not functioning properly, replace the batteries.
5. Adult supervision recommended.
6. Please remove all packaging attachments before giving this toy to your child.
7. Do not insert antenna wire into electrical outlets.

The reception performance may be affected under a strong interference disturbance environment.

This product would not perform normally under a strong electrostatic environment.

We wish you many happy hours of pleasure with your New Bright toy.

ENGLISH

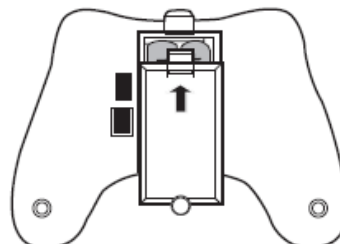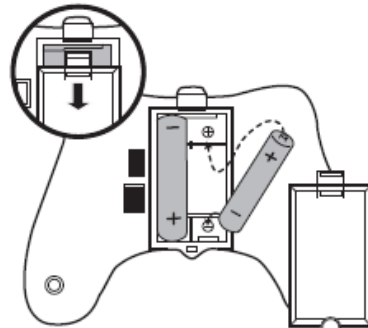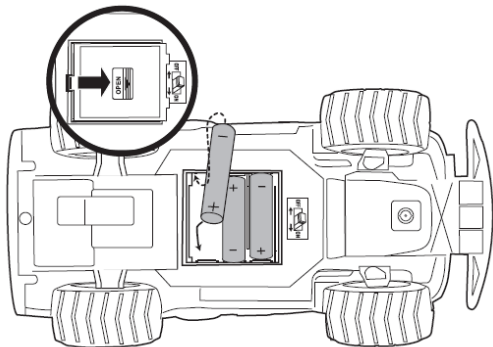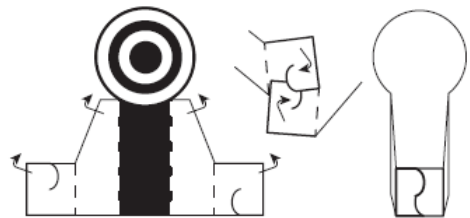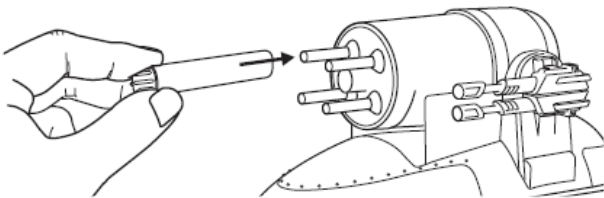

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

F.C.C. CAUTION:

The manufacturer is not responsible for radio interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.



NEW BRIGHT

JN332-03