
Table of Contents

Mobile appearance picture	4
1. Foreword.....	5
2. Quick start	8
2.1 Icon Explain.....	8
2.2 Install SIM card.....	10
2.3 Install T-flash card	10
2.4 Installing Battery	10
2.5 Battery Charging	11
2.6 Switching on/off	11
3. Call function	13
3.1 Dialing telephone	13
3.2 Receiving telephone.....	14
3.3 call in the menu	14
4. Phonebook.....	16
4.1 Quick search	16
4.2 Browse contacts	16
5. Messages	18
5.1 Write message	18
5.2 Inbox	18
5.3 Outbox.....	19
5.4 Message settings	19
5.5 Memory status.....	20
5.6 Voice mail.....	20
6. Call logs	21
6.1 Missed/dialed/Received/all calls.....	21
7. Settings	22

7.1 Profiles	22
7.2 Date and time.....	23
7.3 Display	23
7.4 Phone settings	23
7.5 Call settings.....	24
7.6 Network settings.....	26
7.7 Network status.....	26
7.8 Security Settings	27
7.9 Set UART	28
7.10 Restore factory settings.....	28
8. File manager	29
9. Multimedia	30
9.1 Games.....	32
9.2 Audio player	32
9.3 Sound recorder	32
9.4 Camera	32
9.5 Video recorder.....	32
9.6 Video player	32
10. FM radio	33
11. Organizer	34
11.1 Calendar	34
11.2 To do list	34
11.3 Alarm	34
11.4 Calculator	35
11.5 Flashlight	35
11.6 Services.....	36
12. Shortcuts	37

13.	Input methods	38
14.	Phone maintenance	39
15.	Accessories	41
16.	Environment	42
17.	Technical Specifications	43

Mobile appearance picture



- 1. Left soft key
- 2. Right soft key
- 3. Green key
- 4. Red key
- 5. Navigation key
- 6. OK key
- 7. Numeric key

1. Foreword

Honorable mobile phone user, thank you for choosing our mobile phone!

Our cellular phone is according with the communication industry standards of PRC, and also according with the standards of European, and are approved for GSM networks.

Your phone may be used internationally with various networks depending on your roaming arrangements with your service provider.

To use this phone you must subscribe to a GSM service from a provider. We have included many features in this device but their function depends on the features available with your subscribed wireless network. Please contact your service provider for more information.

We strongly recommend you carefully read and understand this manual before using your phone in order to keep it under best conditions for your effective usage and utmost satisfaction.

Safety

Never attempt to disassemble your phone. You alone are responsible for how you use your phone and any consequences of its use.

As a general rule, always switch off your phone wherever the use of a phone is prohibited.

Use of your phone is subject to safety measures designed to protect users and their environment.

Do not use your phone in damp areas (bathroom, swimming pool...). Protect it from liquids and other moisture.

Do not expose your phone to extreme temperatures lower

than - 10°C and higher than + 55°C.

The physicochemical processes created by chargers impose temperature limits when charging the battery. Your phone automatically protects the batteries in extreme temperatures.

Do not leave your phone within the reach of small children (certain removable parts may be accidentally ingested).

Electrical safety

Only use the chargers listed in the manufacturer's catalogue. Using any other charger may be dangerous; it would also invalidate your warranty. Line voltage must be exactly the one indicated on the charger's serial plate.

Aircraft safety

When traveling by plane, you will need to switch your phone off when so instructed by the cabin crew or the warning signs. Using a mobile phone may be dangerous to the operation of the aircraft and may disrupt the phone network.

Its use is illegal and you could be prosecuted or banned from using cellular networks in the future if you do not abide by these regulations.

Explosive materials

Please comply with warning signs at petrol station when personnel asking you to switch your phone off. You will need to comply with radio equipment usage restrictions in places such as chemical plants, fuel depots and at any location where blasting operations are under way.

Electronic equipment

To avoid the risk of demagnetization, do not let electronic devices close to your phone for a long time.

Electronic medical equipment

Your phone is a radio transmitter which may interfere with

electronic medical equipment or implants, such as hearing aids, pacemakers, insulin pumps, etc. It is recommended that a minimum separation of 15cm be maintained between the phone and an implant. Your doctor or the manufacturers of such equipment will be able to give you any advice you may need in this area.

Hospitals

Always make sure that your phone is switched off in hospitals when so instructed by warning signs or by medical staff.

Road safety

Do not use your phone when driving. In order to give your full attention to driving, stop and park safely before making a call. You must comply with any current legislation.

Distance of operation

This phone model has been tested and meets radiofrequency exposure guidelines when used

As follows:

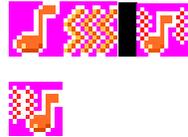
- Against the ear: place or receive a phone call and hold the phone as you would a wire line telephone.

- Body worn: when transmitting, place the phone in a carry accessory that contains no metal and positions the phone a minimum of 2.5cm from your body. Use of other accessories may not ensure compliance with radiofrequency exposure guidelines. If you do not use a body worn accessory and are not holding the phone at the ear, position the phone a minimum of 2.5 cm from your body,

- Data operation: when using a data feature, position the phone a minimum of 2.5cm from your body for the whole duration of the data transmission.

2. Quick start

2.1 Icon Explain

Icon	Function description
	Network signal strength: number of the more stronger the signal;
	Battery capacity number of the more power the more full;
	SMS SIM1/SIM2 have unread SMS
	Missed call SIM1/SIM2 have missed calls
	Used profiles Different icons show different icon: General, Meeting, Outdoor, Indoor
	Headset Plug in headset
	Alarm Alarm function opened
	Key lock Show key and screen lock

Knowing the Keys

- 1. Left soft key/Right soft key:** Implement the functions shown in the lower left/right hand corner.
- 2.Green key:** Press after dialing to connect by SIM Card. Press if there is an incoming call to answer. Press from standby to go to call records list.
- 3. Red key:** Long press to switch phone on/off; Press to end, reject call; or to exit a menu.
- 4. OK key:** Confirm or accept selection in menu access.
Press from standby to enter the selected shortcuts list function.
- 5. Navigation Keys:** Press the up/down/left/right direction in menu to scroll, browse or in edit page to move cursor. In idle mode, press the up/down/left/right direction keys to select the shortcut function showed on the bottom of the screen, and then press the OK key to confirm.
- 6. 0-9 alphanumeric keys:** Press corresponding keys to input numbers when dialing or numbers and characters when editing. Press the alphanumeric key [W] to input “+” symbol for international access in the dialing interface.
Press the alphanumeric key [P] to input “p” symbol for the fixed extension number.
- 7. * (Star) Key:** Press in standby to input “*” character; long press from standby to activate or deactivate silent mode.
- 8. # Key:** Press in standby to input “#” character; long press from standby to lock or unlock keypad.

2.2 Install SIM card

This phone supports two GSM SIM cards. Find SIM card's groove in the back of the phone and slide it completely there. During installation, please make sure the chip is facing downwards and pay attention to slot direction.

Note:

- 1. Keep SIM card out of children's touch.**
- 2. Any abrasion or folding could easily damage SIM card, so please be extremely careful when you insert, Remove and preserve it.**
- 3. Please make sure that you have cut off the power supply and have taken out battery before you remove SIM card.**

2.3 Install T-flash card

1. First switch off the phone and remove the battery.
2. Push the metal card holder toward the bottom of the phone and lift the released end of the holder.
3. Place the memory card into the holder with the metal contacts face down and push the holder until it locks into place.

Note:

- 1.To avoid damaging memory card, please do not plug memory card fast or frequently.**
- 2. Please regularly backup information in the cards on other equipment when you use Cards like T-flash! Improper use or other uncertain factors may cause the damage or loss to the content in the cards.**

2.4 Installing Battery

Align the battery chip with the metallic salient point in battery jar, insert the battery until it is inserted into the

battery jar. Slide battery cover into back of the phone until it is locked.

2.5 Battery Charging

Unclose dustproof soft gum of attachment mode on the bottom of the phone, insert one end of the charger, i.e., the charging plug into attachment mode and the other end into electrical outlet, Screen will display the charging sign. After charging is finished, just pull out the plug.

Note:

1. **Please use the standard battery and charger, or may explode.**
2. **If the battery is completely discharged, the battery icon should be in charge after 2 to 3 minutes to appear. Generally based on the current state of the phone (if boot, call, etc.) of different charging time for 2 to 5 hours.**
3. **Please use the charger, charging as much as possible to avoid using USB cable.**
4. **To ensure optimal battery performance, the completion of two to three times the battery charge and discharge cycles. Several new battery initial charge, please charge more than 10 hours straight.**

2.6 Switching on/off

Long press the **Red key** to switch your phone on or off.

1. If there is no SIM card, SIM card is defective, or SIM card contact is loose, you will be prompt with a warning after powering on, shut down and check your SIM and its installation.
2. If inserted one GSM SIM card only into the phone, meanwhile phone code and PIN code is turn on. When switched on, after entering the PIN code and phone code,

the phone enter the standby mode by the current SIM.

3. If inserted two GSM SIM cards, meanwhile phone code, PIN1 code and PIN2 code are all turned on. When switched on, you will be prompted to enter the code one by one. After switched on, the phone will automatically search the network.

4. If the phone detected authorized network, the screen will display network name and signal strength; If there is no authorized network is found, the phone can only make emergency calls or use non-communications features.

3. Call function

3.1 Dialing telephone

1. Direct dial

In standby mode, press the corresponding numeric keys to enter the phone number that you want to dial, including necessary area codes. Short Press the Right soft key [Clear] to delete one character, and Long Press delete all inputs, if inserted only one SIM card, press the Green key can directly to dial, if inserted two SIM card, press the Green key into the SIM select screen.

2. Making an International Call:

To make an international call, long press [0] key until the prefix symbol "+" of international call displays in screen.

3. Dialing from Phonebook

Enter the Phonebook via the menu, use the Up/Down Navigator keys to scroll to the desired contact, or press the first letter of the name of the desired contact as saved in your phonebook for quick access to names beginning with the letter then scroll to the desired, press the green key to dial.

4. Dialing from Call history

Enter the Call center (press the Green key from standby or via the menu), use the Up/ Down navigator keys to scroll to the desired contact, press the green key can direct dial.

5. Dial emergency service

You can directly dial the emergency service number without SIM card. Different networks use different urgency service numbers, so for details please inquire the network operation company.

3.2 Receiving telephone

When there is an incoming call, the phone will give corresponding alert, if your network supports caller ID, the screen will display caller's name or number (depending on whether there is information of the caller in your phonebook).

1. Press the green key or press the Left soft key and confirm [Answer] to answer the incoming call.

2. If function of [call center/call setting/Advanced setting/Answer mode] is selected as [Any-key], press the any key to answer the incoming call except the Right soft key or the Red key.

3. If you do not want to answer an incoming call, press the Red key or the Right soft key [Reject] to reject it.

You can also press the Red key to end a call.

4. During a call, you can press the Up/Down navigator key to adjust receiver volume.

3.3 call in the menu

During a call, press the right soft key can also open / close the hands-free function, press the left soft-key into the options:

- **Swap***: Is maintained in the current call and switch between calls

- **Conference***:Into the multi-party conference call, you can follow the prompts to answer the waiting call, to add multi-session conference call will be maintained; and the party conference in private conversation, the call to keep all other parties; the parties to keep the party; the end of the current Calls and all calls remain.

- **End single call***: end off the current call.

- **End all calls***:end off the current call and the hold call

- **Transfer***: the function need network support.

-
- **New call:** enter the dial-up interfaces.
 - **Phonebook:** enter the phonebook list of interfaces.
 - **Messages:** access to the message menu.
 - **Sound recorder:** record the current call.

Note:

Recording of the call, in some countries is illegal. Therefore, when you talk to Recording, should seek prior approval from the other party's consent.

- **Mute:** mute on or off, open the case in the quiet do not send local voice.

-**DTMF:** The dual tone multi-frequency switching operation (a call, you press the keys on the keyboard, the audio signal will be sent to each other, for telephone banking, automatic answering machine, etc.)

Note:

Denotes menu items only appear in specific circumstances.

Such as: [Swap] exist only in the state of the phone and call the phone only appears to be suspended. At the same time for the conferencing, you need to the appropriate service provider to subscribe.

4. Phonebook

The Phone for your well-prepared high-capacity phone storage space. You can use the phone's contacts feature to save the contact name, number and caller ring-tone. The phone can save 500 phonebook records, SIM card number of records stored phone numbers vary because of their capacity.

4.1 Quick search

In order to facilitate you to quickly search the phone book to the desired number, the phone prompts you to quickly find features.

In the contact list interface, you press # key to switch input method, enter the contact name of the first characters to locate search.

After searching for the name, press the Green key to dial the number and press the Red key to end dialing.

4.2 Browse contacts

In the phonebook list screen, press the up / down navigation key to select the contact record, press the green key to dial the number in the record, then the red key to end the dialing. Press the OK Key to display the details of the selected record. In the phonebook list screen, select either the phonebook record, press the left key to perform the following operation:

- **View:** view the select
- **Send message:** send SMS to the select number
- **Call:** call the select number
- **Add new contact:** Enter new contact edit screen, then press **the OK key** to save the phone number in the SIM card or the Phone.

- **IP dial:** If set and activated IP number in the [setting/Call settings/common call settings/IP number] option, you can dial the currently selected phone number that adds IP number.

- **Edit:** you can edit the select record.

- **Delete:** Delete the select record

- **Copy:** this record can copy to "SIM1" "SIM2" or "phone"

- **Move:** this record can move from SIM to phone, or move from phone to SIM

- **Add to Speed dial:** Add this number to the fast dial list. Set the speed dial feature, in standby mode press the corresponding number key, you can directly dial the number key corresponding to the speed dial number.

- **Mark several:** you can mark one or several contacts to delete.

- **Phonebook settings:**

Owner number: set this number to own number

Memory Status: Query "SIM1", "SIM2", "phone" memory address book using status

Copy all: copy all contacts from phone to SIM, or from SIM to phone.

Move all: move all contacts from phone to SIM, or from SIM to phone

Delete all contacts: delete all SIM contacts or delete all phone contacts

5. Messages

Message service is a network dependent function, which allows you to send, receive and edit all kinds of messages. Please contact the network operator for more details.

5.1 Write message

Edit a new message, save or send it to the recipient.

Note:

To send SMS, you need to set the correct SMS service center number which can be obtained from network provider.

While editing, press the # key to change input method, a text message can be up to 612 characters in length.

Press the OK Key, into add recipient interface, you can enter number and add from phonebook, you can add one number or more number, press the Left Soft key [Options] to select options when editing:

- **Send:** Enter the destination number is sent, or press OK into the address book to find the necessary records, you can select the type of SIM card, confirmed, you can send

- **Save:** Save the edited message to the outbox

- **Writing language:** you can select writing language.

5.2 Inbox

Received SMS messages can be stored either in phone or in SIM1/SIM2 memory, and are accessed here.

When you have received a message, the tones or vibration to alert you and message mark will also be shown on the screen. Press the Left soft key [Read] or the OK key to read the new message, press the Right soft key [Back] to return, and you can also access the inbox to read the new message.

If the message memory is full, the indication "Memory full"

and the message icon will be shown on the screen and flashed. Before you can receive new messages, delete some of your old messages in the inbox folder. If the capacity of new messages is beyond the capacity of the inbox, the information will be lost and incomplete.

In message list, press the OK key to read the selected message, press the Left soft key [Options] to make the following menu:

-View: view the current message

-Reply: Reply SMS to the message sender directly.

-Delete: delete the selected message.

-Copy to phone/SIM: copy the selected message to phone/SIM.

-Move to phone/SIM: move the selected message to phone/SIM

-Delete all: delete all messages in inbox.

-Copy all: copy all messages from SIM to phone or from phone to SIM.

-Move all: move all messages from SIM to phone or from phone to SIM.

-Mark several: mark one message or several messages to delete.

5.3 Outbox

Not send SMS or sent successfully SMS, will be stored in the mail within, the operation is the same with inbox

5.4 Message settings

Profile settings: You can choose either of two modes, custom different parameters, including the model name, short message center number, Validity period and Message type.

Common settings:

Delivery report: Open the function, after a successful send

text messages, the system will return to report. Reply path: If the network allows, open the function, the recipient receives a text message, the system will send a confirmation message.

Save sent message: open the function, After the success of SMS will be automatically saved in the Outbox.

5.5 Memory status

can view the memory storage status.

5.6 Voice mail

When you can not answer the phone, automatically incoming calls to voice mail number, you can let the other party to your message, a message stored in the network's voice mail system, and afterwards, you can access the voice mail system to listen to a message.

Into the voice mail sub-menu, you can see the current voice message (up to the establishment of two voice mail) Voice mail function needs the support of network operator, you may need to subscribe to the service. For details, please contact with the operator.

5.7 Broadcast messages

Broadcast message is sent by network operators, public information, this function needs the network operator support, please contact the network operator. Using the cell broadcast service, you can receive from the network operator information on various topics, such as weather, taxis, hospitals and so on. For information on available topics, please consult your local network operator.

6. Call logs

This phone can record all received, dialed and missed calls as well as their call time. Only when related function is supported by network and phone is switched on and in network service area, it can record the answered and missed calls. Call records may be accessed by pressing the Green key from standby or accessing through the menu.

Access the Call Center menu using the normal menu path, the submenus are as follow:

6.1 Missed/dialed/Received/all calls

In the call history list ,Once on the call records list, press the Green key to make a call; press the OK key to view the details of current call record; press the left soft key to make the following options:

- **View:** View the details of current call record.
- **Call:** call current record.
- **Send message:** send SMS to the select number
- **Save:** Store the number as a phonebook entry.
- **Delete:** Delete the current call record.
- **Edit before call:** Edit number before the call history
- **Delete all:** Delete all call records.

7. Settings

7.1 Profiles

The phone provides you with five profiles: General, Meeting, Outdoor, Indoor and Headset. It's help you according to the different events and environments in different custom ring tones. according to different scenarios, choose a different profile, then you only need to personalize your profile and activate.

Note: The factory setting various modes set has been done and has been the general pattern of the default start

Activate: Start the selected profile.

Customize: You can set all kinds of effects to your own needs. In the Settings screen, press the down navigation key to move the highlight to the item needs to be set.

Incoming call: There are ten built-in ring tones to choose for you.

Alert type: Press the left/right navigation key to select: vibrate only, vibrate and ring, vibrate then ring,ring only or light only.

Ring type: Press the left/right navigation key to select: Repeat, Ascending, Beep once

Ring-tone volume: Press the left/right navigation key to adjust the ring-tone volume.

Message ring-tone: There are five built-in ring tones to choose for you.

Keypad: Press the left/right navigation key to select click, or tone.

Key-tone volume: Press the left/right navigation key to adjust the key-tone volume.

7.2 Date and time

Set date and time: Under this you can set the phone to the current date and time. The phone allows you to set the date range of calendar 2000 to 2030.

Format: Under this you can set the time and date display format

Time zone update: can set on or off the function according time zone update.

7.3 Display

Wallpaper: The standby interface is used to set the background wallpaper.

LCD backlight: can set LCD backlight time.

Brightness: can set LCD brightness level.

7.4 Phone settings

Language

Under this you can choose the language provided by the phone.

Shortcuts

Dedicated key: You can change navigation keys function corresponding to the shortcut in the idle screen.

My shortcuts: This menu can be set more frequently used functions, so you can directly access the most rapid of these features. Quick list of features in the current case, you may be left soft key to enter the Options menu, add a button to enter a list of alternative options.

Auto keypad lock

Under this you can set the time to open or close the keyboard lock keyboard lock feature. Set the keyboard lock time, the idle screen, mobile phone within the set time the keyboard does not perform any operation, it will be automatically locked, then you can press the # key to unlock.

Input method settings

You can set default writing language and input method.

7.5 Call settings

Call settings

SIM call settings

Caller ID (supported by the network): When the caller ID is switched on, the incoming call number will not be displayed on the receiver's screen during a call. When the caller ID is switched off, my number will be displayed on the receiver's screen.

Call waiting:

You can choose to Activate, Deactivate or Query status of this feature.

Activate this feature, if you call any other incoming call, the phone beeps, and the screen will display the caller number or name and call waiting information.

Call divert:

This feature allows you to play to your phone calls transferred to your voice mailbox or another phone number you specify. This function needs the support of network operator, please contact the network operator.

Transfer in the following ways, each way can be set to enable, disable, and query status. When turned on, the on-screen prompts to transfer the phone number.

Divert all voice call: Transfer all voice calls to your settings in the phone number or voice mail

Divert if unreachable: When your phone is off or not on the network service area, the transfer of all voice calls to your phone number or set voice mail

Divert if no answer: No answer transfer all voice calls to

your phone number or set voice mail

Divert if busy: When the call is busy, the transfer of all voice calls to your phone number or set voice mail

Divert all data calls: Transfer all the data calls to the phone number you set, this function is supported by the network operator, please contact the network operator.

Cancel all divers: cancel all call forwarding type.

Call barring:

Set limits each case to answer or dial the phone. Network operators must first apply for international calling features, and limit access network password, to set the limit function.

This function needs the support of network operator, please contact the network operator.

Call restrictions can be set for activate, deactivate and query status

Line switching:

Can switch to Line 1 or Line 2, Line 1 is default, if you choose line 2, then there may be no phone call.

- Common call settings

Call time reminder: Can set the prompt type:

Off: When the phone call, no minutes of tone.

Single: Select 1-3000 seconds after the prompt enter either of the time, when you call the phone at the time when prompted.

Periodic: Select 30-60 seconds after the input in any one time, when you call for every minute the phone will be reminded of the time.

Auto redial:

You can enable or disable this feature, the feature is turned on, after the dial-up, then if the other party does not answer the phone over a period of time will be

automatically re-dial, redial the number up to 10 times, in this period, the user can not call any other phone, to end the re-dial, simply press the right soft key to cancel.

IP number: You can edit IP number with three at most.

Select one and press the OK key or press the Left soft key [Options] to select 'Edit' option, then edit the IP number, press the OK key or press the Left soft key to confirm and the current IP number is both activated.

For the edit IP number, you can press the Left soft key [Options] to select 'Activate' option.

Answer mode:

Any key: Select the feature, all incoming calls, in addition to the red key and right soft keys, all keys can answer the call

Auto answer : Enable this feature, there are about 2 seconds after the incoming call, the phone will automatically answer the call.

7.6 Network settings

You can select SIM1 or SIM2 to set the network options.

- **Network selection:** Choose to Automatic or Manual select network. If automatic selection, the phone will select the current network where your SIM is registered to. If manual, your phone will search for and list down available networks for your selection, note that you must select the network where your SIM is registered to.

- **Preferred networks:** Set or modify your preferred network. It will display the network preference list as stored in your SIM.

7.7 Network status

View the SIM card network status.

7.8 Security Settings

You can select SIM1 or SIM2 to set the security options.

-SIM1/SIM2 lock: Press the **OK key** to activate or deactivate SIM Lock, the current status is displayed in a dialogue box when you scroll to this option.

To activate SIM PIN, you will be asked to enter the PIN code. If activated, you will be required to enter the PIN every time you turn on the phone. Please consult with your service provider for more details.

Note: If you key in the incorrect PIN code for three times consecutively, the SIM card will be locked. The PIN code and PUK code may be offered with the SIM card, otherwise contact your service provider. The default PIN code is usually 1234. Please change your initial phone code promptly.

-Fixed dial: This feature limits your phone to only be able to make calls to numbers in the fixed dialing list or to numbers starts with numbers specified in the list; it requires the network support and the PIN2 code.

-Change password: This menu allows you to change of PIN; PIN2. Enter the old codes, and enter the new code twice to change the passwords. A code/password must be 4 to 8 digits .To change the PIN code, it must be set to active first.

Phone security

Under this password there you can set the phone to avoid unauthorized use of your mobile phone

Phone lock

Under this you can enable or disable phone password, phone password on or off are required to enter the correct phone password. When open this feature, every time you turn the phone prompts you to enter the phone password.

Change password

You can make changes to the phone password. First enter the old phone password, after repeated twice to determine and identify new password.

Note: Keyboard locked and the backlight is off, to be selected button lights up the screen, then press the # key to unlock

7.9 Set UART

If select SIM1/SIM2, you can't visit SIM2/SIM1card when use the PC link.

7.10 Restore factory settings

Reset the parameter value mobile phone, make your phone reset to default settings. Please enter a privacy password (initial password is 1234), restore factory settings.

8. File manager

In document management, you can open files in the Memory card, you can select file or folder to press the left soft key into [Options], you can do the following(Perform different file operations are also different, depending on the specific operation by the file):

- **Open:** open the file or folder.
- **New Folder:** the folder in the selected directory New Folder.
- **Rename:** you can rename the select folder.
- **Delete:** delete the selected file or folder.
- **use as:** if the selected file is audio files, can set the file use as SIM1/SIM2 incoming call; if the selected file is image file, can set the file use as wallpaper, Screen saver, Power on display or Power off display.
- **Search:** memory card can be customized to find all the documents.
- **Sort by:** can "name", "time", "size", "type" or "none".
- **Copy:** you can copy the select file to other folders.
- **Move:** you can move the select file to other folders.
- **Details:** you can view the select file information.

Note:

Memory card as the default save path, order to facilitate the use of multimedia features, please copy the appropriate files to Audio, My music, Photos, Videos etc. folders.

9. Multimedia

9.1 Games

The phone provides one classic game.

For specific operations, please refer to the directions of the game.

9.2 Audio player

Play the audio files saved in memory card.

In playing interface, press the up/down navigation key to adjust the volume, press the OK key to start/pause the current song, press the left/right navigation key to switch previous/next song;

In playing interface, press the red key or the right soft key to exit player interface, Phone into the background playing mode, while the idle screen shows the name of the music. Press the left soft key into option menu:

All songs: display all songs list.

Settings:

List auto gen.: Select this option enabled, each time the player list will automatically update.

Repeat: You can choose play mode repeat all, repeat one or off.

Shuffle: When you select on, the player will not play in order by list.

Background play: Select ON when playing the exit music player can continue playing.

Help: the menu offer the user information for you.

Stop: stop play the current song.

9.3 Sound recorder

Enter the recording screen, press the left key into options menu:

Record: when you choose the function, start new record, In recording, press the left soft key to pause/ continue record, press the right soft key to stop record, the screen will be prompted to save video, press the left soft key to save and return to the record screen, press the right soft key to not save and directly Back to the record screen.

Play*: can play the current recording.

Append: append new record to previous record files.

Rename *: Change the name of the current recorder file

Delete*: Delete the current recording.

List: Display recorder files list.

Settings: you can set file format and audio quality.

9.4 Camera

Your phone is fitted with camera allows you to take photos whenever possible. You can store the pictures in mermory card or customize the wallpaper.

In the multimedia menu, select the camera into the camera preview screen, Press the OK key to take photo, press the right soft key to return, press the left soft key to option:

Camera settings: Press the left/right navigation key to adjust the following options, including Cont. shot, Effect settings, White balance, Scene mode, Anti-flicker, Delay timer, Profile that is complete, press the left soft key or the OK key to confirm the current setting.

Image settings: can set the image quality ,image size and contrast.

Restore default: select the function and confirmed, the camera parameters can be restored to the default location

Album: select the function into album viewer, press the OK key to open the picture, press the left soft key to do view, set as wallpaper, rename, delete and delete all etc.

After taking pictures, press the back button to return camera preview screen.

9.5 Video recorder

In the multimedia menu, select the video recorder into the video preview screen, press the left soft key into options menu:

settings: Press the left/right navigation key to adjust the following options: Quality, White balance, Effect settings, Anti-flicker, Night mode.

Restore default: select the function and confirmed, the camera parameters can be restored to the default location.

Press the OK key to start recorder, recording, press the OK key or the left soft key to pause or resume recording; Press the right soft key to stop recording, the screen will be auto to save video, and directly Back to the preview screen.

9.6 Video player

This feature can be played video files stored in the U disk, supported formats to 3gp, mp4, Avi file player.

In the multimedia menu, select the video player into the video list, press left soft key open the option menu:

Play: Play the current video file

Details: can view the video information, include date and size..

In playing interface, press the OK key or the left soft key to start/pause the current video, press the up/down navigation key to adjust the volume, press the right soft key to stop play and back to previous menu.

10. FM radio

FM radio is supported by the phone. Access the function only when you have plugged the earphone.

In FM radio interface, Press the left soft key to the option menu:

Power on/off: open/close the FM radio function.

Tune: Manual enter frequency to identify, Radio interface automatically skip to the frequency to listen.

Channel list: Display channel list

Volume: can adjust FM radio volume level.

Preset auto search: Can auto search channel and save channel.

Loudspeaker: Open (close) the function, Radio sound will play outside/Handset mode.

Record: Can record the current FM channel.

Append: append new record to previous record files.

File list: can display record file list.

Settings: you can set record format and quality.

Note: Quality of radio subscription is possible influenced by environment like indoor or under shield. You can improve this situation as following: stand closer to the window, adjust the position of earphone line or adjust the channel manually

11. Organizer

11.1 Calendar

Choose to enter the calendar, the screen will display the system date on the calendar month, and have a background box marked the current date. Press the navigation key to select the date, calendar information on the screen will be updated accordingly.

Select any date, press the left soft key to enter options to the following:

View task : View the details of the selected schedule, and re-editing of the operating schedule

Jump to date: Jump the selected date.

Go to today: the date of the input query calendar information

Week starts on: can set start on Sunday or Monday every week.

11.2 To do list

This feature allows you to easily manage all tasks in working life, arrange and record your do in the future matters. When you scheduled a matter of time arrives, the phone will provide a tone with you to complete these pre-arranged matters, the use of the same calendar.

11.3 Alarm

You can use the phone as alarm clock, this feature allows you to set time arrives, make the phone ring or vibrate to remind issue.

When the alarm is turned on state, the alarm symbol is displayed in the top of the screen.

When the alarm clock for reminders, press the left soft key to terminate the alarm reminder, press the right soft key is the alarm clock to sleep.

The phone number of alarm clocks available, both in the off or silent mode, set the alarm clock function has been effective.

Select any of the alarm clock, press the left soft key or OK key to the following:

1, can be turned on or off the selected alarm to open before the alarm clock icon will be displayed

2, set the alarm, reminder time

3, according to the time you need to set the alarm clock to remind the period of a day, week or custom to be reminded of a few days

4, the selected option when the alarm time to remind ring-tone

5, you can set sleep time

Set the required entry, press the right soft key to save and return directly.

11.4 Calculator

Into the calculator, the calculator interface:

Press 0 - 9 numeric keys to enter the number to be calculated,

Press the navigation key to select the location on the screen corresponding to add, subtract, multiply and divide symbols for computing

Press the # key for a decimal point.

Press the right soft key to clear the last bit can be input or the result (no input figures, has withdrawn from the calculator function) Press the left soft key or the OK button to display the results.

11.5 Flashlight

Into the flashlight interface, press the OK key or the left soft key to on/off the flashlight. Standby interface, long press the OK key, Torch on or off quickly.

11.6 Services

Enter network service menu, and the first menu is STK sub-menu. STK is the extra service offered by the network operator. Your phone supports STK function. This function cannot be used if the SIM card or the network operation company does not support this service.

For more information, please contact the network operator.

12. Shortcuts

This menu can be set more frequently used functions, so you can directly access the most rapid of these features. Quick list of features in the current case.

13. Input methods

This phone provides diversified input modes for you to enter letter information when editing SMS and adding phonebook.

Use the # key to switch between different input methods.

When editing the key controls:

The Left soft key: Generally represents confirmation.

The Right soft key: Press to clear one character, long press to clear all.

The End/Power key: Return to the idle screen.

[*] key: In every input status, press this key to call out punctuation and symbol input frame.

ABC (abc) input method

Each key is used to input several characters. Fast and repeatedly press key until your required character appears.

When you need to input English punctuation and some special signs, press the [*] numeric key to call out special sign input box in English input status

Press the [0] key to input blank once.

The Numeric input method

To input numerical values, press the respective numeric keys.

14. Phone maintenance

Mobile is a high-precision electronic products, please carefully maintained. The following suggestions can help you maintain phone, to extend the lifespan:

- Phone and its accessories should be placed out of the reach of children.
- Keep the device dry. Rain, humidity or moisture will corrode the circuit board. If the phone is accidentally flooded, shall promptly remove the battery, and immediately sent to a local authorized service center for processing.
- Do not place your phone in dusty places, this may affect the normal use of mobile phones.
- LCD display is easily damaged cell phone parts, mobile phone dropped onto the ground should be avoided or be strong vibration; prohibit the use of sharp objects to touch the screen.
- Do not place the phone where the temperature is too high. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt plastic shell phone.
- Do not place the phone where the temperature is too low. Otherwise, when the phone temperature to normal temperature, moisture will be generated internally, could damage the device electronic circuit boards.
- Do not drop, knock or severe shaking the phone, so as not to damage the internal circuit boards and precision mobile structure.
- Do not use chemicals, cleaning solvents or strong detergents to clean the device, apply a soft cloth soaked in soapy water and gently scrub.

-
- Do not use paint pigment cell phone to avoid moving parts and be stuck to proper operation.
 - Use a clean soft lens cleaning cloth. Such as: camera lens.
 - Replacement antenna, use only the supplied or designated by the antenna. Use of unauthorized antennas, cell phone accessories or modifications, could damage the device and may violate regulations governing radio devices.

15. Accessories

Use only batteries, chargers, and accessories approved by the manufacturer with this device. Use of any other types will invalidate the warranty and may be dangerous. Check with your dealer for available accessories. You may opt to buy:

Extra Battery

Extra batteries of various capacities are available from our company or through your dealer.

Charger Plug, charger cable

Charger plug used to connect with the charger cable for charging on wall outlets. Also you can use the charger cable to connect with the other devices such as the personal computers to charge the phone.

Charging time is about 2 to 3 hours. The charging condition is displayed on screen. You may use your phone while charging.

Earphone

A mini, practical, hands-free device; you can use its button to answer and end calls. Some models may also come with a volume control knob.

Do not plug or unplug the earphone when connecting dialed or incoming calls.

Please to adjust the incoming call alert volume to the felicitousness before you plug in the earphone.

16. Environment

Packaging

To facilitate the recycling of packaging materials, please obey the sorting rules instituted locally for this type of waste.

Batteries

Spent batteries must be deposited at the designated collection points.

The product

The crossed-out waste bin mark affixed to the product means that it belongs to the family of electrical and electronic equipment.

To promote the recycling and recovery of waste electrical and electronic equipment (WEEE) and at the same time safeguard the environment, European regulations require you to obey the sorting rules instituted locally for this type of waste.

17. Technical Specifications

Weight: 75g (including the Battery and Battery cover)

Dimensions: 45*107.2*13.2mm

Battery: Li-ion Battery, 3.7V

Band: GSM850MHz/DCS1900MHz

Battery Capacity: 650mAh

Talk Time: about 3.2 h

Standby Time: about 245h

Note: Actual operating conditions depend on the local network environment, SIM, and user behavior.

Warning: Any consequence caused by misuse, abuse, or not following any and all of the above-written suggestions and instructions shall not hold the producer in any way responsible to any degree.

Announcement: The manufacturer reserves the right to change or upgrade specifications or software versions without prior or separate notice. Trade marks mentioned or used in this material belong to their respective owners.

Warning

FCC RF Exposure Information and Statement:

The SAR limit of USA (FCC) is 1.6W/kg averaged over one gram of tissue.

Product, model number: Draco (FCC ID: ZYPDRACO) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the head is 1.018 W/kg and when properly worn on the body is 0.984 W/kg. The device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user body and the back of the handset. The use of belt clips, holders and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by

the party responsible for compliance could void the user's authority to operate the equipment.