

9721 Smart Phone User Manual



Contents

Start using your phone	1
To Make a call	9
Manage your Contacts	10
To Send/Receive Messages	11
Set-up your Email Accounts	12
Using the Internet	13
The Common Tools	14
Using the Camera	15
The Gallery	16
The Music	17
Maps and location	18
Wireless communication	19
Setting your phone	21

Start using your phone

This section provides an overview of the smart phone, including the locations of the connectors and controls and phone specifications.

Phone Layout



1	HOME	9	2 megapixel camera
2	BACK (Return)	10	Volume up
3	Microphone	11	Volume down
4	Multi-touch screen	12	Micro-USB port
5	MENU	13	Speaker
6	Receiver	14	Power button
7	3.5mm headset jack		

Installing the SIM cards

Your Subscriber/Universal Identity Module (SIM) card identifies you to the wireless network. Your phone will not work without the SIM card.

To install a SIM card, do the following:

1. Detach your SIM card.
2. Open the battery cover on the back of your phone.
3. Lift the battery up and out of your phone.
4. Align the SIM Cards metal contactors with those of the phone.

Inserting the battery

1. Open the battery cover on the back of your phone.
2. Align the battery's contact points with those of the phone and gently press the battery down into place.
3. Replace the battery cover clicking it back into position.

Charging the battery

1. Connect the charger to your phone, and plug it into a socket.
2. The battery indicator in the corner of the screen will scroll to show you it's charging.
3. When fully charged, the battery indicator will stop scrolling.
4. Disconnect the charger from your mobile, and unplug it.

Inserting the Storage card

1. Remove the back cover.
2. Insert the Micro-SD card into the slot with its gold contacts facing down and push it into its place.

Turning on your phone

Once you've installed your battery, you can turn on your phone and start using it. To turn on your phone Press the POWER button.

Turning off your phone

Unlock your phone if the Lock screen is displayed.

Press and hold the POWER button for a few seconds.
When the Phone options menu appears, tap Power off.

Home

Home screens

Home screens display the status of your phone and provide you with access to applications. By default, the main Home screen is displayed whenever you turn on your phone or press the Home button.

Extended Home screen


















 


There are five Home screens. Tap a blank area on the screen and slide your finger left or right horizontally to view the other Home screens.





 


You can customize the five Home screens to meet your personal preferences. For example, you can add or remove widgets or applications shortcuts, change the wallpaper and so on.

Phone status and notifications

Phone status icons and notification icons

These are the icons that may appear on the phone and notification area of the status bar:

Phone	Description	Notif y	Description
	3G data is connected and active		New Email message
	1x data is connected in idle status		New Gmail message
	GSM EDGE data service is connected		New Facebook message
	Wireless connection Wi-Fi is on		New Gtalk message
	GSM Signal strength		New SMS
	Flight mode		USB mode is connected
	WCDMA-1X/3G signal strength		General warning notification
	Battery level		Missed call
	Bluetooth is on		Music is playing
	Vibration mode is activated		Alarm is set to on


	Speaker is on		USB debugging mode connected
	No signal		Call in progress
	Microphone is muted		Memory is full
	Cord headset is connected		

Opening the Notifications panel


When a new notification icon displays in the status bar, press and hold the status bar, then slide your finger downward to open the Notifications panel.

Personalize your phone

Adding icons on your Home screen

1. Press HOME .
2. Long press the icon on the main interface until it's enlarged and the mobile phone vibrates.

Delete icons from the main interface

1. Long press the icon on the main interface until it's removable.
2. Drag the icon into  Remove to delete it.

Wallpaper

You can change the wallpaper by one of the following:

1. Press MENU , and then tap Wallpapers.

2. Or Long press "Home screen" to open the menu "Add to Home Screen", then choose Wallpapers

You can choose the wallpaper you want from:



- **Gallery**
- **Live wallpapers**
- **Wallpapers**
- **Video Wallpapers**



and Select the wallpaper and press "**Set wallpaper**" to complete.

Copying files to and from the Storage card


 
1. Connect the phone to your computer using the supplied USB cable.
2. When the Connect to PC dialog box appears, tap storage, and then tap Done.
3. On your computer, the connected phone is recognized as a removable disk. Navigate to this removable disk and copy the files.



To Make a call

You can dial either through the WCDMA or GSM network. You can tap  to make call using WCDMA SIM card or tap  to make call using the GSM SIM card.

1. Press HOME , and then tap the phone icon .
2. Choose the required number then tap Call icon of SIM1 or SIM2.

You can make a conference call based on network support for this service by:





- Tap add call  from in-call options, then enter the second party number you want to add to conference, then press dial icon,
- When the second party answer tap "Merge calls" .
- Now you can speak a conference call with all parties.

To answer a call, tap the green answer  icon and slide your finger horizontally to the right to answer the incoming call. To reject a call, tap the red reject  icon and slide your finger horizontally to the left to reject the incoming call. To mute the ringing sound without rejecting the call, Press any VOLUME button.





Manage your Contacts

To view the contacts on your phone do one of the following:

- Press the HOME , and tap Contacts .
- Press the Home key and tap first key , then choose  in the top of the screen.

Add a new contacts

1. Press HOME , and then tap Contacts .
2. On the contact screen, tap menu then select **New contact**.
3. Select where to save the Contact.
4. Enter the contact information in the fields provided.then tap **Done**

To Send/Receive Messages

Press HOME , and then tap **Applications**  > **Messages** .

- Red point indicates unread messages in the list.
- Tap to open the message and read the content.
- Messages are listed as threads, each thread shows the messages history of each sender/receiver.

Sending text and multimedia messages

Sending a text message

 
On the All messages screen, tap  on the top of the screen. Or press menu, then select **compose** to write a new message.

Fill in one or more recipients then send the message by W or G.



To receive delivery reports and know when a text message is received, in the All messages screen, press **MENU** and then tap **Settings**. In the SMS settings section, select the Delivery reports check box.

For sending Multimedia message, you can add a subject line to the new message by pressing **MENU** and then tapping **Add subject**.

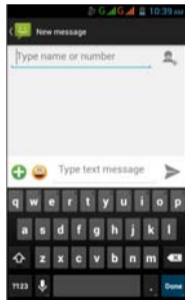To attach file, Press **MENU** and then tap **Attach**. Tap **Send**. Please make sure of the data connection type that will be used for sending the MMS from the Settings->Wireless & Networks – Mobile Networks.



Set-up your Email Accounts

1. Press HOME , then tap the applications  button.
2. Tap Email icon . The Email setup screen appears guiding you through the setup process. If your Email has already an account, then after opening the email application press **options** then **accounts** then **add account**. Tap **Next**.
3. Slide open the display to reveal the keyboard.
4. Type your e-mail address and password to your e-mail account, tap **Next** to finish setup automatically and go to your Inbox. For manually setting, please select manual and follow the instructions.

Send Email messages

While your email application is opened showing your inbox, press the **Menu** key.

Tap **Compose**, the keyboard will be displayed. Type a name or e-mail address in the **To** field.

If you want to add Cc or Bcc addresses, tap +Cc/Bcc.



Type the subject and message. You can attach picture, from the Menu. then tap Send.






Gmail Setup

Your phone can receive messages from your Gmail account by signing in to your phone, you are automatically set up by signing to your Gmail account to get the different services by Google, such as syncing your account and contacts, Google play, Gtalk, ..etc. You will be able also to receive your e-

mail messages, and there are no additional steps needed to set up Gmail on your phone.


Using the Internet

Your SMART PHONE phone provides you internet connectivity for the variety of applications and service. The following are some of the important applications that are used to connect to the internet, you will find those applications listed on your Applications menu, Press HOME , then tap the applications  button to open it:

- 1- Web Browsing : You will find the Web Browser in your applications menu for browsing Internet web pages.
- 2- Android Market (Play Store) : Download thousands of applications, games, and media files from Google play store.
- 3- Social Networks:
 - a. Facebook 
 - b. YouTube 
 - c. Google Talk 
 - d. Wechat  wiexin

The Common Tools

Alarm clock

To add an alarm, press  > **CLOCK** > Add alarm, then enter alarm details.
To turn on an alarm, tap the check box.

Calendar

Your calendar events can be viewed in different ways:

Tap > **Agenda, Day, Week, or Month.**

When you tap an event, more details appear.
tap + to enter a new event details.

Calculator

Your calculator has basic and advanced views. To change views, press **Menu** > Advance panel/Basic panel. To clear results, press clear button.

Viewing documents

You can browse and edit your different documents such as word file, Excel, PDF, and power point by using the different available applications for the Android operating system.



Using the Camera

Camera Basics

Be sure to plug in your microSD card before you use your phone's camera.

To open the camera in photo mode and take photos, press **HOME** , **applications**  and then tap

Camera icon 


Taking a photo

On the Viewfinder screen, tap the options as follow:

Exposure: Increase or decrease the amount of aperture time.

Zoom: Before taking the photo, you can zoom in first on your subject.

Capturing a video

On the Viewfinder screen, tap the  to make a video.

The Gallery

To open the Gallery, press HOME , applications  and then tap Gallery icon 

Simply tap an album to view the photos and/or videos in that album.

Viewing photos and videos

After selecting an album, you can browse the photos and videos of that album either in filmstrip or grid view. Tap a photo to view in full screen.




Watching video

The screen automatically switches to landscape mode when you play a video. Use the onscreen controls to play, pause, or stop the video. The video is displayed in full screen size.



The Music

You need to copy music files to your storage card first to use the Music application to play music.

To open the Music, press **HOME** , **applications**  and then tap **Music** icon .

Your music is organized into four categories: **Artists**, **Albums**, **Songs**, and **Playlists**.

the phone will play the following music file formats:

 
- MP3, M4A ,WAV, AMR, MIDI, OGG Vorbis

Access and play music

In the music application screen, Tap **Songs**. You can also tap **Artists**, **Albums**, or **Playlists**. Tap the song to play.

Add songs to new play list

1. In the Music application screen, Tap **Songs**.
2. Tap and hold the song that you want to add to the play list, tap **Add to playlist**.
3. Tap **New**, the keyboard will open.

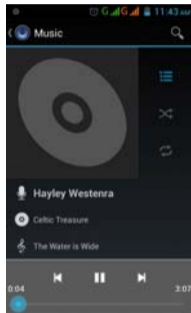

4. Type the name for the play list.
5. Tap Save.

Maps and location

Using Google Maps

Google Maps lets you track your current location, view real-time traffic



situations (depends on the service availability), and receive detailed directions to your destination.

- You need an active mobile data or Wi-Fi connection to use Google Maps.


Viewing locations

Turning on location services

Before you open Google Maps and find your location or search for places of interest, you must enable location sources.

- 1- Press HOME , applications  and then tap Settings > Location access.
- 2- Select Use wireless networks, Use GPS satellites, or both.

Finding your location

- Press HOME , applications  and then tap Maps 
- On the Google Maps screen, press MENU





- tap My Location, then Your location will be shown on the map as a blinking blue dot according to the results coming from the .

Wireless communication

Wi-Fi Connection

Your phone can connect to Wi-Fi networks. To connect:



1. Press HOME , applications .
2. Tap Settings.
3. Tap Wi-Fi to turn it on.
4. Tap Wi-Fi settings. Your phone scans for the available Wi-Fi networks.
5. Tap the Wi-Fi network that you want to connect to.
6. Tap Connect. If the network is secured, then you will be required to enter the network lock key.

 
Bluetooth®

Your phone comes with Bluetooth technology, which is a wireless technology that enables a data connection between your phone and other Bluetooth wireless devices such as phones, computers and headsets. Prepare a Bluetooth wireless headset to pair your phone with a Bluetooth headset, make sure that your headset is fully charged and that you put the headset into pairing mode. See your Bluetooth headset's manual for more information.

Turn on the Bluetooth feature and pair with a headset

Tap the status bar at the top of the home screen and drag it down. Tap the Bluetooth icon to turn on the bluetooth function.

1. Press HOME , applications .
2. Tap Settings.
3. Tap Bluetooth to turn it on.
5. Tap Bluetooth settings. Your phone scans for available Bluetooth devices.
6. Tap the headset to select it.
7. Slide open the display to reveal the keyboard and type the PIN if required.
8. Tap oK.

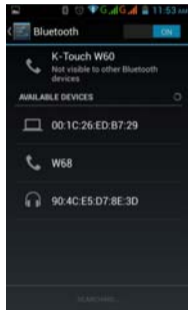

Setting your phone

The various settings available help you to personalize and optimize your phone.

The following table lists the main menu items on the Android Settings screen.

item	Description
Dual SIM Settings	Close the connection with the SIM Cards.
Wireless & networks	Configure and manage connections to networks and devices through Wi-Fi, Bluetooth, and mobile networks.
Call Settings	Configure the call settings in both WCDMA and GSM network such as voicemail, call forwarding and so on.
Sound	Configure the volume level and type; configure ringtones and alarms.
Display	Configure brightness and other screen settings.
Location & security	Configure how you want the phone to determine your location and how you want to share your location with Google and others.
Applications	View details about the applications installed on your phone, manage application data, close applications, and set whether you want to permit the installation of applications that you obtain from Web sites and e-mail.
Accounts	Add, remove, and manage your Google Accounts and other accounts.
Reset	Back up data or reset your phone.
Storage	Monitor the used and available space on your phone internal storage.
Language & input	Select the language that you want to work with on your phone and

	configure the input method.
Accessibility	Enable or disable accessibility technologies.
Date & time	Set date and time.
About phone	View information about your phone.

To access any item, do the following:

1. From the main Home screen, tap the Android Settings icon, or tap the applications icon and then tap Settings . The Android Settings screen opens.
2. Tap an item from the main menu. The submenu for the item is displayed.

Warning

Specific Absorption Rate (SAR) information SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value, in

general, the closer you are to a wireless base station

antenna, the lower the power output. Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC, Tests for each phone are performed in positions and locations (e.g. at the ear and worn on the body) as required

by the FCC. For body worn operation, this model phone has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 1.5 cm from the body.

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1)

This device may not cause harmful interference, and (2)

this device must accept any interference received,

including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by

the party responsible for compliance could void the user's

authority to operate the equipment.

Note: This equipment has been tested and found to

comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning

the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.