

Get started


[Quick Guide](#)

Insert SIM card

The phone is a Dual SIM mobile phone allowing you to use the facility of two networks.

To insert SIM card(s):

1. Switch off the mobile phone and remove the rear cover and battery.
2. Insert the SIM card correctly in the card slot(s) (See figure below)
3. Finally insert the battery and replace the rear cover of the mobile phone.

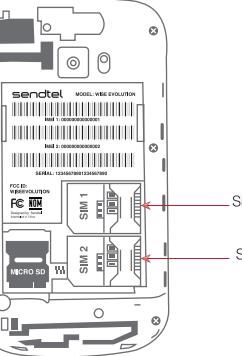


Insert Memory card

1. Power off the mobile phone and remove the rear cover and battery.

You can charge your battery using the charger or connect the USB cable (supplied with this phone) to the computer.

2. Insert the Micro SD card into the slot.

Note: Please use the specific battery, otherwise it may cause explosion.

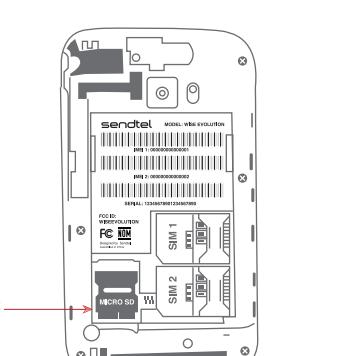

Charge the Battery or Connect to a computer

The smart phone supports 3G Card and gives you marvelous feelings to experience on Camera, Video recorder, FM radio, Music and Sound recorder. Let you install various APPs, games, and more (supports APK format) by download from Play Store

1. After sales service

Kinly refer to the Warranty Card provided in the sales package box.

2. Charger and Adapter Safety

Charger and adapter are designed for indoor use only.

3. Battery Information and Care

- Please use the specific battery, otherwise it will cause explosion.
- Please dispose of your battery properly.
- Do not disassemble or short-circuit the battery.
- Keep the battery's metal contacts clean.
- Recharge the battery after long periods of non-use to maximize battery life.
- Battery life will vary due to usage patterns and environmental conditions.
- The self-protection function of the battery cuts the power of the phone when its operation is in an abnormal status. In this case, remove the battery from the phone, reinsert it, and turn the phone on.

4.General Notice

Using a damaged battery or placing a battery in your mouth may cause serious injury.

- Do not place items containing magnetic components such as a credit card, phone card, bank book, or subway ticket near your

Keys and parts

Frontal Camera, Speaker, LCD, Power On/Off, Back Camera, Flash, Home, Menú, Back.



Lock and Unlock the Screen

Press power button to enter Sleep mode and meanwhile the screen will be locked; press power button again to wake up and then drag the lock to the right side to unlock.

1. After sales service

Kinly refer to the Warranty Card provided in the sales package box.

2. Charger and Adapter Safety

Charger and adapter are designed for indoor use only.

3. Battery Information and Care

- Please use the specific battery, otherwise it will cause explosion.
- Please dispose of your battery properly.
- Do not disassemble or short-circuit the battery.
- Keep the battery's metal contacts clean.
- Recharge the battery after long periods of non-use to maximize battery life.
- Battery life will vary due to usage patterns and environmental conditions.
- The self-protection function of the battery cuts the power of the phone when its operation is in an abnormal status. In this case, remove the battery from the phone, reinsert it, and turn the phone on.

4.General Notice

Using a damaged battery or placing a battery in your mouth may cause serious injury.

- Do not place items containing magnetic components such as a credit card, phone card, bank book, or subway ticket near your

Maintenance & Safety

phone. The magnetism of the phone may damage the data stored in the magnetic strip.

- Talking on your phone for long period of time may reduce call quality due to heat generated during use.
- When the phone was not used for a long period time, store it in a safe place with the power cord unplugged.
- Using the phone in proximity to receiving equipment (i.e. TV or Radio) may cause interference to the phone.
- Do not immerse your phone in water. If this happens, remove the battery and take it to an Authorized Service Center.
- Do not paint your phone.
- The data saved in your phone might be deleted due to careless use, repair work, or upgrade of the software. Please backup your important phone numbers, (Ring tones, text messages, voice messages, picture, and videos could also be deleted). The manufacturer is not liable for damage due to the loss of data.
- Do not turn your phone on or off when the phone is close to your ear.

*This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

[DOWNLOAD FULL USER MANUAL](#)
Get in [www.sendtelmobile](#)
Click the download menu, then the manual link and introduces model name Wise Evolution

sendtel

Wise Evolution QuickGuide

[www.sendtelmobile.com](#)

Comenzar


[Guía Rápida](#)

Insertar tarjeta SIM

El teléfono es Dual SIM, lo cual le permite la opción de tener dos proveedores de servicio.

Para Insertar la(s) tarjeta(s) SIM:

1. Apagar el teléfono, remover la tapa y la batería.
2. Insertar la tarjeta SIM correctamente en el(las) espacio(s) destinado(s) para ello (ver figura abajo)
3. Finalmente insertar la batería y colocar la tapa del teléfono.

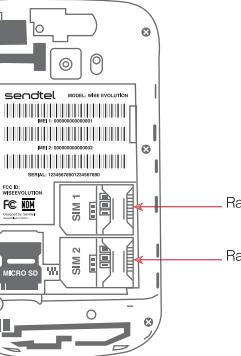


Insertar tarjeta de memoria

1. Apagar el teléfono, remover la tapa y la batería.

2. Insertar la tarjeta SIM correctamente en el(los) espacio(s) destinado(s) para ello (ver figura abajo)

3. Finalmente insertar la batería y colocar la tapa del teléfono.

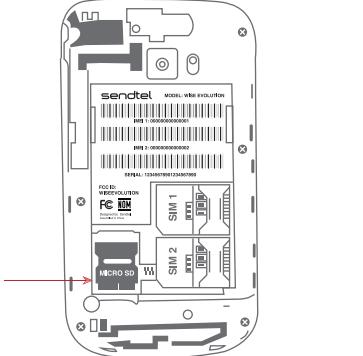

Cargar la Batería o Conectar a un computador

Se puede cargar la batería usando el cargador o conectando el cable USB (suministrado con este teléfono) al computador.

Nota:

Usar solo tarjetas de memoria compatibles con este dispositivo. Tarjetas de memoria incompatibles podrían dañar la tarjeta del dispositivo y corromper la data almacenada en la misma.



Teclas y partes

Cámaras, Altavoz, Botón de encendido y apagado, Cámaras, Flash, Inicio, Menú, Volver.



Bloquear y Desbloquear la Pantalla

Presionar el botón de encendido para entrar en el Modo de Suspensión, la pantalla será bloqueada; presionar el botón de encendido nuevamente para activar de nuevo la pantalla y arrastrar el candado hacia el lado derecho para desbloquear.

1. Servicio Post Venta: Refiérase a la tarjeta de Garantía en la Caja

2. Cargador y adaptador: El cargador y el adaptador, están diseñado solo para uso en interiores.

3. Información y cuidado de la batería

- Por favor utilizar solamente la batería suministrada, de lo contrario la unidad podría explotar.
- Favor desechar la batería adecuadamente.
- No desarmar ni hacer cortocircuito de la batería.
- Mantener limpios los contactos metálicos de la batería.
- Recargar la batería luego de un largo período sin haberla usado para maximizar la vida de la batería.
- El tiempo de vida de la batería puede variar de acuerdo al entorno y la red.
- La función de auto-protección de la batería apaga el teléfono cuando su operación está en un estatus anormal. En este caso, quitar la batería del teléfono, reinsertarla, y encender el teléfono.

Mantenimiento y Seguridad

4.Aviso General

- Usar una batería en mal estado o colocar la batería en su boca puede causar daños severos.
- No colocar su teléfono cerca de otros aparatos u objetos con componentes magnéticos como lo son tarjetas de crédito, tarjetas telefónicas, boletos de subterráneos, etc. El magnetismo podría dañar la data almacenada en el teléfono.
- Hablar prolongadamente por teléfono puede reducir la calidad de la llamada y producir calor.
- User el teléfono cerca de aparatos receptores de onda pueda causar interferencias como por ejemplo la TV y la Radio.
- No sumergir su teléfono en agua. En caso que esto ocurra, por favor retirar la batería y llevar su teléfono a un centro de servicio autorizado.
- Los datos almacenados en su teléfono pueden ser borrados si el equipo requiere de alguna reparación o actualización de Software. Por favor haga un respaldo de su teléfono antes de entregarlo en un centro de servicio autorizado o bien antes de hacerle una actualización de software. El fabricante no será responsable por la pérdida de información en los teléfonos.
- No prender ni apagar su teléfono cuando éste se encuentre cerca de su oído.
- Cuando el teléfono no vaya a ser usado por un largo período de tiempo, guardar desenchufado en un lugar seguro.
- No pintar su teléfono

*Este dispositivo cumple con la sección 15 de las normas FCC. La operación está sujeta a las siguientes dos condiciones:

(1) Este dispositivo no puede causar interferencia dañina, y (2) este dispositivo debe aceptar cualquier interferencia recibida, incluidas las interferencias que puedan provocar un funcionamiento no deseado o cambios o modificaciones no aprobadas expresamente por la parte responsable del cumplimiento, pueden anular la autoridad del usuario para operar el equipo.

[PARA DESCARGAR EL MANUAL COMPLETO DEL USUARIO](#)
Entrar a [www.sendtelmobile](#)
Pulse el menú de descarga, luego al link de manuales e introduce el nombre del modelo Wise Evolution

Visítanos en nuestras redes sociales

sendtel

Wise Evolution GuíaRápida

[www.sendtelmobile.com](#)

Warning

FCC RF Exposure Information and Statement:
The SAR limit of USA (FCC) is 1.6W/kg averaged over one gram of tissue. Product, model number: WISE EVOLUTION (FCC ID: 2ABD9, IC: 20956), SAR value reported is 0.523 W/kg. The highest SAR value reported under this standard during product certification for use at the head is 1.126 W/kg and when worn on the body is 0.523 W/kg. The maximum scaled SAR in hotspot mode is 0.743 W/kg. The device was tested for typical body-worn operations with the back of the handset kept 1.0cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the body and the device during use.

The use of belt clips, holders and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.