 


# INSTRUCTION MANUAL

## BLUETOOTH SPEAKER SYSTEM

**MODEL: BSX300A**

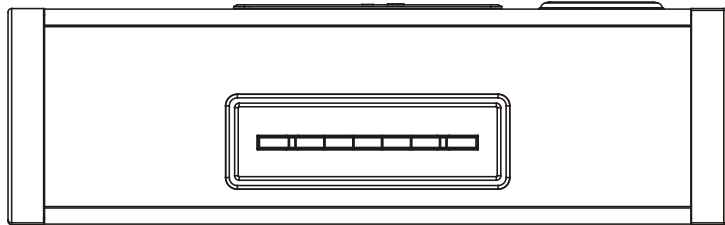

Please read following instructions prior to operating your unit.

Manufacturer of this unit follows a principle of continuous improvement and has no responsibility for any changes that are made to the unit or any liability for these changes. Thanks for your choice of our products.

 
 
 
## FCC Warnings

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

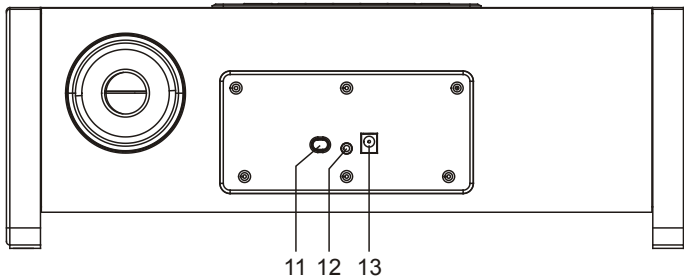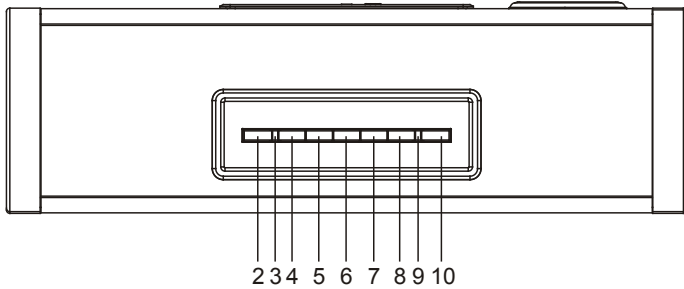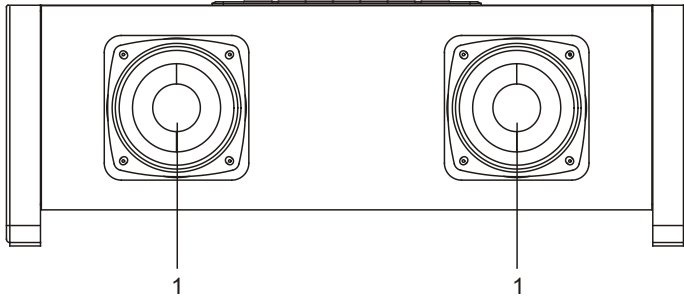

## LOCATION OF CONTROLS

### 1. SPEAKERS

### 2. BLUETOOTH BUTTON

### 3. BLUETOOTH INDICATOR

STATUS	INDICATOR
Power on	lights up, green
Pairing mode	flashes, blue
Connecting mode	lights up, blue

### 4. PREV BUTTON

### 5. NEXT BUTTON

### 6. PLAY/PAUSE BUTTON

### 7. VOL- BUTTON

### 8. VOL+ BUTTON

### 9. AUX IN LED INDICATOR

### 10. AUX IN BUTTON

### 11. POWER

### 12. AUX IN JACK

### 13. DC IN JACK

## POWER SUPPLY

Connect the AC/DC adapter to the unit and the main power.

## VOLUME LEVEL

Press VOL+/- button to adjust the volume level accordingly. Beep tones will be heard when Volume Maximum is reached.

## BLUETOOTH CONNECTION

This unit can receive stereo audio signal from a BLUETOOTH stereo audio source device.

1. Press the POWER button to turn the unit on.
2. Press the BLUETOOTH button to turn on the BLUETOOTH feature (Bluetooth LED indicator rapid blinking).
3. Pair and connect to F-3088 on the BLUETOOTH audio source device. If prompted for passcode, enter "0000".
4. Pairing successful (Bluetooth LED indicator blue), ready to stream music.
5. Press the PLAY/PAUSE button to pause/resume the playback.
6. During playback, press the NEXT button to skip to the next track. Press and hold to search through the current track forward.
7. During playback, Press the PREV button once to skip to the beginning of the current track; press the PREV button twice to skip to the previous track. Press and hold to search through the current track backward.

### Note:

- Pairing mode is canceled (LED indicator green) about 1.5 minutes
- The above are generic steps to pair a BLUETOOTH device, for more specific instructions on BLUETOOTH connectivity for your device, please consult your manufacturer's manual.
- Once the unit enters to the BLUETOOTH mode, it will connect to the last paired external BLUETOOTH device automatically.

## AUX IN

Follow below steps to connect the unit to another audio device like MP3 player and the like:

1. Connect the Audio Out of the device to AUX IN jack on the rear of the unit with audio cable.
2. Press the POWER button to turn the unit on.
3. Press the AUX IN button to switch the unit to AUX mode.
4. Power on the device and begin playback.

## IMPORTANT SAFETY INSTRUCTIONS

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- When the AC/DC adapter is used as the disconnect device, the disconnect device shall remain readily operable. To be completely disconnected the power input, the AC/DC adapter shall be disconnected from the mains completely.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- Minimum distances 2.0cm around the apparatus for sufficient ventilation. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
- The use of apparatus is in tropical and/or moderate climates.
- The marking plate is located at the back of the apparatus.