 


INSTRUCTION MANUAL

FM Stereo Radio With Bluetooth Reception And USB/SD Card Reader

MODEL: BTU219A-FM

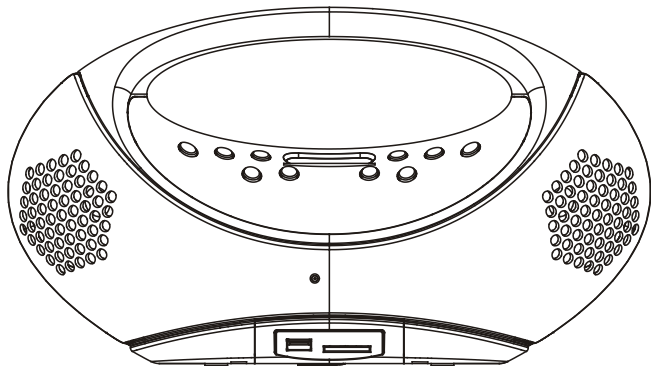

Please read following instructions prior to operating your unit.

Manufacturer of this unit follows a principle of continuous improvement and has no responsibility for any changes that are made to the unit or any liability for these changes. Thanks for your choice of our products.

FCC Warnings

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

 
- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:



- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

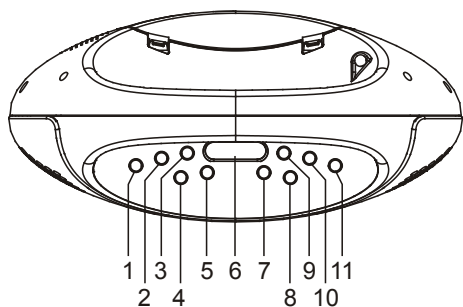

MAIN UNIT

  1. POWER BUTTON
2. SOURCE BUTTON
3. PAIRING BUTTON
4. VOL- BUTTON
5. VOL+ BUTTON
6. LCD DISPLAY
7. SKIP DN/TUN- BUTTON
8. SKIP UP/TUN+ BUTTON
9. STOP/CH- BUTTON
10. PLAY/PAUSE/CH+ BUTTON
11. MEM BUTTON

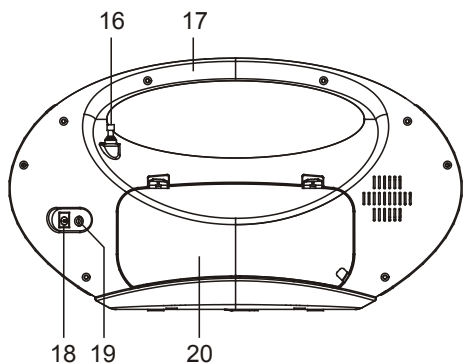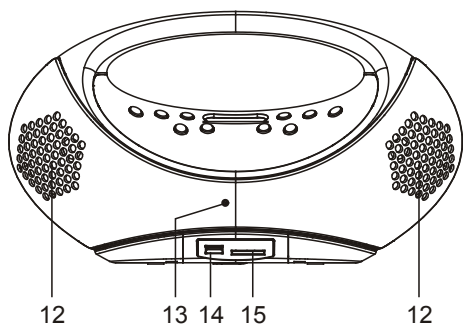

POWER SUPPLY

❑ BATTERY OPERATION

1. Remove the battery compartment cover gently.
2. Install 4 x 'C' size batteries (UM-2 or equivalent) while observing the correct polarities.
3. Replace the battery compartment cover.

NOTE:

- The AC/DC adapter must be detached from the DC IN jack of the player for battery operation.
- Leaking batteries may damage the battery cabinet and the player as a whole, so they should be removed from the cabinet when becoming flat or when the player is not to be played on batteries for some time.

❑ DC INPUT OPERATION

Plug the supplied adapter to the DC IN jack on the rear of the unit and to the main power.

BLUETOOTH OPERATING

This unit can receive stereo audio signal from a BLUETOOTH stereo audio source device.

1. Power on the unit by pressing the POWER button, switch to BLUETOOTH mode by pressing SOURCE repeatedly, "BT" shows on the display.
2. LED indicator rapid blinking while it is pairing.
3. Pair and connect to PH11 on the BLUETOOTH audio source device. If prompted for passcode, enter "0000".
4. Pairing successful (LED indicator lights solid blue), ready to stream music.
5. Press the PLAY/PAUSE/CH+ button to pause/resume the playback.
6. During playback, press the SKIP DN/TUN- button once to go back the beginning of the current track, press the SKIP DN/TUN- button twice continuously to skip to the previous track.
7. During playback, press the SKIPUP/TUN+ button to skip to the next track.
8. Press and hold the SKIP UP/TUN+ or SKIP DN/TUN- button to search through the current track forward or backward. Release the SKIP UP/TUN+ or SKIP DN/TUN- button to resume normal play

Note:

- Pairing mode is canceled about 1.5 minutes.
- The above are generic steps to pair a BLUETOOTH device, for more specific instructions on BLUETOOTH connectivity for your device, please consult your manufacturer's manual.
- After the first connection, the unit will detect your last paired BLUETOOTH device and connect to it automatically.

RE-CONNECT TO THE BLUETOOTH AUDIO SOURCE DEVICE

If the device is already paired with the PH11, but became unconnected even with both Bluetooth devices turned on. You can re-connect them by following steps:

1. Press the PAIRING button to re-link the audio source device. The Bluetooth indicator will blink for about 1.5 minutes for connecting.
2. Select PH11 on the audio source device for connecting. Bluetooth indicator will turn to solid blue if the PH11 and the device have been re-connected successfully.

FM RADIO

TUNING THE FM RADIO

1. Power on the unit, switch to the radio mode by pressing the SOURCE button repeatedly.
2. Extend the FM TELESCOPIC ANTENNA fully and adjust its direction for best reception.
3. Press the SKIP UP/TUN+ or SKIP DN/TUN- button to fine tune radio station. Press and hold the SKIP UP/TUN+ or SKIP DN/TUN- button to auto search radio station forward or backward from the current frequency respectively (When an available station will be found, the unit will broadcast it immediately and the searching will be stopped).

STORING YOUR FAVORITE RADIO STATION

1. During playback, press the MEM button for storing the current station until memory cell number flashes on the display.
2. Use the STOP/CH- or PLAY/PAUSE/CH+ button to select the corresponding memory cell for storing the station.
3. Confirm your selection by pressing the MEM button again.
4. During radio playback, press the STOP/CH- or PLAY/PAUSE/CH+ button repeatedly to recall the stored stations.

VOLUME LEVEL ADJUSTMENT

Press the VOL+/- button to adjust the volume output level.

USB/CARD PLAYBACK

1. Power on the unit, insert an USB or a SD/MMC card into the unit.
2. Press the SOURCE button repeatedly to switch to USB or card mode. The playback will start automatically.
3. Press the SKIPUP/TUN+ button to skip to the next track; press and hold to search through the track forward.
4. Press the SKIP DN/TUN- button to skip to the previous track; press and hold to search through the track backward.
5. Press the PLAY/PAUSE/CH+ button to pause the playback; press the button again to resume normal playback.
6. Press the STOP/CH- button to cease the playback.

LINE IN

1. Connect the LINE IN jack on the rear of the unit to an audio source, for example, MP3 player with an audio cable.
2. Press the POWER button to turn the unit on.
3. Press the SOURCE button repeatedly to switch to LINE in mode.
4. Use the native controls on the connected audio device to begin playing music through the connected the unit.

TROUBLE SHOOTING

Symptom	Possible Cause	Solution
Radio sound distorted.	1. The station is not tuned in. 2. There is a poor signal in the area.	1. Fine tune the station. 2. Reposition the unit.
No radio sound.	1. The unit is not in radio mode. 2. The volume is on the minimum setting.	1. Press the SOURCE button repeatedly until switching to radio mode. 2. Adjust the volume level.
No sound at Bluetooth mode	1. The Bluetooth device is not paired with the unit. 2. The volume is on the minimum setting.	1. Follow the instructions to pair the Bluetooth device to the unit. 2. Adjust the volume level.

IMPORTANT SAFETY INSTRUCTIONS

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- When the AC/DC adapter is used as the disconnect device, the disconnect device shall remain readily operable. To be completely disconnected the power input, the AC/DC adapter shall be disconnected from the mains completely.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- Minimum distances 2.0cm around the apparatus for sufficient ventilation. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
- The use of apparatus is in tropical and/or moderate climates.
- Attention should be drawn to the environmental aspects of battery disposal.
- CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- The marking plate is located at the bottom of the apparatus.