

INSTRUCTION MANUAL

BAR SPEAKER WITH BLUETOOTH RECEPTION & FM RADIO AND USB PORT & SD/MMC CARD SLOT

 
MODEL: MIB668CR

FCC Warnings

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.




Please read following instructions prior to operating your unit.

 Manufacturer of this unit follows a principle of continuous improvement and has no responsibility for any changes that are made to the unit or any liability for these changes. Thanks for your choice of our products.

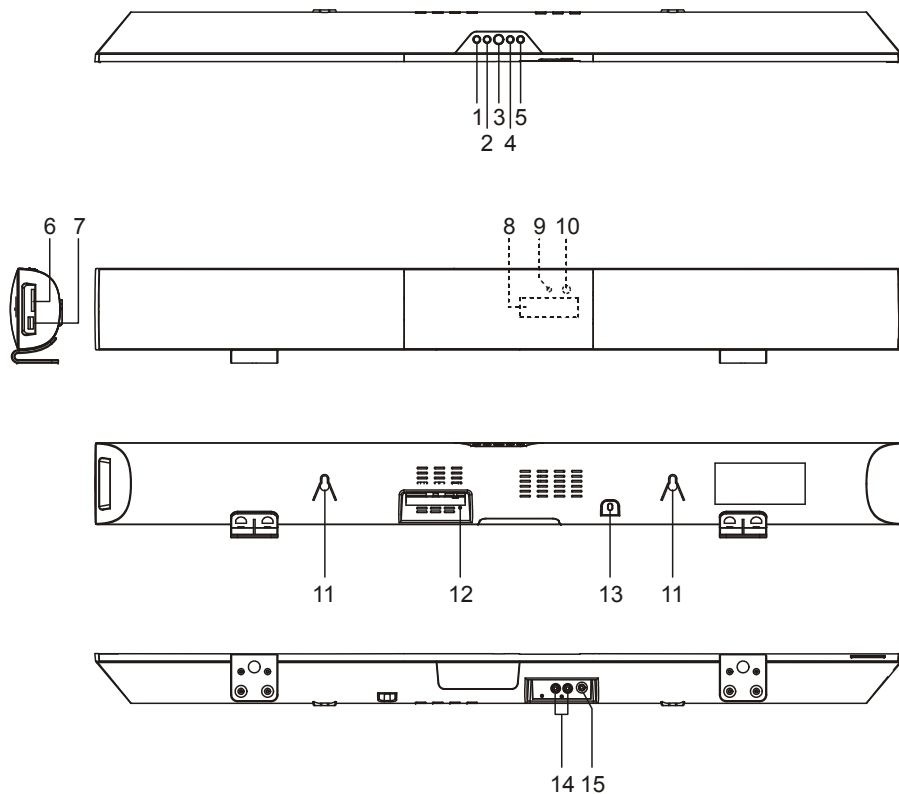

MAIN UNIT

 - 1. VOLUME - BUTTON
- 2. VOLUME + BUTTON
- 3. STANDBY BUTTON
- 4. MODE BUTTON
- 5. PAIR/PLAY/PAUSE BUTTON
- 6. SD/MMC CARD SLOT
- 7. USB PORT
- 8. LCD DISPLAY
- 9. BLUETOOTH INDICATOR
- 10. REMOTE SENSOR
- 11. HANGING HOLES
- 12. FM ANTENNA
- 13. AC CORD
- 14. AUX IN JACKS
- 15. LINE IN JACK

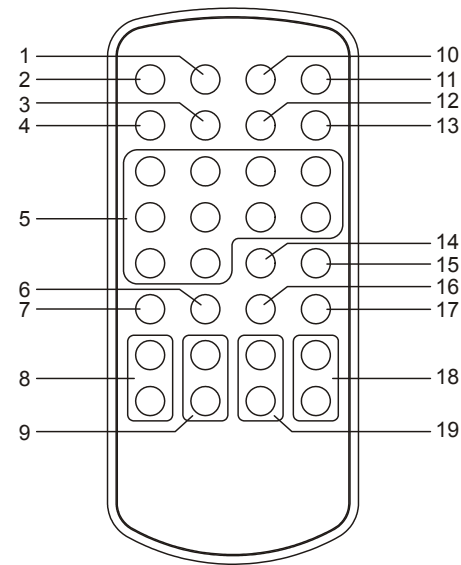

REMOTE CONTROL

- 1. SLEEP BUTTON
- 2. MODE BUTTON
- 3. CLOCK BUTTON
- 4. TIMER BUTTON
- 5. NUMERIC BUTTONS
- 6. VOICE BUTTON
- 7. EQ BUTTON
- 8. BASS +/- BUTTONS
- 9. TREBLE +/- BUTTONS
- 10. MUTE BUTTON
- 11. STANDBY BUTTON
- 12. TUNING/SKIP/SEARCH BACKWARD BUTTON
- 13. TUNING/SKIP/SEARCH FORWARD BUTTON
- 14. MEM BUTTON
- 15. PAIR/PLAY/PAUSE BUTTON
- 16. MUSIC BUTTON
- 17. MOVIE BUTTON
- 18. VOL +/- BUTTONS
- 19. CH +/- BUTTONS

POWER SUPPLY

Plug AC plug into the outlet socket for connecting the main power.

SLEEP TIMER SETTING

You can set the sleep timer at power on modes as following instructions:

During playback, press the SLEEP button on the remote repeatedly to cycle through the sleep time options, Release the SLEEP button when your desired sleep time shows on the screen. Once the sleep time is expired, the unit will be switched off.

During playback, press SLEEP button once to check the remaining sleep time.

HOW TO SET TIME

At the standby mode, press and hold the CLOCK button on the remote until Hour flashes on the screen; use the TUNING/SKIP/SEARCH buttons on the remote to adjust the hour and confirm your adjustment by pressing the CLOCK button on the remote; Minute starts blinking on the screen, press the TUNING/SKIP/SEARCH buttons on the remote to set the minute accordingly, press the CLOCK button on the remote again to confirm your setting.

During playback, press and hold the CLOCK button on the remote to check the current time.
 Note: The time only could be set at standby mode.

TIMER SETTING

1. At standby mode, press and hold the TIMER button on the remote. The hour on the display will begin blinking on the screen with the flashing timer icon “T”.
2. Press the TUNING/SKIP/SEARCH buttons on the remote to adjust the hour.
3. Press the TIMER button to confirm. The minute on the display will begin blinking.
4. Press the TUNING/SKIP/SEARCH buttons on the remote to adjust the minute.
5. Press the TIMER button on the remote to confirm your setting.
6. After the set time is reached, the unit will power on to the radio automatically.
7. The timer function can be deactivated or activated by short pressing the TIMER button on the remote.

USB & SD/MMC CARD PLAYBACK

1. Power on the unit, insert an USB or a SD/MMC card into the unit.
2. Press MODE button repeatedly to switch to USB or card mode. The playback will start automatically.
3. Press the TUNING SKIP/SEARCH FORWARD button on the remote to skip to the next track; press and hold to search through the track forward.
4. Press the TUNING SKIP/SEARCH BACKWARD button on the remote to skip to the previous track; press and hold to search through the track backward.
5. Use the numeric buttons to enter the track number to select your desired track for playback.

BLUETOOTH OPERATING

This unit can receive stereo audio signal from a BLUETOOTH stereo audio source device.

1. Power on the unit, switch to BLUETOOTH mode by pressing MODE button repeatedly.
2. LED indicator rapid blinking while it is pairing.
3. Enable the Bluetooth of the Bluetooth audio source device.
4. Pair and connect to MIB668A(the unit) on the audio source device. If prompted for passcode, enter “0000”.
5. Pairing successful (LED indicator blue), ready to stream music.
6. During playback, press PLAY/PAUSE button to cease or resume the playback.
7. During playback, press TUNING/SKIP/SEARCH FORWARD button to skip to the next track; press TUNING/SKIP/SEARCH BACKWARD button twice to skip to the previous track.
8. During playback, press and hold TUNING/SKIP/SEARCH buttons to search through the current track forward or backward.

Note:

- Pairing mode is canceled about 1.5 minutes.
- The above are generic steps to pair a BLUETOOTH device, for more specific instructions on BLUETOOTH connectivity for your device, please consult your manufacturer’s manual.

RE-CONNECT TO THE BLUETOOTH AUDIO SOURCE DEVICE

If the device is already paired with the MIB668A, but became unconnected even with both Bluetooth devices turned on. You can re-connect them by following steps:

1. Press and hold the PAIR button on the unit or on the remote to re-link the audio source device. The Bluetooth indicator will blink for about 1.5 minutes for connecting.

2. Select MIB668A on the audio source device for connecting. Bluetooth indicator will turn to solid blue if the MIB668A and the device have been re-connected successfully.

EQ EFFECTS

During playback, press EQ button on the remote repeatedly to cycle through the EQ options; when your desired EQ effect shows on the screen, release the button.

FM RADIO

TUNING THE FM RADIO

1. Power on the unit, switch to FM (RADIO) mode by pressing MODE button repeatedly.
2. Press the TUNING/SKIP/SEARCH buttons on the remote to fine tune radio station. Press and hold the TUNING/SKIP/SEARCH buttons on the remote to auto search radio station forward or backward respectively (When an available station will be found, the unit will broadcast it immediately and the searching will be stopped). During auto searching, press the TUNING/SKIP/SEARCH buttons on the remote to stop the searching.
3. At radio mode, it is possible to access the frequency via numeric buttons on the remote control. For example, press buttons 8, 9 and 8 to get to 89.8 MHz.

STORING YOUR FAVORITE RADIO STATION

1. During playback, press the MEM button on the remote for storing the current station until a memory cell number flashes on the screen.
2. Use the CH+ or CH- buttons on the remote to select the corresponding memory cell for storing the station.
3. Confirm your selection by pressing the MEM button on the remote.
4. During radio playback, press the CH+ or CH- buttons on the remote repeatedly to recall the stored stations.

MUTE THE UNIT

During playback, press the MUTE button on the remote to switch off the audio. Press the button again to resume the audio.

 
VOLUME LEVEL/TREBLE/BASS ADJUSTMENT

Press the VOLUME +/- buttons or TREBLE +/- buttons or BASS +/- buttons on the remote to adjust the volume output level or treble effect or bass effect.

PROFESSIONAL AUDIO MODES

During playback, press the VOICE, MUSIC or MOVIE buttons on the remote to switch among voice, music and movie audio modes for getting high sound quality. The audio modes can reveal the characters and details of the sound of the voice, music and movie and make you liked being there.

CONNECTING WITH OTHER DEVICES

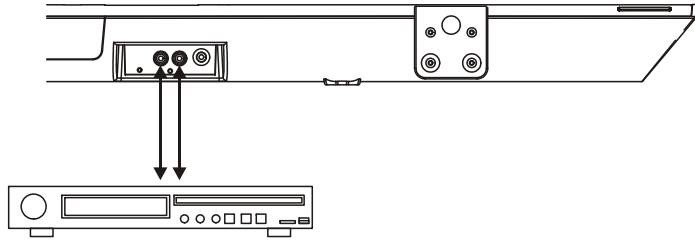

AUDIO IN

1. Connect the Aux in jacks on the unit to audio source, for example, DVD player with an RCA cable.
2. Power on the unit and the audio device.
3. Press the MODE button repeatedly to switch to AUX mode.
4. Use the native controls on the connected audio device to begin playing music through the connected unit.

LINE IN

Follow steps to connect the unit to another audio device:

1. Connect the device into the unit's LINE IN jack with the LINE OUT cable.
2. Press STANDBY button to turn the unit on.
3. Press MODE button repeatedly to switch the unit to Line mode.
4. Power on the device and begin play.

TROUBLE SHOOTING

| Symptom | Possible Cause | Solution |
|--|--|--|
| Radio sound distorted. | <ol style="list-style-type: none"> 1. The station is not tuned in. 2. There is a poor signal in the area. | <ol style="list-style-type: none"> 1. Fine tune the station. 2. Unwind the wire antenna for best reception |
| No radio sound. | <ol style="list-style-type: none"> 1. The unit is not at tuner mode. 2. The volume has been muted or is on the minimum setting. | <ol style="list-style-type: none"> 1. Press MODE button repeatedly until switching to tuner. 2. Adjust the volume level or press the MUTE button to resume audio. |
| No Sound at Bluetooth mode. | <ol style="list-style-type: none"> 1. The unit is not connected with the audio source device. 2. The unit is placed out of the range 3. The volume has been muted or is on the minimum setting. | <ol style="list-style-type: none"> 1. Follow the manual to connect the audio source device to the unit. 2. Relocate the unit within Bluetooth operating range. 3. Adjust the volume level or press the MUTE button to resume audio. |
| Sound is distorted at Bluetooth/AUX/Line in modes. | Sound source is distorted. | If the original sound source of the external device is poor quality or with distortion and noise, it will be easily noticed with high-power speakers. Try a different audio source. |
| No sound at AUX/Line in modes. | <ol style="list-style-type: none"> 1. The unit is not connected the external appliance properly. 2. The volume has been muted or is on the minimum setting. | <ol style="list-style-type: none"> 1. Follow the manual to reconnect the audio appliance to the unit. 2. Adjust the volume level or press MUTE button to resume audio. |

IMPORTANT SAFETY INSTRUCTIONS

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- When the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable. To be completely disconnected the power input, the mains plug of the apparatus or the appliance coupler shall be disconnected from the mains completely.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- Minimum distances 2.0cm around the apparatus for sufficient ventilation. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
- The use of apparatus is in tropical and/or moderate climates.
- Attention should be drawn to the environmental aspects of battery disposal.
- CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- The marking plate is located at the back of the apparatus.