ON/OFF switch

Owner's Manual

Repair and Parts Department Monday to Friday 8:30AM-5:30PM Central Time

Repair:(800)736-4556 Parts:(800)776-4556 Fax:(972)578-7059 e-mail:help@nikkoamerica.com

- Please read carefully before starting to operate.
- Warning! use under the direct supervision of an adult.
- Keep the display box and the manual for future reference.
- Actual product may vary from illustration of this manual.

For ages 6 and up

ATTENTION PARENTS

or replaced.

It is recommended that this toy and all


accessories be periodically examined

for potential hazards and that any po-

tentially hazardous parts be repaired

PRINTED IN CHINA

How to take the transmitter

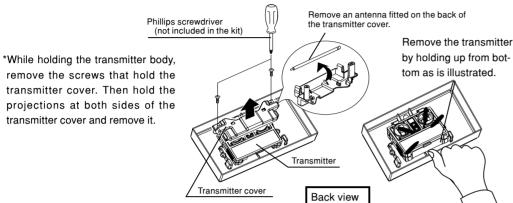

* When storing for a long time:

Take the transmitter antenna off the transmitter after playing. Store it as the same condition as you purchased. You do not have to fix it by screws. Fix the body by screws only when you store it for a long period of time.

How to install transmitter antenna


Place the transmitter antenna into the antenna holder and screw it in clockwise.

Do not install the antenna extended.

If the antenna is not screwed in securely, the vehicle may not move at your control. Screw the antenna securely.




BATTERY INSTALLATION

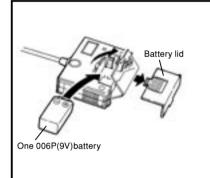

Transmitter

To remove the battery lid, press the point marked "OPEN" and pull downward. Install the 9V battery, matching the polarity(+ and -) symbols marked inside.

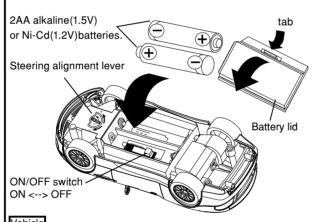

Vehicle

Open the battery lid.

Push the battery lid stopper with your finger as shown, and pull up the lid. The lid can be opened easily by using the tab next to the stopper.

Install either two AA (1.5V) alkaline batteries or two Ni-Cd batteries. Install as indicated inside the battery compartment.

Replace the battery lid.

Make sure that the batteries are positioned in the right direction

Check to see that the battery is INSTALLED in the CORRECT position.

3 MAJOR CAUSES OF VEHICLE MALFUNCTION

*WEAK BATTERIES

*INCORRECT BATTERY INSTALLATION

 
*INTERFERENCE

CAUTION WHEN USING BATTERIES

- Install battery making sure that + and poles of the battery are positioned properly.
- Make sure vehicle's on-off switch is turned OFF when installing battery.
- Remove all the batteries from the vehicle and the transmitter after playing.
- Avoid combined use of new dry battries and old ones.
- Avoid combined use of Ni-Cd batteries and dry batteries.
- Avoid combined use of charged Ni-Cd batteries and discharged Ni-Cd batterries.
- Check the batteries regularly for leakage.
- Remove empty batteries from the toy.
- Never try to charge non-rechargeable batteries.
- Never short-circuit the terminals.

HOW TO PLAY

- 1. Turn ON the vehicle.
- 2. Operate the vehicle with transmitter.
- 3. Turn OFF the vehicle after operating.
- 4. Remove all the batteries both from the vehicle and the transmitter.





TO ADJUST STEERING ALIGNMENT



Steering alignment lever

Adjust the steering alignment lever on the underside of the vehicle when the vehicle does not run straight.

ANTI-POWERLOSS TRANSMITTER

(To prevent unnecessary power loss)

The transmitter power is automatically turned ON when the speed control push button is operated either to the forward running or reverse running positions. When the button is returned to the neutral position, the transmitter power is turned OFF. When the transmitter power is turned OFF, the vehicle can be jammed by other transceiver radio waves and start to move abnormally.

- You can control the vehicle at a longer distance by holding the transmitter higher with the antenna straight
- When the vehicle slows down or starts moving erratically, replace all the vehicle's batteries with fresh ones.

OPERATING SAFETY RULES

Select a SAFE place to operate your vehicle. Do not drive in the street. Avoid driving on SAND or through puddles of WATER. These hazards can impair performance. Check the surface ahead of you and watch for obstacles. The radio receiver in your vehicle and transmitter are sensitive instruments. Do not leave Vehicle or Transmitter near sources of HEAT or under DIRECT SUNLIGHT for long periods of time.

Avoid leaving Vehicle or Transmitter OUTSIDE OVERNIGHT.

NIGHT DAMPNESS IS HARMFUL to INTERIOR MECHANISM.

DO NOT try to take apart or remodel any of the parts.

CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE MANUFACTURER FOR COMPLI-ANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

RADIO INTERFERENCE: Sometimes erratic behavior or loss of control of vehicle is the result of interference caused by high tension wires, high voltage transformers certain types of building, concrete walls or narrow places where RADIO SIGNALS sent from your transmitter MAY BE SCATTERED thus making it DIFFICULT for your vehicle to receive a GOOD RADIO SIGNAL. If you encounter this type of behavior or loss of control, CHANGE TO A DIFFERENT LOCATION.

You will encounter INTERFERENCE if ANOTHER radio controlled vehicle or CB radio is operating in the vicinity on your SAME FREQUENCY.

Cleaning and maintenance:

This toy vehicle needs periodic maintenance and cleaning.

Keep out of reach of small children under 36 months old as there is danger of getting hurt.

DO NOT operate your vehicle on thick-piled carpets. It can be dangerous since the carpet fiber may twine around a shaft and cause a motor overheated.



THE RBRC™Seal on the nickel cadmium battery pack

indicates that NikkoAmerica is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful life. The RBRC program provides a convenient alternative to disposing nickel-cadmium batteries into the trash or municipal waste stream, which is illegal in some areas.

Nikko America's payments to RBRC makes it easy for you to drop off the spent battery pack at local retailers who sell replacement nickel-cadmium batteries.

You may also contact your local recycling center for information on where to return the spent battery pack.

THE FCC WANTS YOU KNOW

This device complies with part 15 of the FCC Rules, Operation is subject to the following two conditions: (1)This device may not cause harmful interference.

(2)This device must accept any interference received,including interference that may cause undesired opera-

Your R/C car might cause TV or radio interference even when it is operating properly.

To determine whether your R/C car is causing the interference, turn off your R/C car. If the interference goes away, your R/C car is causing the interference.

Try to eliminate the interference by:

- Moving your R/C car away from the receiver.
- Contacting your local store for help.

If you cannot eliminate the interference, the FCC requires that you stop using your R/C car.

