

RadioShack®



60-4411 caliente RC boat

Thank you for purchasing your RadioShack Caliente RC Boat from RadioShack. Your boat comes in two frequencies (27 MHz and 49 MHz), so you and your friends can have fun driving together.



what's included

RC Boat & Stand	Transmitter Antenna
Boat Antenna Tube	User's Guide
Transmitter	

Note: Actual product may vary from the images found in this document.

installing your batteries

in your transmitter

Your transmitter requires one 9V alkaline battery (not supplied, available at your local RadioShack store or online at www.radioshack.com).

- 1 Press **OPEN** and pull the battery cover downward.
- 2 Insert your 9V battery, matching the polarity (+ and -) symbols marked inside.
- 3 Replace the cover.

 
When your transmitter's range decreases, replace its battery.

in your boat

Your boat requires one 9.6V rechargeable nickel-metal hydride (Ni-MH) battery pack (not supplied, available at your local RadioShack store or online at www.radioshack.com). You must charge it before use. Follow the manufacturer's instructions for charging your battery pack.

- 1 Turn your boat off.
- 2 Turn the right and left latches toward the **OPEN** arrow and remove the cover.
- 3 Attach the battery pack's connector to the boat's connector. Do not force them; they fit only one way.



- 4 Carefully insert the wires into the battery compartment and replace the cover.

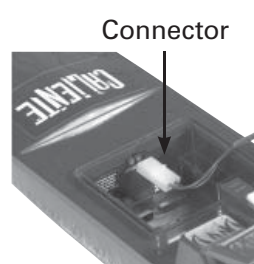

sailing your boat

Your boat is not designed for use in oceans, rivers, lakes or streams. Use in a swimming pool, pond or small body of water.

  - 1 Attach the antenna to your transmitter.
- 2 Slide the boat's antenna wire through the supplied tube. Then, insert the tube into the antenna tube holder.
- 3 Turn your boat and transmitter on.
- 4 Place your boat in the water and use the transmitter's controls to operate it. Your transmitter's LED lights when you move the controls.

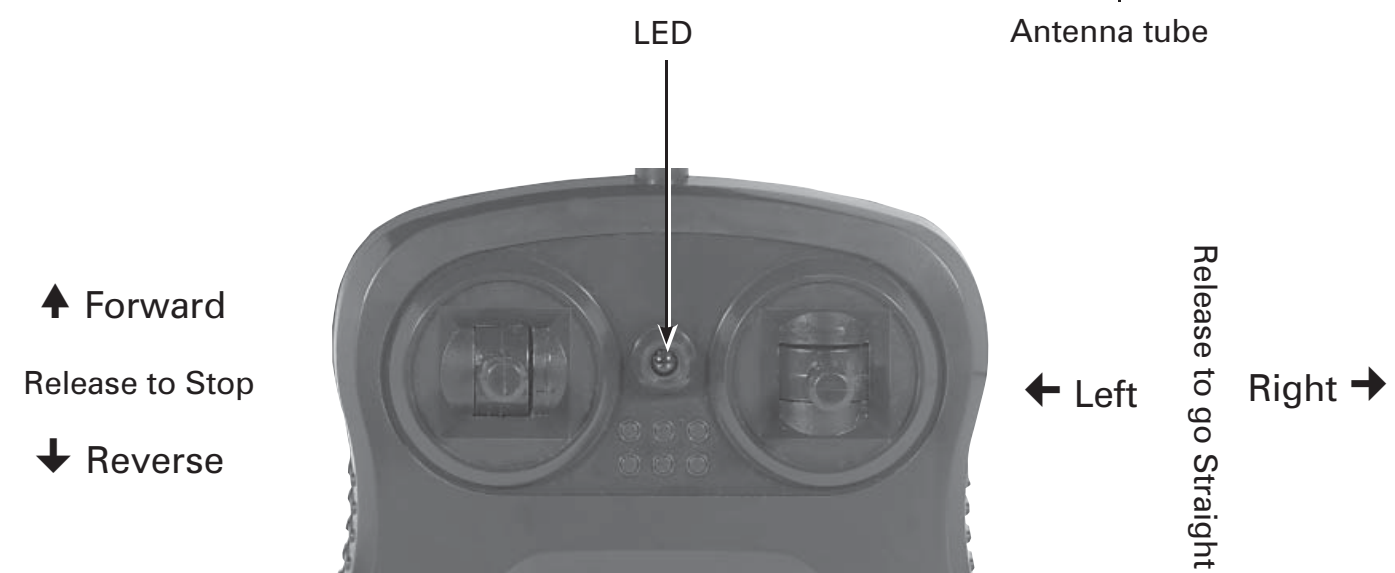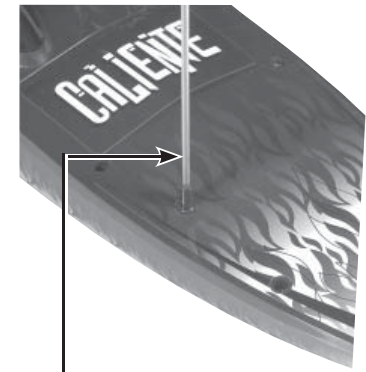

WARNING!

Do not submerge your transmitter or leave it in water.

 


Store your boat on the included stand when not in use.

Please read this user's guide before installing, setting up and using your new product
www.radioshack.com

caring for your boat

- Use and store your boat and transmitter only in room temperature environments.
- Handle them carefully. Do not drop them.
- Keep your boat and transmitter away from dust and dirt, and wipe them with a damp cloth occasionally to keep them looking new.
- Leave its battery cover off while in storage to allow moisture to evaporate.

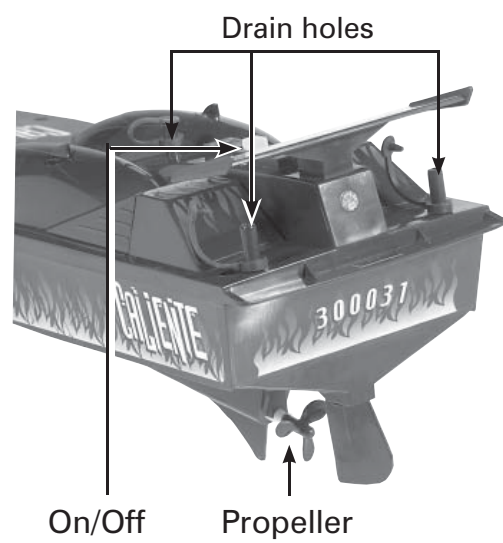

- When you finish playing, remove your boat from the water.
- Remove the rubber caps on the three drain holes and shake excess water from your boat.



helpful hints and safety precautions

- Dry your boat thoroughly after use.
- Two boats with the same frequency cannot run together. Both frequencies (27 MHz and 49 MHz) are available from your local RadioShack store.
- Running your boat continuously for long periods generates high heat levels, which cause wear and tear on the motor. To help keep heat levels down, let the boat cool at least 10 minutes before installing a fresh battery pack.
- Keep your boat away from grass and debris that could cause propeller damage.
- If your boat does not respond, drives slowly, or the range reduces, recharge your battery pack.
- If your boat fails to respond after recharging, replace the battery in the transmitter and check the propellers for debris.
- When your boat slows down from loss of battery power, guide it shore immediately so you won't lose it.
- When your boat goes outside the transmitter's range, it stops. Hold your transmitter high above your head to try to re-establish contact. If this doesn't work, move closer and try again. Be careful not to wade in deep water.
- Never touch the propellers while they are spinning, and avoid the propellers while the boat is on.
- Children must be supervised by adults when playing with toys around water.

battery cautions

- Dispose of old batteries promptly and properly. Do not burn or bury batteries.
- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, or batteries with different capacities or different chemistries.
- Never leave a dead or weak battery in your transmitter.
- If you do not plan to use your RC boat for a few weeks, remove the battery from your transmitter. Batteries can leak chemicals that may damage electronic parts.
- Do not charge or recharge your battery pack when it is in the boat.
- Do not overcharge your battery pack.
- Do not recharge your battery pack immediately after use. Allow it to cool first.
- Make sure your battery pack is securely fastened to your boat before playing.
- Batteries purchased for use in this toy may be hazardous to children. Check the safety notice before use.

The EPA certified RBRC® Battery Recycling Seal on the nickel-cadmium (Ni-Cd) battery indicates RadioShack is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful life, when taken out of service in the United States or Canada. The RBRC program provides a convenient alternative to placing used Ni-Cd batteries into the trash or the municipal waste stream, which may be illegal in your area. Please call 1-800-THE-SHACK (1-800-843-7422) for information on Ni-Cd battery recycling and disposal bans/restrictions in your area. RadioShack's involvement in this program is part of the company's commitment to preserving our environment and conserving our natural resources.



FCC information

The FCC Wants You to Know

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult your local RadioShack store or an experienced radio/TV technician for help.
- If you cannot eliminate the interference, the FCC requires that you stop using your mini boat.

Changes or modifications not expressly approved by RadioShack may cause interference and void the user's authority to operate the equipment.

limited go-day warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. For complete warranty details and exclusions, check with your local RadioShack store.

RadioShack Customer Relations
300 RadioShack Circle, Fort Worth, TX 76102
04/04

©2005, RadioShack Corporation.
All rights reserved. RadioShack and
RadioShack.com are trademarks
used by RadioShack Corporation.

60-4411
02A05
Printed in Malaysia



RadioShack