 


1/30 Cigarette Boat

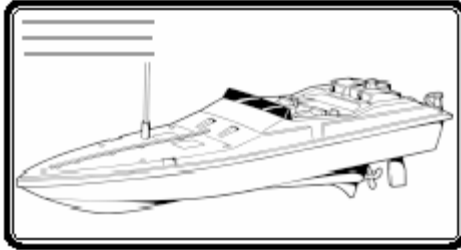

English/Français/Español

© NIKKO RDC-300030

IT IS A VIOLATION OF THE FCC REGULATIONS TO REMODEL OR ALTER THIS DEVICE IN ANY WAY WITHOUT PERMISSION, ANYONE WHO VIOLATES THE REGULATIONS WILL LOSE THE RIGHT TO OPERATE THE DEVICE.

CAUTION-ELECTRIC TOY

Not recommended for children under 8 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock. Input: 120 vac, 60 HZ 12W only. Output: 12 VDC, 3.6W

ATTENTION PARENTS

It is recommended that this toy and all accessories be periodically examined for potential hazards and that any potentially hazardous parts be repaired or replaced.

Owner's Manual

**MANUEL DU PROPRIETAIRE
Manual del Propietario**

- Please read carefully before starting to operate.
- *Warning! use under the direct supervision of an adult.
- KEEP THE DISPLAYBOX AND THE MANUAL FOR FUTURE REFERENCE.
- Use Ni-Cd battery pack(9.6V) and charger for this model.

FEATURES

- Full function: Forward, reverse, left/right turn and stop
- With safety device to prevent uncontrolled driving(Automatic stop when the boat exceeds the range of the transmitter.)
- Includes stand for storage

BATTERY REQUIREMENTS:

 
Transmitter: One 006P(9V)battery
Boat: 1xNi-Cd rechargeable battery pack
9.6 volt

Repair and Parts Department
Monday to Friday 8:30AM-5:30PM Central Time
Repair:(800)736-4556
Parts:(800)776-4556
Fax:(972)578-7059
e-mail:help@nikkoamerica.com

NIKKO
AMERICA, INC

RECHARGING

1. Join the connector of the charger to the connector of the Ni-Cd battery pack (9.6 V).
2. Plug the charger into an electrical outlet.
3. Recharge for about 4-5 hours.
4. When the recharging is over, plug out the charger from the electrical outlet and detach the connectors.

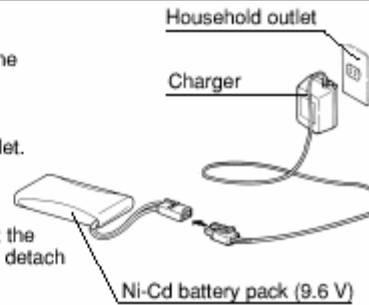


CAUTION:

- Never let the charger or battery pack get wet or damp.
- Over charging can damage the battery pack so observe the prescribed recharging time.
- Do not recharge in high temperatures or bring the battery pack near a flame.
- Do not take the charger or battery pack apart.
- Do not recharge the battery pack while it is still heated after use. Wait until it cools to recharge.
- When detaching the plug or connectors, don't pull the cords or wires (as they can be severed).
- Be sure to detach the Ni-Cd battery pack from the vehicle before recharging.
- The Ni-Cd battery pack should be recharged under the supervision of an adult.
- Do not use any other kinds of batteries except the types specified here.



HOW TO INSTALL THE BATTERIES

 TRANSMITTER


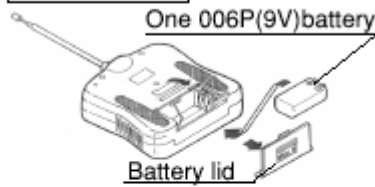


To remove the battery lid, press the point marked "OPEN" and pull downward.

ATTENTION:
Install battery marking sure that + and - poles of the battery are positioned properly.

BOAT To charge and recharge 9.6volt Ni-Cd battery pack, read the battery and charge instruction sheet.

  Make sure the power switch on the boat body is turned OFF.

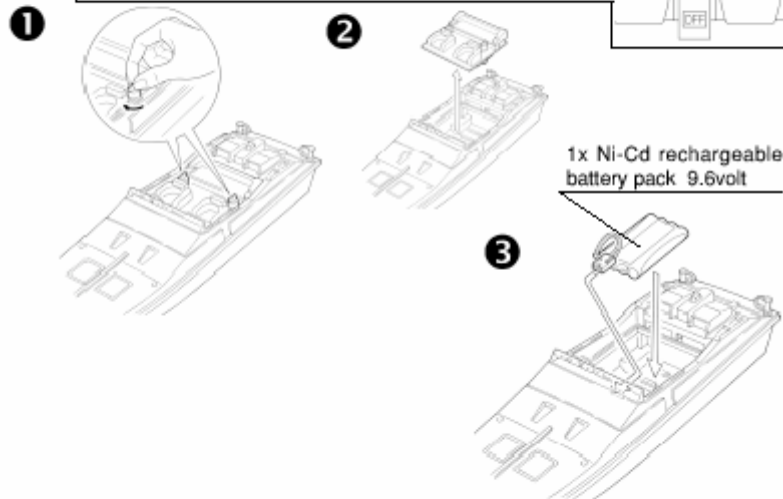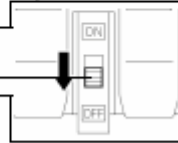


To open battery compartment cover.(1→2)

Join the boat and the Ni-Cd battery pack connector, and be sure it is connected properly.(3)

- A new battery pack 9.6volt is not charged. Charge it first before you start playing.
- When you disconnect the connectors, don't pull by the cords.
- Avoid short circuit. It is very dangerous.
- Do not take the Ni-Cd battery pack apart or try remodel it.


■ HOW TO INSTALL ANTENNA-TUBE

 Pass the antenna wire through the antenna-tube and insert the tube into the antenna-tube holder

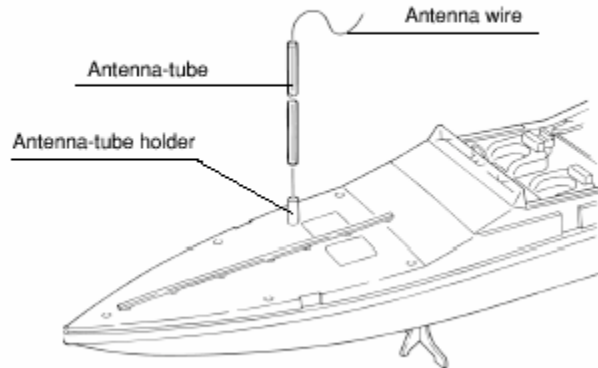

■ HOW TO INSTALL TRANSMITTER ANTENNA

 Place the transmitter antenna into the holder and screw it in clockwise.


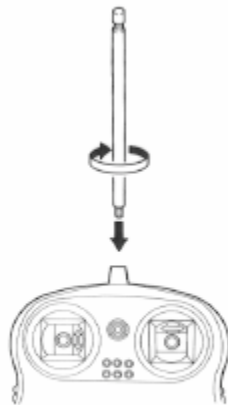


Do not install the antenna extended.



If the antenna is not screwed in securely, the boat may move erratically. Screw the antenna securely.

HOW TO PLAY

  - ① Extend transmitter antenna to its full length.
- ② Turn ON the boat switch
- ③ Turn ON the transmitter by operating the transmitter. (LED comes ON)
- ④ Start operating the boat.
- ⑤ Turn OFF the boat after operating.
- ⑥ After playing, bring the boat to a dry place

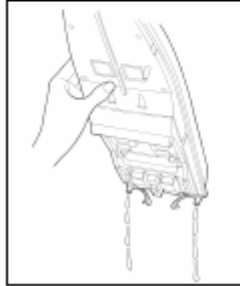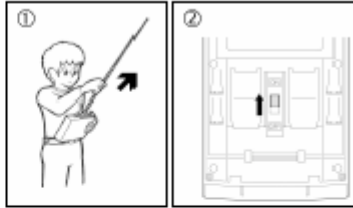


  remove the batteries from the boat and the transmitter, drain all the water out of the hull, and dry the boat well before putting it away.

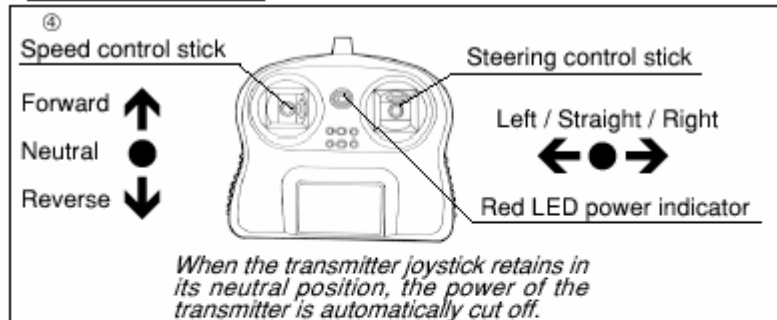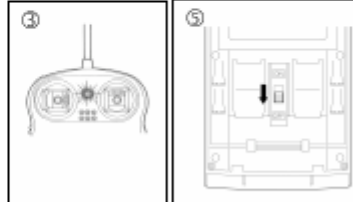

CAUTION!

 The rotating propeller is very dangerous. Never put your fingers close to the propeller when boat is turned ON.

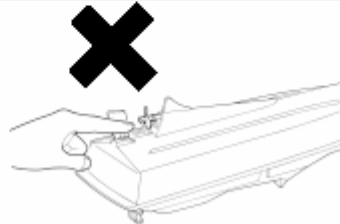

SAFETY & PLAYING TIPS

- Don't operate where there are water plants, rubbish, or other obstacles in the pond. This could cause propeller damage.
- Don't play when there is a strong water current or when the wind is blowing strongly.
- Never play in ocean (salt) water due to rusting problems.
- Don't play outdoors during thunderstorms.
- Never touch the propeller while it is spinning.
- Bring the boat back to shore before the power runs out.
- The boat shall not be operated in water without battery compartment cover

CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE MANUFACTURER FOR COMPLIANCE COULD VOID THE USERS AUTHORITY TO OPERATE THE EQUIPMENT.



MAINTENANCE

Wipe clean with a dry towel after playing.

Do not use chemicals as they can deform or damage the body.



After playing, remove all batteries from the boat and the transmitter, drain the water out of the hull, and dry the boat well before storing.



THE RBRC™ Seal on the nickel cadmium battery pack indicates that NikkoAmerica is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful life. The RBRC program provides a convenient alternative to disposing nickel-cadmium batteries into the trash or municipal waste stream, which is illegal in some areas.

Nikko America's payments to RBRC makes it easy for you to drop off the spent battery pack at local retailers who sell replacement nickel-cadmium batteries.

You may also contact your local recycling center for information on where to return the spent battery pack.

RBRC is a trademark of the Rechargeable Battery Recycling Corporation.

THE FCC WANTS YOU KNOW

This device complies with part 15 of the FCC Rules, Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

Your R/C boat might cause TV or radio interference even when it is operating properly.

To determine whether your R/C boat is causing the interference, turn off your R/C boat.

If the interference goes away, your R/C boat is causing the interference.

Try to eliminate the interference by:

- Moving your R/C boat away from the receiver.
- Contacting your local store for help.

If you cannot eliminate the interference, the FCC requires that you stop using your R/C boat.

SAFETY PRECAUTIONS

1. Please read instructions book carefully before operating this Boat.
2. Adult supervision is recommended. Keep out of reach of very young children.
3. Children should be made aware of the dangers associated with playing near water.
4. The propellers of this Boat rotate at very high speeds.

KEEP FINGERS CLEAR OF PROPELLERS AT ALL TIMES

5. Ensure both Boat and Transmitter Unit are turned off before attempting to pick up Boat.
6. Please keep these instructions for future reference.
7. Never attempt any repair as may invalidate your guarantee.

BATTERY CAUTION SHEET

(E)

- Check the batteries regularly for leakage.
- Remove empty batteries from the toy.
- Never try to charge non-rechargeable batteries.
- Removable batteries which can be recharged must be removed from the toy prior to charging.
- Rechargeable batteries may only be charged under the supervision of an adult.
- When inserting the batteries take care not to reverse their polarity.
- Never Use batteries of different manufacturers, and do not mix old and new batteries.
- Use only the recommended batteries or batteries of equal quality.
- Never short-circuit the terminals.

(F)

- Vérifiez régulièrement que les piles ne fuient pas.
- Retirez les piles épuisées du jouet.
- N'essayez jamais de charger des piles non-rechargeables.
- Les piles retirables rechargeable doivent être retirées du jouet avant la recharge.
- Les piles rechargeable doivent seulement être chargées sous la supervision d'un adulte.
- A l'insertion des piles, veillez à ne pas inverser les polarités.
- Ne mélangez jamais des piles de fabricants différents ou des piles neuves et anciennes.
- Utilisez uniquement les piles recommandées ou des piles de qualité égale.
- Ne court-circuitez jamais les bornes.

(S)

- Compruebe las pilas periódicamente para detectar posibles fugas.
- No deje las pilas gastadas en el juguete.
- No trate nunca de cargar pilas no recargables.
- Las pilas removibles deben ser retiradas del juguete antes de ser cargadas.
- Las pilas recargables pueden recargarse sólo bajo la supervisión de un adulto.
- Al colocar las pilas hay que tener cuidado para no colocarlas con la polaridad invertida.
- No use nunca mezcladas pilas de fabricantes diferentes ni tampoco mezcle pilas nuevas y viejas.
- Use sólo las pilas recomendadas o equivalentes de la misma calidad.
- No haga cortocircuitos en los terminales de las pilas.