

1/10 RADIO CONTROL STREET CAR **CAUTION: ELECTRIC TOY**

Owner's Manual
Manuel du utilisateur
Manual del Propietario

NIKKO
AMERICA, INC.

NOT RECOMMENDED FOR CHILDREN UNDER 8 YEARS OF AGE. AS WITH ALL ELECTRIC PRODUCTS, PRECAUTIONS SHOULD BE OBSERVED DURING HANDLING AND USE TO PREVENT ELECTRIC SHOCK.
INPUT: 120VAC, 60HZ,
OUTPUT: 12VDC, 200mA

OPEN FILE: 11070-12061

Repair and Parts Department

Monday to Friday 8:30AM-5:30PM Central Time

Help: 1(800)738-4558

Fax: 1(800)738-4558

 
Fax: 1(722)578-7058

e-mail: help@nikkoamerica.com

ATTENTION PARENTS

It is recommended that this toy and all accessories be periodically examined for potential hazards and that any potential hazardous parts be repaired or replaced.

PRINTED IN CHINA
IMPRIME EN CHINE
IMPRESO EN CHINA

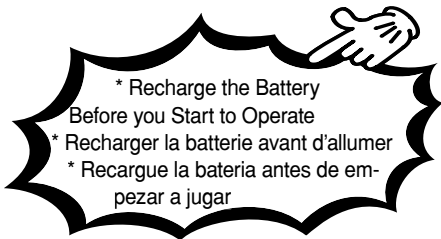

- Please read carefully before starting to operate.
- **Warning!** use under the direct supervision of an adult.
- **KEEP THE DISPLAYBOX AND THE MANUAL FOR FUTURE REFERENCE.**
- Use Ni-Cd battery pack(9.6V) and charger for this model.

FEATURES

- 2-channel full function: Forward, reverse, left/right turn and stop.
- 2 speed in forward running
2 speeds by transmitter operation
- Front and rear suspension system
- Rear wheel differential gear
- The Headlights lightup when running

BATTERY REQUIREMENTS

Vehicle: 1 x NI-CD or NI-MH rechargeable battery pack(9.6 V)

 
Transmitter: 1 x 9V(006P)battery

English

RECHARGING

*The newly purchased Ni-Cd pack is not charged.Recharge before operate.

1. Join the connector of the charger to the connector of the Ni-Cd battery pack (9.6 V).
2. Plug the charger into an electrical outlet.
3. Recharge for about 4-5 hours.
4. When the recharging is over, plug out the charger from the electrical outlet and detach the connectors.

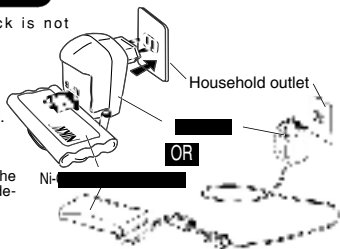

CAUTION:

- Do not charge Battery Pack immediately after use.Wait until it is cooled before charging.
- Avoid short circuits. Short circuits will cause overheating, burning of the cords and other damages to the Battery Pack and Charger.
- The Ni-CD Battery Charger should be used for charging one Battery Pack . Do not use the charger for charging other types of batteries and battery packs.
- Do not use the Charger as a direct current outlet for other electrical appliances or machines.
- Make sure that the Battery Pack and Charger are kept out of the hands of infants and small children while charging.
- Do not charge near fires, where the temperature is extremely high, or where it is wet or damp.
- The charger will become slightly heated while charging. Allow sufficient free space around the Charger.
- If the power of the battery pack is weak in spite of proper charging. The batteries may be worn out from repeated use. Replace it with a new Ni-CD battery pack.
- Dispose of use Ni-CD battery packs correctly.
- Disconnect the supply before making or breaking connections to the battery.
- **WARNING AGAINST RECHARGING NON-RECHARGEABLE BATTERIES.**
- Please use this battery charger only for the charger of the rechargeable battery pack.
- The NI-CD battery pack should be recharged under the supervision of an adult.

 
PREPARATION FOR STARTING OPERATION

1. HOW TO ATTACH ANTENNA TUBE

Antenna wire

Antenna tube

Antenna tube holder

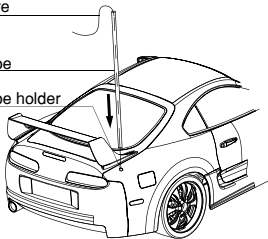


- Pass the antenna wire through the antenna tube, then insert the tube into the antenna tube holder.
- If the antenna tube cannot be successfully inserted into the antenna tube holder, try holding the root of the antenna wire with fingers of one hand and extending the wire with fingers of the other hand.

* Note: Be careful not to pull antenna wire too strong.

2. HOW TO INSTALL TRANSMITTER ANTENNA

 Place the transmitter antenna into the antenna holder to screw it in clockwise.

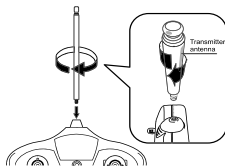

Don't install the antenna extended. It's dangerous.

 
If the antenna is not screwed in securely, the vehicle may move erratically. Screw the antenna securely.

3. HOW TO INSTALL THE BATTERIES

Transmitter



To remove the battery lid, press the point marked "OPEN" and pull the lid downward.

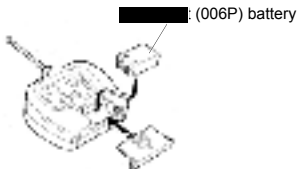


Install battery making sure that (+) and (-) poles are positioned properly.

* Dispose the used batteries separately from other trash.



Vehicle

 When installing a Ni-Cd battery pack, make sure that the power switch of the vehicle is OFF.

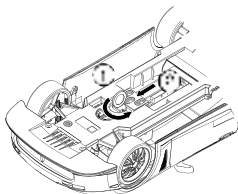

① Use a coin to turn the battery stopper to the "OPEN" position.

  
② Let the battery compartment lid slide forward a little with a pressure on to the latch

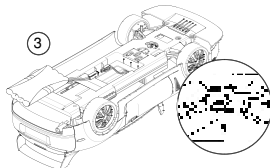


③ Join the connectors of the vehicle and the Ni-Cd pack.

English

 Battery compartment

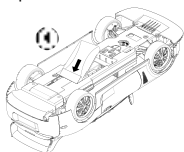


 - ④ Fit the battery case into the battery compartment of your vehicle and push in all the way.

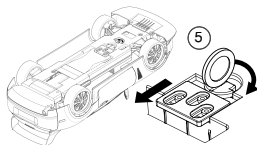

- ⑤ Press down the battery compartment lid when Use a coin to turn the battery stopper

 Vehicle's Connector




Battery's Connector



- When you connect the connectors, make certain the vehicle switch is in the "OFF" position.
- Set connectors properly. (The connectors are designed to be connected in only one way so that the positive(+) and the negative(-) terminals are connected accurately.)
- Disconnect the connectors immediately after a run.
- When you disconnect the connectors, don't pull by the cords.
- Avoid short circuits because it is very dangerous.
- Remove all the batteries both from the vehicle and the transmitter after a run.

 HOW TO PLAY



- ① Extend the transmitter antenna.

You can control the vehicle at a longer distance by holding the transmitter higher with the antenna straight up.



- ② Turn on the transmitter by operating the control stick. (The power indicator will light up.)