

# 1/16 STREET CAR

Owner's Manual / Manuel de l'utilisateur / Manual del Proprietario

1/16 scale  
Echelle 1/16  
Modelo a escala 1/16

**Repair and Parts Department**  
Monday to Friday 8:30AM-5:30PM  
Central Time  
Repair: (800) 736-4556  
Parts: (800) 776-4556  
Fax: (972) 578-7059  
e-mail: help@nikkoamerica.com

\* Read this Manual carefully to the end before beginning to play.  
\* Warning! Use under the direct supervision of an adult.  
\* Keep the display box and the manual for future reference.  
\* Actual product may vary from illustration of this manual.

**FEATURES**

- Full function
- Runs forward backward, turns left & right, stop.
- 3 band selector switch.

**BATTERY REQUIREMENTS**

(Not included)  
Vehicle: 4 x AA alkaline(1.5V)  
Transmitter: 1 x 9V(006P) battery

**Département Réparation et pièces**

Lundi au vendredi, de 8h30 à 17h30, heure centrale  
Réparations : (800) 736-4556  
Pièces : (800) 776-4556  
Fax : (972) 578-7059  
Courriel électronique : help@nikkoamerica.com

\* Lisez attentivement ce manuel jusqu'à la fin avant de commencer à jouer.  
\* Avertissement! A utiliser sous la supervision directe d'un adulte.  
\* Conserver la boîte d'affichage et le manuel pour toute référence ultérieure.  
\* La moto contenue dans l'emballage peut ne pas correspondre exactement aux illustrations.

**CARACTERISTIQUES**

- Toutes les fonctions
- Marche avant, arrière, virage à droite et à gauche, et arrêt.
- Sélecteur 3 bandes.

**PILES**

(non fournies)  
Véhicule: 4 piles format R6 (UM-3)  
alcalines (1,5 V)  
Émetteur: 1 pile 6F22(9V)

**Departamento de Reparación y Repuestos**

Lunes a viernes 8:30 AM - 5:30 PM Hora Central  
Reparaciones : (800) 736-4556  
Repuestos : (800) 776-4556  
Fax : (972) 578-7059  
e-mail : help@nikkoamerica.com

\* Antes de comenzar a jugar, lea este Manual con mucho cuidado.  
\* Advertencia! Úsalo bajo la supervisión directa de un adulto.  
\* Conserve la caja y el manual para referencias futuras.  
\* El producto real puede diferir ligeramente de las ilustraciones.

**CARACTERÍSTICAS**

- Funciones completas
- Avanza, retrocede, gira hacia la izquierda y derecha, se detiene.
- 3 interruptor del selector de la banda.

# ATENCIÓN PADRES

Se recomienda que este juguete y todos sus accesorios sean examinados periódicamente para tratar de encontrar peligros potenciales provocados por piezas que necesiten ser reparadas o cambiadas.

**PILAS USADAS**

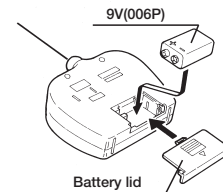 
(No incluidas)  
Vehículo: 4 x AA (R6) alcalinas (1,5 V)  
Transmisor: 1 pila 6F22 de 9 V (006P)

# ATTENTION PARENTS

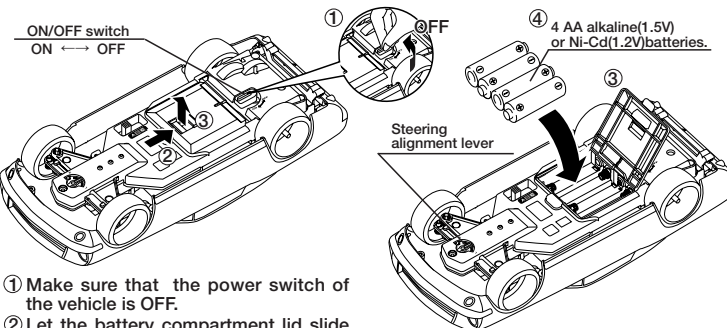 
It is recommended that this toy and all accessories be periodically examined for potential hazards and that any potential hazardous parts be repaired or replaced.

**NIKKO AMERICA, INC**  
© NIKKO  
PRINTED IN CHINA  
IMPRIME EN CHINE  
IMPRESO EN CHINA

# 1 BATTERY INSTALLATION

**TRANSMITTER****CAUTION WHEN USING BATTERIES**

- Install batteries making sure that the ⊕ and ⊖ poles of the batteries are positioned accurately.
- Make sure vehicle's on-off switch is turned OFF when installing batteries.
- Avoid combined use of new dry batteries and old ones.
- Avoid combined use of Ni-Cd batteries and dry batteries.
- Avoid combined use of charged Ni-Cd batteries and discharged Ni-Cd batteries.
- Remove all the batteries from the vehicle and the transmitter after playing.

**VEHICLE****TO OPEN THE BATTERY COMPARTMENT LID**

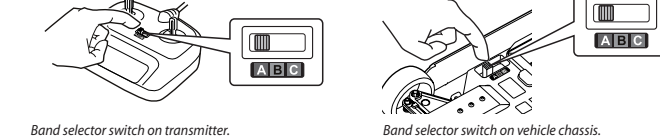 
- 1 Make sure that the power switch of the vehicle is OFF.
- 2 Let the battery compartment lid slide forward a little with a pressure on to the latch.
- 3 Then, the battery compartment lid can be pulled and open.

**CAUTION**

- Do not mix old and new batteries.
- Install batteries accurately in the battery compartment.
- Do not mix alkaline, standard [carbon-zinc], or rechargeable [nickel-cadmium] batteries.

\* Do not mix old batteries with new batteries.  
\* Avoid using alkaline batteries and Ni-Cd batteries together.

# 2 HOW TO OPERATE



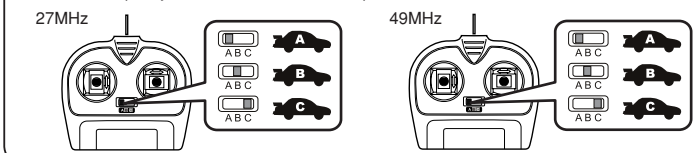 
Band selector switch on transmitter.

Band selector switch on vehicle chassis.

- 1 Ensure that band selector switch on transmitter and vehicle are set to the same letter - A, B or C.

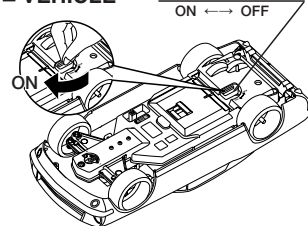 
**Race 6 cars at once!**

3 bands for frequency 27MHz and 49MHz, allows up to 6 cars to race at once.



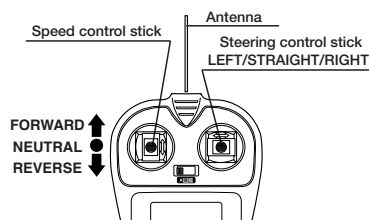 
- 2 Turn ON the vehicle.
- 3 Operate the vehicle with transmitter.
- 4 Turn OFF the vehicle after operating.
- 5 Remove all the batteries both from the vehicle and the transmitter.

\* Please follow the above sequence of operation.

**VEHICLE**

\* Check to see that the batteries have been INSTALLED in the CORRECT position.

**IMPORTANT:**  
When speed control stick is in NEUTRAL, Steering Wheel WILL NOT produce any steering action.

**TRANSMITTER****ANTI-POWER LOSS TRANSMITTER**  
(To prevent unnecessary power loss)

The transmitter power is automatically turned ON when the speed control stick is operated either to the forward running or reverse running positions. When the stick is returned to the neutral position, the transmitter power is turned OFF. When the transmitter power is turned OFF, the vehicle can be jammed by other transceiver radio waves and start to move abnormally.

**NOTE:**

- You can control the vehicle at a longer distance by holding the transmitter higher with the antenna straight up.
- When the vehicle slows down or starts moving erratically, replace all the vehicle's batteries with fresh or fully charged ones.

**TO ADJUST STEERING ALIGNMENT**

Adjust the steering alignment lever on the underside of the vehicle when the vehicle doesn't run straight forward.



# 3 OPERATING SAFETY RULES

Select a SAFE place to operate your vehicle. Do not drive in the street. Avoid driving on SAND or through puddles of WATER. These hazards can impair performance. Check the surface ahead of you and watch for obstacles. The radio receiver in your vehicle and transmitter are sensitive instruments. Do not leave Vehicle or Transmitter near sources of HEAT or under DIRECT SUNLIGHT for long periods of time. Avoid leaving Vehicle or Transmitter OUTSIDE OVERNIGHT. NIGHT DAMPNES IS HARMFUL TO INTERIOR MECHANISM.

**Cleaning and maintenance:**

This toy vehicle needs periodic maintenance and cleaning.

**Caution:**

Keep out of reach of small children under 36 months old as there is danger of getting hurt.

**RADIO INTERFERENCE:** Sometimes erratic behavior or loss of control of vehicle is the result of interference caused by high tension wires, high voltage transformers, certain types of building, concrete walls or narrow places where RADIO SIGNALS sent from your transmitter MAY BE SCATTERED thus making it DIFFICULT for your vehicle to receive a GOOD RADIO SIGNAL. If you encounter this type of behavior or loss of control, CHANGE TO A DIFFERENT LOCATION.

You will encounter INTERFERENCE if ANOTHER radio controlled vehicle or CB radio is operating in the vicinity on your SAME FREQUENCY.

DO NOT operate your vehicle on thick-piled carpets. It can be dangerous since the carpet fiber may twine round a shaft and cause a motor overheated.

**THE FCC WANTS YOU KNOW**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Your R/C car might cause TV or radio interference even when it is operating properly.

To determine whether your R/C car is causing the interference, turn off your R/C car. If the interference goes away, your R/C car is causing the interference.

Try to eliminate the interference by:

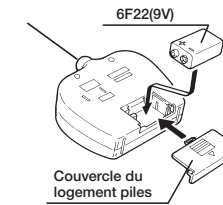 
- \* Moving your R/C car away from the receiver.
- \* Contacting your local store for help.

If you cannot eliminate the interference, the FCC requires that you stop using your R/C car.

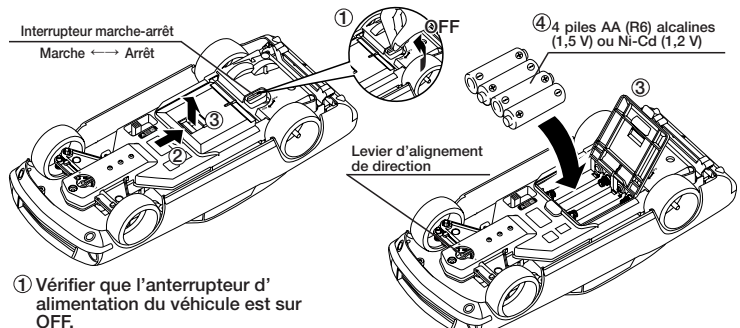 
**Caution:** CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE MANUFACTURER FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

IT IS A VIOLATION OF THE FCC REGULATIONS TO REMODEL OR ALTER THIS DEVICE IN ANY WAY WITHOUT PERMISSION. ANYONE WHO VIOLATES THE REGULATIONS WILL LOSE THE RIGHT TO OPERATE THE DEVICE.

# 1 MISE EN PLACE DES PILES

**EMETTEUR****PRECAUTIONS A PRENDRE AVEC LES PILES**

- Installer les piles en positionnant correctement les pôles ⊕ et ⊖.
- Vérifier que l'interrupteur marche-arrêt du véhicule est sur OFF à l'installation des piles.
- Eviter de combiner des piles sèches neuves et anciennes.
- Eviter de combiner des piles Ni-Cd et des piles sèches.
- Eviter de combiner des piles Ni-Cd chargées et déchargées.
- Retirer toutes les piles du véhicule et de l'émetteur après le jeu.

**VEHICLE****OUVERTURE DU COUVERCLE DU LOGEMENT PILES**

- 1 Vérifier que l'interrupteur d'alimentation du véhicule est sur OFF.
- 2 Laisser le couvercle du logement piles glisser un peu en avant en appuyant sur le verrou.
- 3 On pourra alors tirer le couvercle du logement et l'ouvrir.

**LES 3 RAISONS PRINCIPALES DE MAUVAIS FONCTIONNEMENT DU VEHICULE**

- \* PILES AFFAIBLIES
- \* INSTALLATION INCORRECTE DES PILES
- \* INTERFERENCE

**PRECAUTIONS**

- Ne pas mélanger des piles neuves et anciennes.
- Installez les piles exactement dans le compartiment prévu à cet effet.
- Ne pas employer simultanément des piles alcalines, standard (au carbone-zinc) ou rechargeables (au nickel-cadmium).

\* Eviter d'utiliser des piles alcalines et des piles Ni-Cd ensemble.

