 


S T A L K E R

1/12 Scale Radio Control
Echelle 1/12, radiocommandé
Maßstab 1/12
Funkferngesteuert
Radio Controlado
Escala 1/12

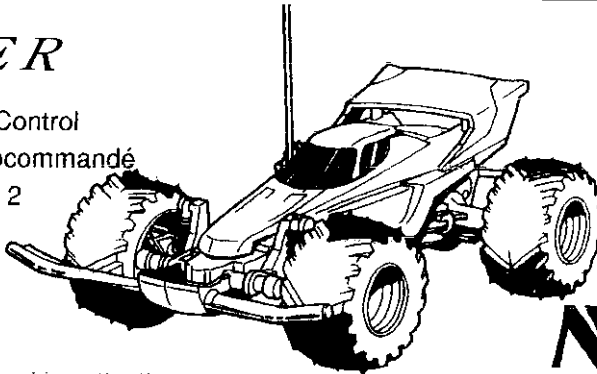

RDC-12750

© NIKKO

PRINTED IN MALAYSIA.
IMPRIME EN MALAISIE
PRINTED IN MALAYSIA
(Gedruckt in Malaysia)
IMPRESO EN MALASIA

NIKKO

Please read carefully before starting to operate.

Lire attentivement cet explicatif avant de commencer à jouer.

Vor Gebrauch bitte sorgfältig durchlesen.

Por favor lea atentamente las instrucciones antes de empezar a operar.

Owner's Manual

Manuel de l'utilisateur

BEDIENUNGSANLEITUNG

MANUAL DE INSTRUCCIONES

FEATURES

- 2 channel full function: Forward, reverse, left/right turn and stop
- 2 speed in forward running
 - Turbo high-speed forward running from transmitter control
- Oversized off-road air-filled tires
- Front and rear suspension

● BATTERY REQUIREMENTS: (Not included)

Transmitter: One 6F22 (9V) battery

Vehicle: 1 x Ni-Cd rechargeable battery pack (9.6 V, 600 mAh)

CAUTION: ELECTRIC TOY

Not recommended for children under 8 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock.
Input: 120 vac, 60 HZ 12W only.
Output: 12 VDC, 3.6W

ATTENTION PARENTS

It is recommended that this toy and all accessories be periodically examined for potential hazards and that any potentially hazardous parts be repaired or replaced.

NIKKO

AMERICA, INC

Repair and Parts Department
Monday to Friday 8:30AM-5:30PM Central Time

 
 
Repair:(800)736-4556

Parts:(800)776-4556

Fax:(972)578-7059


e-mail:nikkocs@airmail.net

NAMES OF PARTS

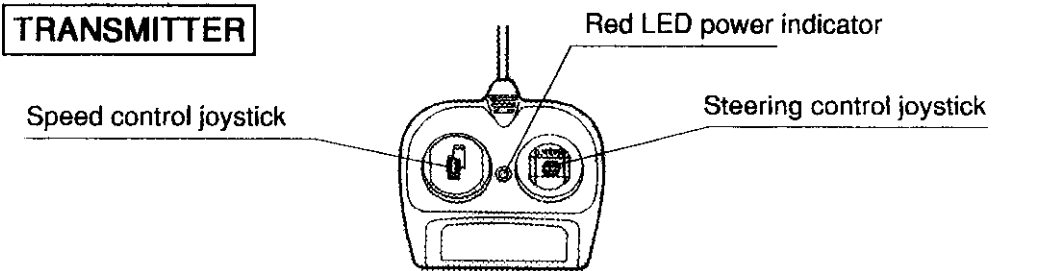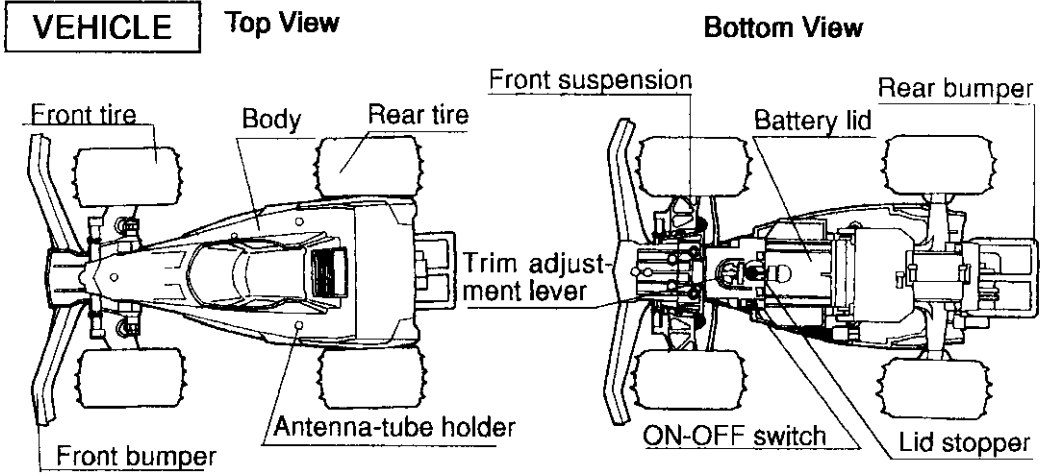

BEFORE YOU START

 
1. HOW TO INSTALL ANTENNA-TUBE

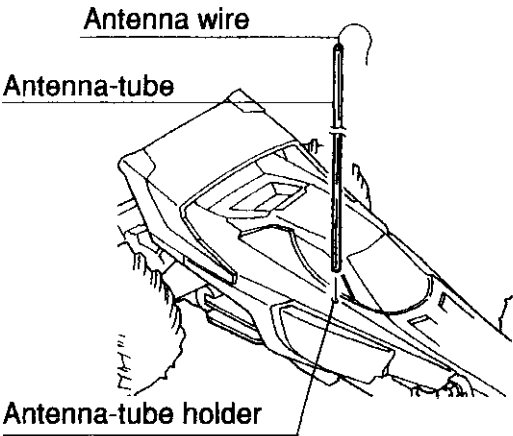

- Pass antenna wire through antenna tube and insert the antenna tube into the antenna tube holder.

2. HOW TO INSTALL TRANSMITTER ANTENNA

 Place the transmitter antenna into the antenna holder to screw it in clockwise.

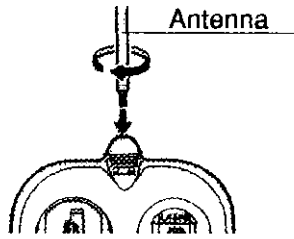

If the antenna is not screwed in securely, the vehicle may move erratically. Screw the antenna securely.

 
Do not install the antenna extended.

KEEP THE DISPLAY BOX AND THE MANUAL FOR FUTURE REFERENCE.


3. BATTERY INSTALLATION

Leaving batteries in the vehicle or the transmitter for a long period of time may cause battery leakage or other damage. Remove all the batteries both from the vehicle and the transmitter after use.

TRANSMITTER

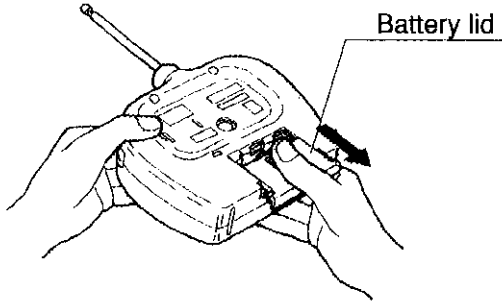

One 6F22 (9 V) battery

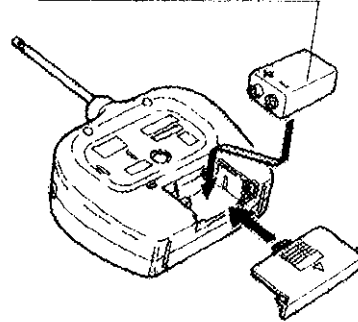 

To remove the battery lid, press the point marked "OPEN" and pull the lid downward.

Make sure that the + and - poles of your batteries are positioned properly.

VEHICLE

■ When installing a Ni-Cd battery pack, make sure that the power switch of the vehicle is OFF.

 
 
1. Turn the lid stopper.

2. Slide the battery lid backward.


3. Lift the battery lid.

4. Install a Ni-Cd battery pack (9.6V)

9.6 V, 600 mAh

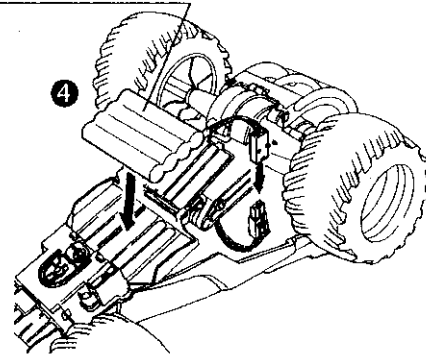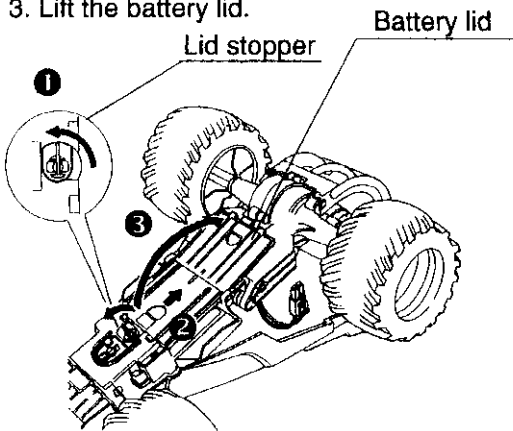

 Push in the connectors by opening the side of the body.

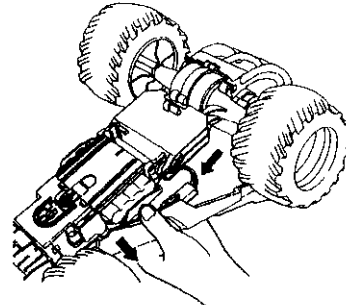


English

CAUTION

- Join the connector of the vehicle and the connector of the Ni-Cd battery pack, making sure that they are joined in the right direction.
- Do not take the Ni-Cd battery pack apart or try to remodel it.
- When you disconnect the connectors, don't pull by the cords.
- Avoid short circuit. It is very dangerous.


HOW TO OPERATE

 1 Extend transmitter antenna to its full length.


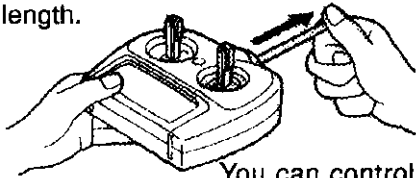




You can control the vehicle at a longer distance by holding the transmitter higher with the antenna straight up.

 2 Turn ON the transmitter by operating the transmitter. (LED comes ON.)

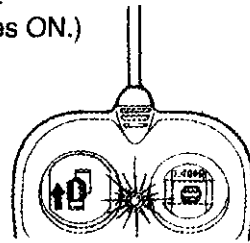

    
3. Turn ON the power switch of the vehicle. 4 Start operating the vehicle.

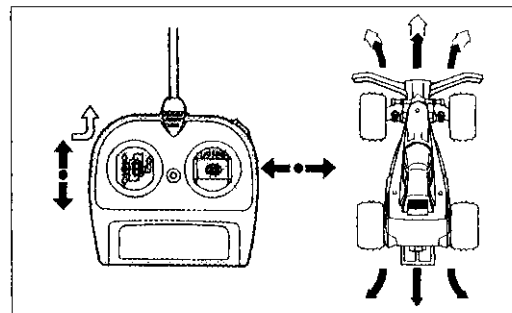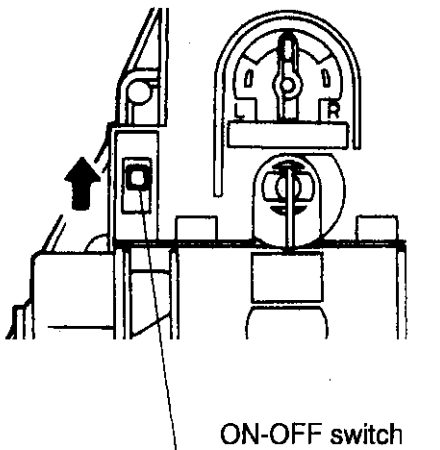



Forward running


 
You can enjoy the excitement of 2 stages of speed from Normal (LOW) to High (TURBO) speed forward running by operating the speed control stick.

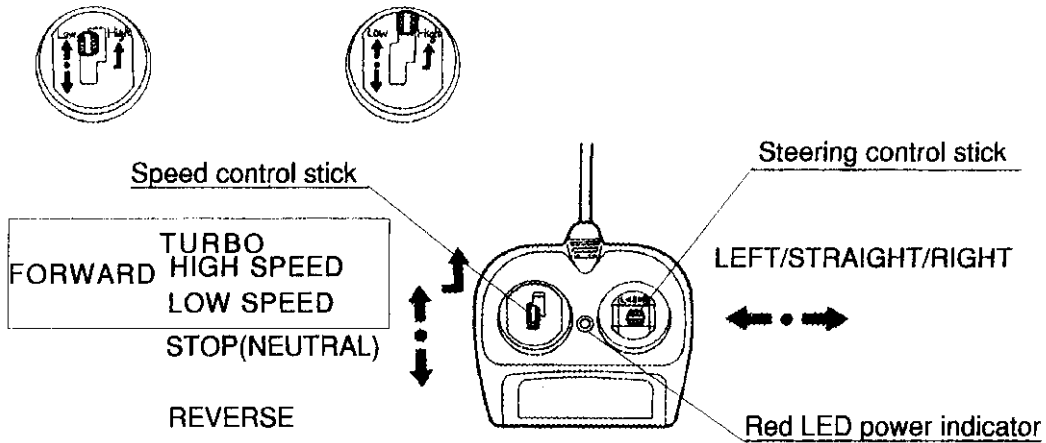


If the vehicle does not run straight forward, adjust Steering Alignment Lever.

If the vehicle runs towards right, turn Steering Alignment Lever towards "L"



 
 
If the vehicle runs towards left, turn Steering Alignment Lever towards "R"

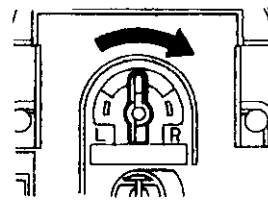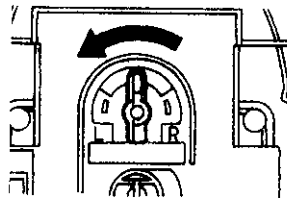

5 Turn the vehicle's switch "OFF".

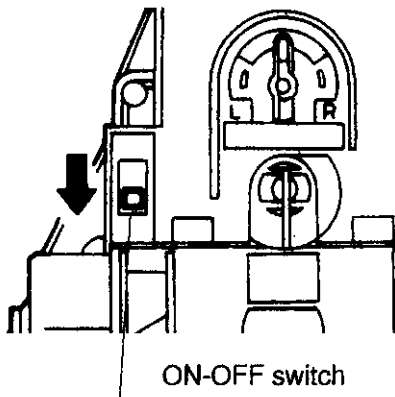 

    6 After playing, remove all the batteries from the transmitter and the vehicle.

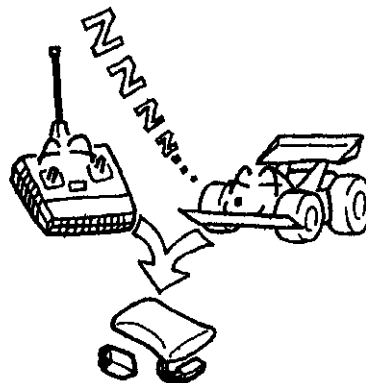

OPERATING SAFETY RULES

Select a **SAFE** place to operate your vehicle. Do not drive in the street.

 
 
Avoid driving on **SAND** or through puddles of **WATER**. These hazards can impair performance.

Check the surface ahead of you and watch for obstacles.

The radio receiver in your vehicle and transmitter are sensitive instruments. Do not leave Vehicle or Transmitter near sources of **HEAT** or under **DIRECT SUNLIGHT** for long periods of time.

Avoid leaving Vehicle or Transmitter **OUTSIDE OVERNIGHT**. **NIGHT DAMPNESS IS HARMFUL** to **INTERIOR MECHANISM**.

DO NOT try to take apart or remodel any of the parts.

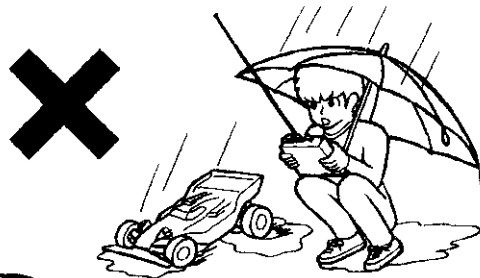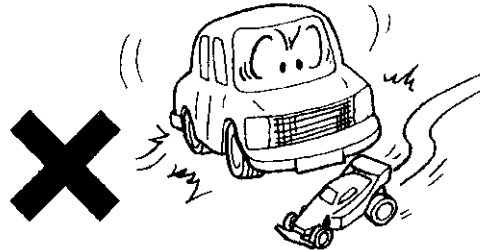

RADIO INTERFERENCE:

 
Sometimes erratic behavior or loss of control of vehicle is the result of interference caused by high tension wires, high voltage transformers, certain types of building, concrete walls or narrow places where **RADIO SIGNALS** sent from your transmitter **MAY BE SCATTERED** thus making it **DIFFICULT** for your vehicle to receive a **GOOD RADIO SIGNAL**. If you encounter this type of behavior or loss of control, **CHANGE TO A DIFFERENT LOCATION**. You will encounter **INTERFERENCE** if **ANOTHER** radio controlled vehicle or **CB radio** is operating in the vicinity on your **SAME FREQUENCY**.

CLEANING

Wipe clean with a towel or similar after use.

CAUTION

DO NOT use chemicals as they can deform or damage the body.

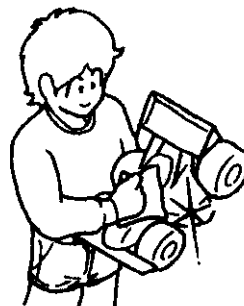


"Warning! Use under the direct supervision of an adult."

English

RECHARGING

 1. Join the connector of the charger to the connector of the Ni-Cd battery pack (9.6 V, 600 mAh)
2. Plug the charger into an electrical outlet.
3. When the recharging is over, plug out the charger from the electrical outlet and detach the connectors.

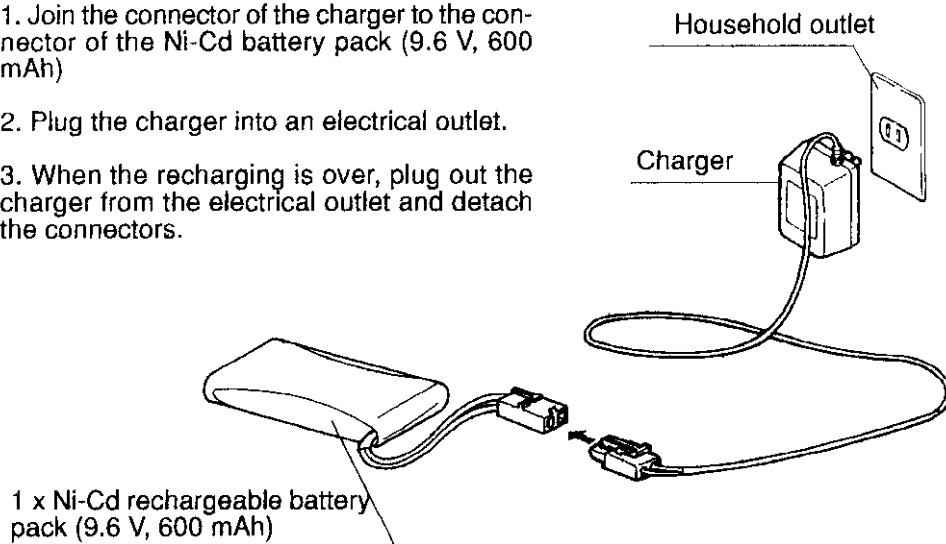

CAUTION

- Never let the charger or battery pack get wet or damp.
- Over charging can damage the battery pack so observe the prescribed recharging time.
- Do not recharge in high temperatures or bring the battery pack near a flame.
- Do not take the charger or battery pack apart.
- Do not recharge the battery pack while it is still heated after use. Wait until it cools to recharge.
- When detaching the plug or connectors, don't pull the cords or wires (as they can be severed).
- Be sure to detach the Ni-Cd battery pack from the vehicle before recharging.
- The Ni-Cd battery pack should be recharged under the supervision of an adult.
- Do not use any other kinds of batteries except the types specified here.
- Average recharging time is approximately 4 to 5 hours.

English

Cleaning and maintenance:

 
This toy vehicle needs periodic maintenance and cleaning.

Warning to the parents

The charger for the Ni-Cd battery pack needs periodic inspection to see that the lead wires, plugs, outer case, and other parts are not damaged in any way. If any of the parts are damaged, do not use the charger until it is completely repaired.

Caution

Keep out of reach of small children under 36 months old as there is danger of getting hurt.

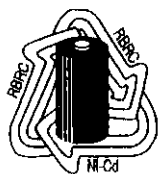

THE RBRC™ Seal on the nickel cadmium battery pack indicates that NikkoAmerica is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful life. The RBRC program provides a convenient alternative to disposing nickel-cadmium batteries into the trash or municipal waste stream, which is illegal in some areas.

Nikko America's payments to RBRC makes it easy for you to drop off the spent battery pack at local retailers who sell replacement nickel-cadmium batteries.

You may also contact your local recycling center for information on where to return the spent battery pack.

RBRC is a trademark of the Rechargeable Battery Recycling Corporation.

THE FCC WANTS YOU KNOW

This device complies with part 15 of the FCC Rules, Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Your R/C car might cause TV or radio interference even when it is operating properly.

To determine whether your R/C car is causing the interference, turn off your R/C car.

If the interference goes away, your R/C car is causing the interference.

Try to eliminate the interference by:

- Moving your R/C car away from the receiver.
- Contacting your local store for help.

If you cannot eliminate the interference, the FCC requires that you stop using your R/C car.

*** CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE MANUFACTURER FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.**