
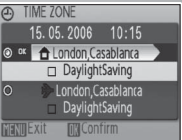


 










Selecting **Time zone** from the **Date** menu displays the dialog shown in Step 1. Follow the steps below to set the clock to the time in a new time zone.

| | | | |
|---|---|--|---|
| <p>1</p>  |  | <p>2</p>  |  |
| <p>Highlight .</p> | | <p>Set clock to time in travel time zone.</p> | |
| <p>3</p>  |  | <p>4</p>  |  |
| <p>Display map of world time zones.</p> | | <p>Highlight travel destination time zone.</p> | |
| <p>5</p>  |  | <p>Set clock to time in new time zone.  is displayed when camera is in shooting mode. To reset clock to home time zone, select  in time zone menu (Step 1). To turn daylight saving time in selected zone on or off, highlight DaylightSaving and press OK. Clock will automatically be advanced one hour. Press MENU button to exit to shooting or playback.</p> | |

To change the home time zone, select  in Step 1 and follow Steps 2–5.

Monitor Settings

The following options are available:

| Option | Description |
|-------------------|--|
| Photo Info | Choose information displayed in monitor. |
| Brightness | Choose from five settings for monitor brightness (default is 4). |

Photo Info

The following display options are available:

| Option | Description | Display | |
|---------------------|--|---------------|---------------|
| | | Shooting mode | Playback mode |
| Show Info | Indicators are displayed in monitor (6–7). | | |
| Auto | Indicators are displayed for 5 s. | | |
| Hide Info | Indicators are not displayed in monitor. | | |
| Framing Grid | Indicators are displayed in monitor. In mode, framing grid is displayed to help frame pictures; other indicators are displayed for 5 s. | | |

DATE Date Imprint

Imprint date information on pictures as they are taken.


| Option | Description |
|----------------------|---|
| Off | Time and date do not appear on pictures. |
| Date | Date or date and time are imprinted on pictures taken while this option is in effect. |
| Date and time | |
| Date counter | Time stamp shows number of days between date of shooting and selected date (see below). |


At settings other than **Off**, the option selected is indicated by an icon in the monitor during shooting (6–7).

DATE Date Counter

Pictures taken while this option is in effect are imprinted with the number of days remaining until or the number of days elapsed since a specified date. Use it to track the growth of a child or count down the days until a birthday or wedding.

Press **OK** button to view stored dates
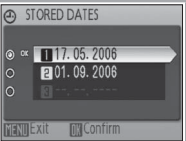
| | | |
|------------------------|---|---|
| Stored dates | Up to three dates can be stored. To set, highlight, press rotary multi-selector to right, and enter date (71). To select, highlight and press OK button. |  |
| Display options | Highlight Number of days , Years and days , or Yrs, mnths, days and press OK button. | |

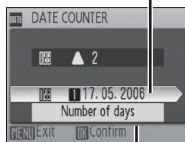

Press **OK** button to view display options

Sample date counter time stamps are shown below.



Future date (days remaining)




Past date (days elapsed)

DATE Date Imprint

The date is recorded in the order selected in the DATE menu (71). Date imprint can not be used to print date information on existing pictures. See page 55 for a comparison of date imprint and **Print set > Date**.


Data imprinted at an **Image mode** setting of **TV screen (640)** may be difficult to read. Choose **PC screen (1024)** or larger when using date imprint.

AF Assist


If **Auto** is selected, AF-assist illumination will be used to assist the focus operation when the subject is poorly lit (AF-assist illumination is unavailable in some modes;  84). Choose **Off** to disable AF-assist illumination (note that the camera may be unable to focus if lighting is poor).

Sound Settings

Adjust the following sound settings:

| Option | Description |
|----------------------|---|
| Button sound | When On is selected, beep will sound once when operations are completed successfully, three times when error is detected. |
| Shutter sound | Choose sound played when shutter is released (note that shutter sound may not always play;  84). Choose Off to disable shutter sound. |
| Volume | Choose volume from Loud , Normal , and Off . |

Blur Warning

Choose whether or not the blur warning is displayed ( 21). Note that the warning may not always be displayed ( 84).

Auto Off

Choose the time before the monitor turns off automatically to save power from 30 seconds, 1 minute (the default setting), 5 minutes, or 30 minutes. Regardless of the option chosen, the monitor will remain on for 3 minutes when menus are displayed, and for 30 minutes when **Loop** is selected during Pictmotion or slide show playback or the camera is powered by the supplied AC adapter. While the monitor is off, the power-on lamp will blink. The camera will turn off automatically if no operations are performed for another three minutes.

Format Memory/ **Format Card**

If no memory card is inserted, this option is named **Format memory** and formats internal memory. Otherwise it is named **Format card** and formats the memory card for use in the camera. *Note that formatting permanently deletes all pictures and other data.* Be sure to make copies as required before formatting.

Two format options are available when a memory card is inserted: **Quick format** (formats only areas of the card on which data are stored) and **Normal** (formats entire card). **Normal** is not available when batteries are low.

Format

Do not turn the camera off, disconnect the AC adapter, or remove the battery or memory card during formatting. Use the **Normal** option to format memory cards before first use and reformat them regularly thereafter. Without regular formatting, performance will drop with use.

Language

Choose a language for camera menus and messages from the following options:

| | | | | | |
|------------------|------------|-------------------|------------|----------------|---------------------|
| Čeština | Czech | Italiano | Italian | Svenska | Swedish |
| Dansk | Danish | Nederlands | Dutch | 中文(简体) | Simplified Chinese |
| Deutsch | German | Norsk | Norwegian | 中文(繁體) | Traditional Chinese |
| English | English | Polski | Polish | 日本語 | Japanese |
| Español | Spanish | Português | Portuguese | 한국어 | Korean |
| Français | French | Русский | Russian | ภาษาไทย | Thai |
| Indonesia | Indonesian | Suomi | Finnish | | |

Interface

Adjust settings for connection to a computer or video device.

| Option | Description |
|----------------------|--|
| USB | Select USB option for connection to computer ( 54) or printer ( 56, 60). |
| Video mode | Choose from NTSC and PAL ( 52). |
| Auto transfer | Choose On to mark all new pictures for transfer to computer ( 53). |

Reset all

Select **Reset** to restore camera settings to their default values ( 87).

Firmware Version

View the current camera firmware version.

Optional Accessories

At the time of writing, the following optional accessories and replacement items were available for this camera. Contact your local retailer or Nikon representative for details.

| | |
|---|--|
| Rechargeable battery | Rechargeable EN-EL8 Li-ion batteries |
| Battery charger | MH-62 battery charger |
| AC adapter | EH-64 AC adapter |
| Cradle | MV-15 COOL-STATION |
| ImageLink-compatible printer adapter | PV-10 dock insert |
| Wireless printer adapter | PD-10 wireless printer adapter. |
| USB cable | UC-E10 USB cable |
| A/V cable | EG-E5000 audio/video cable |
| Water-resistant case | FJ-CP1 field jacket (water resistant to 3m/9ft. 10in.) |

Approved Memory Cards

The following memory cards have been tested and approved for use in the COOLPIX S6:

| | |
|-----------|--|
| Panasonic | 64 MB, 128 MB, 256 MB, 256 MB*, 512 MB, 512 MB*, 1 GB, 1 GB* |
| SanDisk | 64 MB, 128 MB, 256 MB, 256 MB*, 512 MB, 512 MB*, 1 GB, 1 GB* |
| Toshiba | 64 MB, 128 MB, 128 MB*, 256 MB, 256 MB*, 512 MB, 512 MB*, 1 GB |

* High speed (10 MB/s)

Other cards have not been tested. For more details on the above cards, please contact the manufacturer.

Memory Cards

- Use only Secure Digital (SD) memory cards.
- Format memory cards before first use (76).
- Do not eject the memory card, turn the camera off, remove the batteries, or disconnect the AC adapter during formatting or while data are being written to or deleted from the card. Failure to observe this precaution could result in loss of data or damage to the camera or card.
- Do not disassemble or modify.
- Do not drop, bend, or expose to water or strong physical shocks.
- Do not touch the metal terminals with your fingers or metal objects.
- Do not affix labels or stickers to the memory card.
- Do not leave in direct sunlight, closed vehicles, or areas exposed to high temperatures.
- Do not expose to high levels of humidity or to corrosive gas.

Caring for the Camera

To ensure continued enjoyment of this Nikon product, observe the following precautions when storing or using the device.

✔ Handle the lens and all moving parts with care

The lens, monitor, and battery-chamber/memory card slot and lens covers are easily damaged. Do not use force. Force applied to the lens cover could cause malfunction or damage the lens. Should the monitor break, care should be taken to avoid injury due to broken glass and to prevent the liquid crystal from the display touching the skin or entering the eyes or mouth.

✔ Do not point the lens at strong light sources for extended periods

Avoid framing the sun or other strong light sources for extended periods when using or storing the camera. Intense light may cause deterioration in the image sensor, producing a white blur effect in photographs.

✔ Turn the product off before removing or disconnecting the power source

Do not unplug the product or remove the battery while the product is on, or while images are being recorded or deleted. Forcibly cutting power could result in loss of data or in damage to product memory or circuitry. To prevent an accidental interruption of power, do not move the product while the AC adapter is connected.

✔ Keep dry

The device will be damaged if immersed in water or subjected to high levels of moisture.

✍ Notes on the Monitor

- The monitor may contain a few pixels that are always lit or that do not light. This is a characteristic common to all TFT LCD displays, and does not indicate a malfunction. Images recorded using the product will not be affected.
- When you frame bright subjects, vertical comet-like streaks that whiten toward either end may appear in the display. This phenomenon, known as “smear,” does not appear in the final photograph and does not indicate a malfunction. Some smear may appear in movies.
- Images in the monitor may be difficult to see in a bright light.
- The monitor is lit by an LED backlight. Should the monitor begin to dim or flicker, contact your Nikon service representative.

✔ Do not drop

The product may malfunction if subjected to strong shocks or vibration.


✔ Keep away from strong magnetic fields


Do not use or store this device in the vicinity of equipment that generates strong electromagnetic radiation or magnetic fields. Strong static charges or the magnetic fields produced by equipment such as radio transmitters could interfere with the monitor, damage data stored on the memory card, or affect the product's internal circuitry.

✔ Avoid sudden changes in temperature

Sudden changes in temperature, such as occur when entering or leaving a heated building on a cold day, can cause condensation inside the device. To prevent condensation, place the device in a carrying case or a plastic bag before exposing it to sudden changes in temperature.

✔ The AF-Assist Illuminator LED

The light-emitting diode (LED;  2, 21) used in the AF-assist illuminator conforms to the following IEC standard:

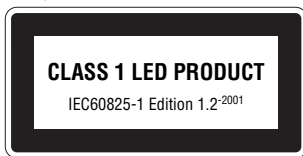

Cleaning

| | |
|----------------|---|
| Lens | Avoid touching glass parts with your fingers. Remove dust or lint with a <i>blower</i> (typically a small device with a rubber bulb attached to one end that is pumped to produce a stream of air out the other). To remove fingerprints or other stains that can not be removed with a blower, wipe the lens with a soft cloth, using a spiral motion that starts in the center of the lens and works out to the edges. If this fails, clean the lens using a cloth lightly dampened with commercial lens cleaner. |
| Monitor | Remove dust or lint with a blower. To remove fingerprints and other stains, clean the monitor with a soft, dry cloth, being careful not to apply pressure. |
| Body | Use a blower to remove dust, dirt, or sand then wipe gently with a soft, dry cloth. After using the camera at the beach or seaside, wipe off any sand or salt with a dry cloth lightly dampened with fresh water, then dry thoroughly. Note that foreign matter inside the camera could cause damage not covered under warranty. |

Do not use alcohol, thinner, or other volatile chemicals.

Batteries

- Check the battery level when taking the camera out and charge the battery if necessary (ⓘ 11). Do not continue charging once the battery is fully charged, as this will result in reduced battery performance. If possible, carry a fully-charged spare battery when taking pictures on important occasions.
- Do not use the battery at ambient temperatures below 0°C (32°F) or above 40°C (104°F). During charging, the temperature should be in the vicinity of 5–35°C (41–95°F). Note that the battery may become hot during use; wait for the battery to cool before charging. Failure to observe these precautions could damage the battery, impair its performance, or prevent it from charging normally.
- On cold days, the capacity of batteries tends to decrease. Be sure that the battery is fully charged before heading outside to take pictures in cold weather. Keep spare batteries in a warm place and exchange as necessary. Once warmed, a cold battery may recover some of its charge.
- Dirt on the battery terminals can prevent the camera from functioning.
- When the battery is not in use, remove it from the camera or battery charger and replace the terminal cover. The camera and battery charger draw minute amounts of current even when off; if left in place, the battery could be drained to the point that it no longer functions. Turning the camera on or off while the battery is exhausted can result in reduced battery life. If the battery will not be used for an extended period, store it in a cool (15°C–25°C/59°F–77°F), dry place. Recharge it at least once a year and run it flat before returning it to storage.
- Replace the battery when it no longer holds a charge. Used batteries are a valuable resource. Please recycle used batteries in accordance with local regulations.

Storage









Turn the camera off when not in use. Check that the power-on lamp is off before putting the camera away and remove the batteries if the camera will not be used for an extended period. Do not store the camera with naphtha or camphor moth balls or in locations that:










- are next to equipment that produces strong electromagnetic fields, such as televisions or radios
- are exposed to temperatures below -10°C (14°F) or above 50°C (122°F)
- are poorly ventilated or subject to humidities of over 60%




To prevent mold or mildew, take the camera out of storage at least once a month. Turn the camera on and release the shutter a few times before putting the camera away again.

Error Messages

The following table lists the error messages and other warnings that appear in the monitor and how to deal with them.




| Display | Problem | Solution |  |
|--|---|---|---|
|  (blinks) | Clock not set. | Set clock. | 71 |
|  | Battery running low. | Prepare to charge or change battery. | 10–11 |
| WARNING!! BATTERY EXHAUSTED | Battery exhausted. | Charge or change battery. | 10–11 |
|  (● blinks red) | Camera cannot focus. | Use focus lock to focus on another subject at same distance, then recompose picture. | 66 |
|  (blinks) | Slow shutter speed. Pictures may be blurred. | Use flash, or steady camera using tripod, by placing camera on level surface, or by holding camera in both hands with elbows against torso. | 18, 20 |
| WARNING!! Please wait for camera to finish recording  | Camera cannot perform other operations until recording is complete. | Message clears from display automatically when recording is complete. | — |
| MEMORY CARD IS WRITE PROTECTED | Write-protect switch is in “lock” position. | Slide write-protect to “write” position. | 13 |
| NO MEMORY CARD | No memory card inserted in Pictmotion mode. | Insert memory card. | 12 |
| THIS CARD CANNOT BE USED  | Error accessing memory card. | <ul style="list-style-type: none"> • Use approved card. • Check that connectors are clean. • Confirm that memory card is correctly inserted. | 77 |
| WARNING!! THIS CARD CANNOT BE READ  | | | 12 |

| Display | Problem | Solution |  |
|--|---|--|---|
| CARD IS NOT FORMATTED  FORMAT NO | Memory card has not been formatted for use in camera. | Highlight FORMAT and press  button to format card, or turn camera off and replace card. | 12 |
| IMAGE CANNOT BE SAVED  or  | Error occurred while recording picture. | Format internal memory or memory card. | 76 |
| | Camera has run out of file numbers. | <ul style="list-style-type: none"> • Insert new memory card. • Select Reset all after either inserting new memory card or formatting internal memory or memory card. | 12 76 |
| | Cannot create cropped, D-lighting, or small copy. | Select picture that supports crop, D-lighting, or small picture. | 89 |
| | Picture cannot be used for welcome screen. | Choose picture 640 × 480 pixels or larger. | — |
| | Cannot copy picture. | Delete pictures from destination. | 68 |
| IMAGE HAS ALREADY BEEN MODIFIED. D-LIGHTING CANNOT BE USED. | Original does not support D-lighting. | D-lighting can not be used with copies. | 89 |
| SOUND FILE CANNOT BE SAVED  or  | Camera has run out of file numbers. | Select Reset all after either inserting new memory card or formatting internal memory or memory card. | 76 |
| CANNOT RECORD MOVIE | Time out error while recording movie. | Choose memory card with faster write speed. | 77 |
| OUT OF MEMORY  or  | Memory card is full. | <ul style="list-style-type: none"> • Choose smaller image size. • Delete pictures or voice recordings. • Insert new memory card. • Remove memory card and use internal memory. | 61 40, 68 12 13 |
| CARD CONTAINS NO IMAGES | No pictures available for playback. | | — |
| NO SOUND FILE | No sound files available for playback. | | — |
| FILE CONTAINS NO IMAGE DATA | File not created with COOLPIX S6. | View file on computer or other device. | — |
| CANNOT PLAY FILE | | | |
| ALL IMAGES ARE HIDDEN | No pictures available for welcome screen or slide show. | | — |
| PICTMOTION PLAYBACK ERROR | Pictmotion files have been deleted or moved. | Delete affected Pictmotion movie. | 51 |
| THIS IMAGE CANNOT BE DELETED | Picture is protected. | Remove protection. | 68 |

| Display | Problem | Solution |  |
|---|---|--|---|
| NEW CITY IS IN THE CURRENT TIME ZONE | Destination in same time zone as home. | No need to change time zones if destination is in same time zone as home. | 72 |
| INITIALIZING LENS CANNOT FOCUS  | Camera cannot focus. | Wait until message has cleared from display and camera has zoomed all the way out. | — |
| LENS ERROR | Lens error. | Turn camera off and then on again. If error persists, contact retailer or Nikon representative. | 14 |
| LENS COVER ERROR | Finger or other obstruction prevents lens cover from opening. | Turn camera off and remove obstruction. | 2, 14 |
| Profile not registered. Set up profile. | No wireless profiles available. | Create profile. | 00-00 |
| COMMUNICATIONS ERROR | USB cable disconnected during transfer or printing. | If PictureProject displays error, click OK to exit. Resume operation after turning camera off and reconnecting cable. | 52-53, 56 |
| | USB option incorrect. | Choose correct USB option. | 54 |
| | PictureProject did not start. | See the PictureProject reference manual (on CD) for more information. | — |
| NETWORK CONNECTION FAILED | Unable to connect to wireless network. | Check that profile matches settings for host or wireless LAN adapter. | 00-00 |
| Failed to connect to (name of host) | Unable to connect to selected host. | Check settings for host or wireless LAN. | 00-00 |
| NO IMAGES ARE MARKED FOR TRANSFER | No pictures selected for transfer. | Select pictures for transfer and try again. | 68 |
| TRANSFER ERROR | Transfer error. | <ul style="list-style-type: none"> • Check battery level. • USB: Check that cable is connected. • Wireless: Check signal status and remove any obstacles between camera and wireless adapter or access point. | 14 52-53 00-00 |
| Battery exhausted. Transfer terminated. | Battery exhausted during wireless transfer. | Turn camera off and recharge battery, then turn camera on and select wireless mode. | 00-00 |
| Connection error. | Wireless transfer interrupted. | Check signal status and remove any obstacles between camera and wireless adapter or access point. | |
| SYSTEM ERROR | Error has occurred in camera's internal circuitry. | Turn camera off, remove and reinsert batteries, and turn camera on. If error persists, contact retailer or Nikon representative. | 10 |
| PRINTER ERROR CHECK PRINTER STATUS | Printer error. | Check printer. To resume, highlight Resume (if available) and press  . | — |

















Troubleshooting




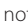





If the camera fails to function as expected, check the list of common problems below before consulting your retailer or Nikon representative. Refer to the page numbers in the right-most column for more information.

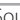
| Problem | Solution |  |
|---|--|---|
| Camera turns off without warning | <ul style="list-style-type: none">• Battery is low.• Camera has turned off automatically to save power.• Battery is cold. | 14 14 93 |
| Monitor is blank | <ul style="list-style-type: none">• Camera is off.• Battery is exhausted.• Standby mode: monitor turns on when controls are used.• Flash lamp blinks red: wait until flash has charged.• USB cable is connected.• A/V cable is connected.• Time lapse or interval timer photography in progress: monitor turns off automatically between shots | 14 14 14 20 53, 56 52 36, 64 |
| No indicators appear in monitor | Hide info is selected for Photo info . Select Show info . | 73 |
| Monitor is hard to read | <ul style="list-style-type: none">• Monitor has dimmed to save power: monitor brightens when controls are used.• Adjust monitor brightness.• Monitor is dirty: clean monitor. | 14 73 79 |
| Camera clock is not correct | Check camera clock regularly against more accurate timepieces and reset as required. | 71 |
| Camera settings reset | Clock battery exhausted: recharge clock battery. Pictures recorded before clock has been set will have time stamp of "00.00.0000 00:00"; movies will be dated "01.01.2006 00:00." | 71 |
| No picture taken when shutter-release button is pressed | <ul style="list-style-type: none">• Camera is in playback mode: press  button.• Menus are displayed: press  button.• Battery is exhausted. | 41 17 14 |

Electronically Controlled Cameras

In extremely rare instances, unusual characters may appear in the monitor and the camera may stop functioning. In most cases, this phenomenon is caused by a strong external static charge. Turn the camera off, remove and replace the batteries, and then turn the camera on again. In the event of continued malfunction, contact your retailer or Nikon representative. Note that disconnecting the power source as described above may result in the loss of any data not recorded to internal memory or the memory card at the time the problem occurred. Data already recorded will not be affected.

| Problem | Solution |  |
|---|---|---|
| Camera can not focus using autofocus | <ul style="list-style-type: none"> Subject is low in contrast, dominated by repeating geometric patterns, covers too small an area of the frame, or contains many fine details, objects of sharply differing brightness, or objects at different distances from the camera. Use focus lock to focus on another subject at same distance. Off is selected for AF assist option in camera setup menu. Focus error. Turn camera off and then on again. | 66 75 14 |
| Pictures are blurred | <ul style="list-style-type: none"> Use flash. Use BSS. Use tripod and self-timer. | 20 65 3, 22 |
| Pictures are too dark (underexposed) | <ul style="list-style-type: none"> Flash is off. Flash window is blocked. Subject is outside range of flash. Exposure compensation is too low. Subject is backlit: select  (scene mode) or use fill flash. | 20 18 20 25, 31, 63 20, 28 |
| Pictures are too bright (overexposed) | Exposure compensation is too high. | 25, 31, 63 |
| Randomly-spaced bright pixels ("noise") appear in image | Shutter speed too slow. Noise can be reduced by: <ul style="list-style-type: none"> Using flash Setting ISO sensitivity to 50 Choosing scene mode option with noise reduction | 20 65 28, 34 |
| Pictures are smeared | Lens is dirty. Clean lens. | 79 |
| Colors are unnatural | White balance does not match light source. | 62 |
| Flash does not fire | Flash is off. Note that flash turns off automatically in  mode (Time lapse movie excepted) and some scene modes or when option other than Single or Intvl timer shooting is selected for Continuous or BSS is on. | 20, 26, 35, 63, 65 |
| AF-assist illuminator does not light | <ul style="list-style-type: none"> Off is selected for AF assist option in camera setup menu. AF assist illumination turns off automatically in  (PORTRAIT excepted),   (NIGHT PORTRAIT excepted), , , and  modes. | 75 26 |
| Bright specks in pictures taken with flash | Flash is reflecting from particles in air. Turn flash off. | 20 |
| Blur warning is not displayed | <ul style="list-style-type: none"> Off is selected for Blur warning in camera setup menu. Blur warning is not displayed in self-timer, , , , , or  mode or when option other than Single is selected for Continuous or BSS is on. | 75 22, 26, 35, 63, 65 |
| No sound when shutter is released | Sound is not played when Off selected for Sound settings > Shutter sound , BSS on, option other than Single selected for Continuous , or  or  mode is selected. | 34, 35, 63, 65, 75 |


| Problem | Solution |  |
|---|--|---|
| Optical zoom cannot be used | Optical zoom cannot be used while shooting movies. | 35 |
| Digital zoom cannot be used | Digital zoom is not available when Multi shot 16 is selected for Continuous . | 63 |
| Unexpected results when flash set to  (auto with red-eye reduction). | In-camera red-eye fix may, in very rare cases, be applied to areas not affected by red-eye. Set flash to  (auto) or  (fill-flash) and try again. Note that red-eye reduction is the default setting for one-touch portrait,  , and  modes. | 20, 24, 33, 34 |
| Image mode not available | Image mode cannot be adjusted when Multi shot 16 is selected for Continuous or “Sports composite” is selected in scene mode. | 34, 63 |
| Date imprint not available | Camera clock has not been set. | 71 |
| Date not appearing on pictures | Date does not appear on movies or pictures taken using  ,   (Sports composite excepted), Continuous , or BSS. | 26, 35, 63, 65 |
| Pictures cannot be played back | <ul style="list-style-type: none"> Time lapse or interval timer photography in progress: pictures can not be played back until recording is complete. File has been overwritten or renamed by computer or other make of camera. | 36, 64 — |
| Cannot zoom in on picture | Playback zoom cannot be used with movies, small pictures, or pictures that have been cropped to below 320 × 240. | 37, 42, 69 |
| Cannot record voice memo | Voice memos cannot be appended to movies. | 37 |
| Cannot use crop, D-lighting, or small picture options | These options cannot be used with movies and may not be available with pictures created with other cameras. Select picture that supports crop, D-lighting, or small picture. | 89 |
| Cannot create new Pictmotion movie | Camera may be unable to create Pictmotion movies using pictures recorded with other cameras. Other cameras may be unable to play Pictmotion movies created with COOLPIX S6. | 48 |
| Cannot mark pictures for transfer | No more than 999 pictures can be marked for transfer. Use PictureProject Transfer button to transfer pictures. | 53 |
| Transfer marking does not appear | Pictures were marked for transfer using another model of camera. Mark pictures for transfer using S5. | 68 |
| PictureProject does not start when camera is connected | <ul style="list-style-type: none"> Camera is off. Battery is exhausted. USB cable is not correctly connected. Appropriate USB option is not selected. Computer can not detect camera. See the PictureProject reference manual (on CD) for further information. | 14 14 53 54 — |

| Problem | Solution |  |
|---|--|---|
| Cannot transfer pictures | ⓧ button can not be used to transfer pictures from internal memory when Mass Storage is selected for USB or if memory card is locked. Transfer pictures using PictureProject transfer button. | 53, 54 |
| Profile list is not displayed in wireless mode | Set Interface > USB option in camera setup menu to PTP . | 00-00 |
| Wireless signal is poor | <ul style="list-style-type: none"> • Check that correct profile is selected. • Change camera orientation or move camera closer to receiver. • Remove any obstacles between camera and wireless LAN adapter or access point. | 00-00 — — |
| Pictures not displayed on television | <ul style="list-style-type: none"> • Choose correct video mode. • USB cable is connected: disconnect USB cable | 52 8 |
| Format memory > Normal option not available | Batteries are low. | 14 |

Appendix

Operation Flowchart

The following flowchart illustrates basic camera operations.

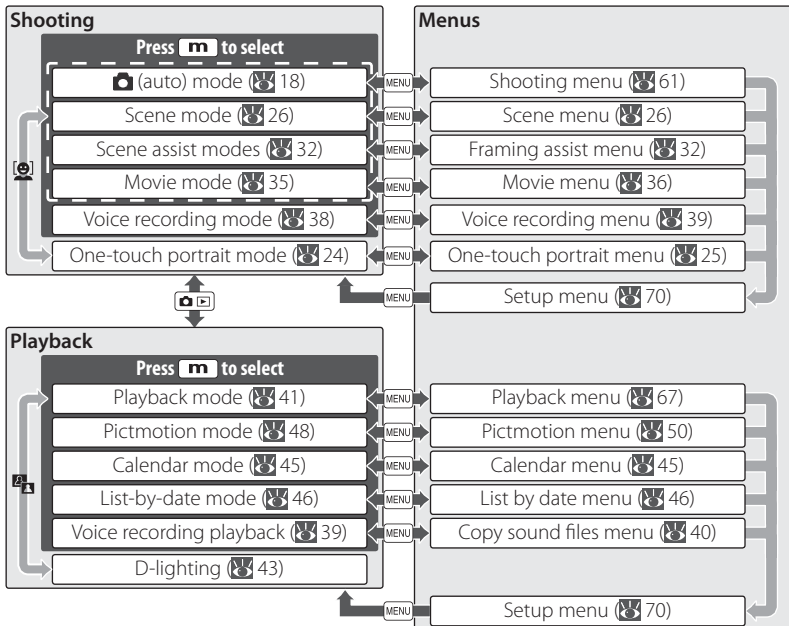

Supported Standards

- **DCF:** Design Rule for Camera File System (DCF) is standard widely used in the digital camera industry to ensure compatibility among different makes of camera.
- **DPOF:** Digital Print Order Format (DPOF) is an industry-wide standard that allows pictures to be printed from print orders stored on the memory card.
- **Exif version 2.2:** This camera supports Exif (**Ex**changeable **I**mage **F**ile **F**ormat for Digital Still Cameras) version 2.2, a standard that allows information stored with photographs to be used for optimal color reproduction when images are output on Exif-compliant printers.
- **PictBridge:** A standard developed by in cooperation with the digital camera and printer industries, allowing photographs to be output directly to a printer without connecting the camera to a computer.
- **ImageLink:** The ImageLink standard allows pictures taken with a digital camera to be printed directly on a household printer, without using a computer. The camera can be connected directly to any ImageLink-compatible printer for one-touch picture printing.

Defaults (🔗 61, 67, 70, 76)

Choosing **Reset** for **Reset all** restores the following default settings:

| Option | Default |
|-----------------------------------|-----------------|
| Shooting mode (🔗 18–25) | |
| Flash mode | Auto |
| Self timer | Off |
| Macro close-up | Off |
| One-touch portrait | |
| Exposure compensation | 0 |
| Photo effect | Normal |
| Scene mode (🔗 26–34) | |
| mode framing assist | PORTRAIT |
| mode framing assist | LANDSCAPE |
| mode framing assist | SPORTS |
| mode framing assist | NIGHT PORTRAIT |
| Exposure compensation | 0 |
| Movie menu (🔗 36–37) | |
| Movie options | Small size 320 |
| Set interval time | 30 s |
| Auto-focus mode | Single AF |
| Electronic VR | Off |
| Pictmotion settings (🔗 50) | |
| Music | Pachelbel Kanon |
| Style | Motion |
| Playback order | Random |
| Fit to length | Repeat photos |
| Auto select | 10 pictures |
| Shooting menu (🔗 61–66) | |
| Image mode | Normal (2816) |
| White balance | Auto |
| Exp. +/- | 0 |
| Continuous | Single |
| Interval timer | 30 s |

| Option | Default |
|----------------------------------|----------------|
| Shooting menu (continued) | |
| BSS | Off |
| Exposure BSS | Highlight BSS |
| ISO sensitivity | Auto |
| Color options | Standard color |
| AF-area mode | Center |
| Playback menu (🔗 67–69) | |
| Slide show | |
| Frame interval | 3 s |
| Setup menu (🔗 70–76) | |
| Menus | |
| Quick startup | On |
| Welcome screen | Animation |
| Monitor settings | |
| Photo info | Show info |
| Brightness | 4 |
| Date imprint | Off |
| AF assist | Auto |
| Sound settings | |
| Button sound | On |
| Shutter sound | 1 |
| Volume | Normal |
| Blur warning | On |
| Auto off | 1 min. |
| Auto transfer | On |
| Miscellaneous | |
| Sound quality (🔗 39) | High |
| Paper size (🔗 57, 58) | Default |

Choosing **Reset** also clears the current file number (🔗 89) from memory. Numbering will continue from the lowest number available (to reset file numbering to 0001, delete all pictures before selecting **Reset**). All other settings are unaffected, including **Date** (🔗 71), **Date counter** (🔗 74), **Language** (🔗 76), **USB** (🔗 76), and **Video mode** (🔗 76).

Image Mode (📷 61), Movie Options (📹 36), and Sound Quality (🔊 39)

The following table lists the number of pictures, maximum length per movie, or maximum total voice recording length that can be recorded to internal memory or a 256 MB memory card, together with the size of still pictures printed at 300 dpi.

| | Setting | Internal memory (22 MB) | 256 MB memory card | Print size (cm / in.) |
|---------------|--------------------------|-------------------------|--------------------|-----------------------|
| Image mode | High (2816*) | 7 | 85 | 24 × 18/9½ × 7 |
| | Normal (2816) | 14 | 165 | 24 × 18/9½ × 7 |
| | Normal (2048) | 26 | 305 | 17 × 13/7 × 5 |
| | PC screen (1024) | 90 | 1045 | 9 × 7/3½ × 2½ |
| | TV screen (640) | 193 | 2245 | 5 × 4/2 × 1½ |
| Movie options | TV movie 640* | 19s | 3 min. 40s | — |
| | Small size 320* | 38s | 7 min. 20s | — |
| | Small size 320 | 1 min. 14s | 14 min. 30s | — |
| | Pictmotion 320 | 1 min. | 1 min. | — |
| | Smaller size 160 | 4 min. 7s | 48 min. 5s | — |
| | Time lapse movie* | 225 frames | 1800 frames | — |
| Sound quality | Normal | 46 min. 8s | 5 hr. | — |
| | High | 16 min. 44s | 3 hr. 15 min. 55s | — |

* All figures are approximate. Actual capacity varies with make of memory card and, in the case of JPEG images, with the type of scene recorded. If memory remains for more than 9999 pictures, exposure count display will show 9999.

Restrictions on Camera Settings (📷 61)


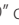
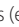

Restrictions apply to the following settings in 📷 mode:


| | |
|----------------------|--|
| Flash mode | Flash turns off at Continuous settings of Continuous or Multi-shot 16 or when BSS is on. Original mode is restored when Single or Intvl timer shoot-ing is selected or BSS is turned off. |
| Self timer | If self-timer is on, only one shot will be taken when shutter is released, regardless of settings chosen for Continuous and BSS . Original Continuous and BSS settings are restored when picture is taken or self-timer is turned off. |
| Continuous | Selecting Continuous or Multi-shot 16 turns BSS off. Original BSS setting is not restored when Single is selected. |
| BSS | Continuous is set to Single when BSS is on. Original setting is not restored when BSS is turned off. |
| White balance | White balance is set to Auto and can not be adjusted when Black and white , Sepia , or Cyanotype is selected for Color options . Original white balance is restored when Standard color or Vivid color is selected. |


Image File and Folder Names

Pictures, movies, and voice memos are assigned file names with three parts: a four letter identifier, a four-digit file number assigned automatically by the camera in ascending order, and a three-letter extension (e.g., "DSCN0001.JPG").





| Originals | Identifier | Extension | Copies | Identifier | Extension |
|------------------|-----------------|-----------|-----------------|------------|-----------|
| Still picture | DSCN | .JPG | Cropped copy | RSCN | .JPG |
| Movie | DSCN | .MOV | Small copy | SSCN | .JPG |
| Time-lapse movie | INTN | .MOV | D-lighting copy | FSCN | .JPG |
| Voice recording | DSCN | .WAV | | | |
| Voice memo | Same as picture | .WAV | | | |

Pictures and sound files are stored in folders named with a three-digit folder number followed by a five-character identifier: "P_" plus a three-digit sequence number for pictures taken using panorama assist (e.g., "101P_001";  29–30), "INTVL" for interval timer photography (e.g., "101INTVL";  64), "SOUND" or "SOUNE" for voice recordings (e.g., "101SOUND";  38), and "NIKON" for all other pictures (e.g., "100NIKON"). Folders can hold up to 200 pictures; if a picture is taken when the current folder contains 200 pictures, a new folder will be created by adding one to the current folder number. If a picture is taken when the current folder is numbered 999 and contains 200 pictures or a picture numbered 9999, no further pictures can be taken until the medium is formatted ( 76) or a new memory card inserted.

Files copied using **Copy > Selected images** or COPY SOUND FILES > **Selected files** are copied to the current folder, where they are assigned new file numbers in ascending order starting from the largest file number in memory. **Copy > All images** and COPY SOUND FILES > **Copy all files** copy all folders from the source device; file names do not change but new folder numbers are assigned in ascending order starting from the largest folder number on the destination device ( 40, 69).

Pictmotion movies ( 48) are stored under the "NKSS" folder in folders named with a three-digit folder number followed by "PRJCT" (e.g., "101PRJCT"). Each folder contains the picture and sound files for a single Pictmotion movie.

Copies (42, 43, 69)

Copies created using crop ( 42), D-Lighting ( 43), and small picture ( 69) have the same transfer marking as the original but are not marked for printing or protection. Copies created using **Copy** ( 69) have the same protection marking as the original but are not marked for printing or transfer. The crop and small picture options can not be used with copies created with crop or small picture; D-lighting is not available with copies created with crop, D-lighting, or small picture.

Time Zones (🕒 71–72)

The camera supports the time zones listed below. Increments of less than one hour are not supported; when travelling to or from destinations at half- or quarter-hour increments from Greenwich Mean Time (GMT), such as Afghanistan, Central Australia, India, Iran, Nepal, or Newfoundland, set the camera clock to local time (🕒 71–72).

| GMT +/- | Location | GMT +/- | Location |
|---------|--|---------|------------------------------------|
| -11 | Midway, Samoa | +1 | Madrid, Paris, Berlin |
| -10 | Hawaii, Tahiti | +2 | Athens, Helsinki |
| -9 | Alaska, Anchorage | +3 | Moscow, Nairobi |
| -8 | PST (PDT): Los Angeles, Seattle, Vancouver | +4 | Abu Dhabi, Dubai |
| -7 | MST (MDT): Denver, Phoenix, La Paz | +5 | Islamabad, Karachi |
| -6 | CST (CDT): Chicago, Houston, Mexico City | +6 | Colombo, Dhaka |
| -5 | EST (EDT): New York, Toronto, Lima | +7 | Bangkok, Jakarta |
| -4 | Caracas, Manaus | +8 | Beijing, Hong Kong (HK), Singapore |
| -3 | Buenos Aires, São Paulo | +9 | Tokyo, Seoul |
| -2 | Fernando de Noronha | +10 | Sydney, Guam |
| -1 | Azores | +11 | New Caledonia |
| ±0 | London, Casablanca | +12 | Auckland, Fiji |

Specifications

Nikon COOLPIX S6 Digital Camera

| | |
|----------------------------|--|
| Type | Compact digital camera |
| Effective pixels | 6.0 million |
| CCD | 1½s-in. CCD; total pixels: 6.2 million |
| Image size (pixels) | • 2,816 × 2,112 (2816*, 2816) • 1,024 × 768 (1024) • 2,048 × 1,536 (2048) • 640 × 480 (640) |
| Lens | 3 × Zoom-Nikkor ED Lens |
| Focal length | 5.8–17.4 mm (35 mm [135] picture angle equivalent: approx. 35–105 mm) |
| f/-number | f/3.0–f/5.4 |
| Construction | 12 elements in 10 groups |
| Digital zoom | Up to 4 × (35 mm [135] picture angle equivalent: 420 mm) |
| Autofocus (AF) | Contrast-detect AF with AF-assist illumination |
| Focus range (from lens) | 30 cm (1 ft.)–∞ Macro mode: 4 cm (1.6 in.)–∞ (middle zoom position) |
| Focus-area selection | Center; manual with 99 focus areas |
| AF-assist illumination | Class 1 LED product (IEC 60825-1 Edition 1.2 ²⁰⁰¹); max. output: 1,500 μW |
| Monitor | 3.0 in., 230,000-dot, wide viewing-angle low-temperature polysilicon TFT LCD with 5-level brightness adjustment |
| Approximate frame coverage | Shooting mode: 97% horizontal and 97% vertical Playback: 100% horizontal and 100% vertical |
| Storage | |
| Media | Internal memory (approx. 22 MB); SD (Secure Digital) memory cards |
| File system | DCF, Exif 2.2, and DPOF compliant |
| File formats | Compressed: JPEG-baseline-compliant Movies: QuickTime Sound files: WAV |
| Exposure | |
| Metering | 256-segment matrix, center-weighted, spot, spot AF area |
| Exposure control | Programmed auto exposure with exposure compensation (–2.0–+2.0 EV in steps of ½ EV) |
| Range | W: +1.2–+16.1 EV T: +2.9–+17.8 EV |
| Shutter | Mechanical and charge-coupled electronic shutter |
| Speed | 2–1/500 s |
| Aperture | |
| Range | Electronically-controlled ND filter selection f/3.0 and f/8.5 (W) |
| ISO sensitivity | ISO 50, 100, 200, 400; Auto (auto gain to ISO 200) |
| Self-timer | Can be selected from approximately 10 and 3 seconds duration |

| | |
|---------------------------------|---|
| Built-in flash | |
| Range (approx.) | W: 0.3–2.6 m/1 ft.–8 ft. 6 in. T: 0.3–1.4 m/1 ft–4 ft. 7 in. |
| Sync method | Sensor flash system |
| I/O terminals | Multi connector (supports ImageLink) |
| Interface | USB |
| Video output | Can be selected from NTSC and PAL |
| Wireless | |
| Standards | IEEE 802.11b/g (standard wireless LAN protocol), ARIB STD-T66 (standard for low power data communications systems) |
| Communications protocols | IEEE 802.11g: OFDM IEEE 802.11b: DBPSK, DQPSK, CCK |
| Range (line of sight) | Approximately 30 m/98 ft. (varies with location) |
| Operating frequency | 2412–2462 MHz (11 channels) |
| Data rates* | IEEE 802.11g: 6, 9, 12, 18, 24, 36, 48, and 54 Mbps IEEE 802.11b: 1, 2, 5.5, and 11 Mbps |
| Security | TKIP, 128/64-bit (104/40-bit) WEP |
| Access protocols | Infrastructure/ad-hoc |
| Supported languages | Chinese (Simplified and Traditional), Czech, Danish, Dutch, English, Finnish, French, German, Indonesian, Italian, Japanese, Korean, Polish, Portuguese, Norwegian, Russian, Spanish, Swedish, Thai |
| Power sources | <ul style="list-style-type: none"> • One rechargeable Nikon EN-EL8 lithium-ion battery (supplied) • EH-64 AC adapter (supplied) |
| Battery life | Approximately 200 shots (EN-EL8)† |
| Approximate dimensions | 93 × 59 × 20 mm/3.7 × 2.3 × 0.8 in. (W × H × D) |
| Approximate weight | 135 g (4.8 oz.) without battery or memory card |
| Operating environment | |
| Temperature | 0–40 °C (32–104 °F) |
| Humidity | Less than 85% (no condensation) |

* Maximum logical data rates according to IEEE standard. Actual rates may differ.

† Based on Camera and Imaging Products Association (CIPA) standard for measuring life of camera batteries. Measured at 25 °C (77 °F); zoom adjusted with each shot, flash fired with every other shot, image mode set to NORMAL.

Unless otherwise stated, all figures are for a camera with fully-charged EN-EL8 battery operated at an ambient temperature of 25 °C (77 °F).

Specifications

Nikon will not be held liable for any errors this manual may contain. The appearance of this product and its specifications are subject to change without notice.

MV-15 COOL-STATION

| | |
|------------------------|---|
| Supported cameras | Nikon S6 digital cameras |
| I/O terminals | DC in, USB, audio-video out, camera connector |
| Interface | USB |
| Operating temperature | 0–40 °C (32–104 °F) |
| Approximate dimensions | 000 × 000 × 000 mm/0.0 × 0.0 × 0.0 in. (W × H × D, excluding projections) |
| Approximate weight | 00 g (0.0 oz) |

PV-10 Dock Insert

| | |
|------------------------|---|
| Approximate dimensions | 135.5 × 22.5 × 63 mm/5.3 × 0.9 × 2.5 in. (W × H × D, excluding projections) |
| Approximate weight | 33 g (1.2 oz) |

EH-64 AC Adapter

















| | |
|------------------------|--|
| Rated input | 100–240V AC, 50/60 Hz, 0.18–0.1 A |
| Rated capacity | 18–22 VA |
| Rated output | DC 4.8 V/1.5 A |
| Operating temperature | 0–40 °C (32–104 °F) |
| Approximate dimensions | 41 × 23.5 × 79 mm/1.6 × 0.9 × 3.1 in. (W × H × D, excluding projections) |
| Length of cord | Approximately 1.7 m (5 ft. 7 in.) |
| Approximate weight | 110 g (3.9 oz), excluding power cable |

EN-EL8 Rechargeable Li-ion Battery

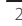
| | |
|------------------------|---|
| Type | Rechargeable lithium-ion battery |
| Rated capacity | 3.7 V/730 mAh |
| Operating temperature | 0–40 °C (32–104 °F) |
| Approximate dimensions | 35 × 47 × 5 mm/1.4 × 1.9 × 0.2 in. (W × H × D, excluding projections) |
| Approximate weight | 17 g (0.6 oz), excluding terminal cover |

Index

Symbols


-  (auto) mode, 18
-  (calendar) mode, 45
-  (delete) button, 19, 41
-  (D-lighting) button, 2, 43
-  (list-by-date) mode, 46
-  (MENU) button, 3, 17
-  (m) button, 3, 5, 17
-  (movie) mode, 35
-  (One-touch portrait) button, 2, 24
-  (Pictmotion) mode, 48
-  (playback) mode, 41
-  *see* scene assist modes
-  (shooting/playback) button, 3, 19, 41
-  (voice recording) mode, 38
-  (voice recording) playback mode, 39
- @ (wireless) mode, 00–00
-  (wait) icon, 16, 80

A

- Accessories, 77
- AE-L, 29
- AF , *see* Focus, indicator
- Autofocus, *see* Focus
- AF-area mode, 66
- AF Assist, 75
- Auto-focus mode, 37
- Auto off, 75
- Auto transfer, *see* Interface
- A/V cable, 8, 52

B

- Backlit subjects, 20, 28
- Batteries, 10–11
- Battery level indicator, 6–7, 14
- Best Shot Selector, 65
- Black-and-white, 66
- Blur, 21, 75
- Blur warning, 75
- Brightness, *see* Monitor settings

- BSS, *see* Best Shot Selector
- Burst shooting, *see* Continuous;
Scene assist, Sports ()
- Button sound, *see* Sound settings

C

- Calendar playback, 45

- Clock, *see* Date
- Close-ups, 23, 28
- Color options, 66
- Computer, 52
 - copying pictures to, 52
- Continuous, 63
- Continuous AF, *see* Focus, mode
- Copies, 42, 43, 69. *See also* Copy (playback menu); Cropping pictures; D-lighting; **Small pic.**
- Copy (playback menu), 69
- Cropping pictures, 42
- Cyanotype, 66
- Computer, 00–00. *See also* Wireless.

D

- Date, 71
- Date and time, *see* Date printing, 55, 59, 74
- Date counter, *see* Date imprint
- Date imprint, 74
- Daylight saving time, *see* Date
- DCF, *see* Design rule for Camera File system
- Default settings, 87
 - restoring, *see* Reset all

Delete, 68

- Deleting pictures, 19, 41, 68
 - in full-frame playback, 19, 41
 - selected pictures, 68
- Design rule for Camera File system, 86
- Digital Print Order Format, 58–59, 86
- Direct Print, *see* PictBridge
- D-lighting, 43
- Dock insert, 60
- DPOF, *see* Digital Print Order Format

E

- Electronic VR, 37
- E-mail, 61, 69
- Error messages, 80–82
- Exif 2.2, 86
- Exif Print, *see* Exif 2.2
- Exp. +/-, 25, 31, 63
- Exposure compensation, 25, 31, 63
 - scene mode, 31
 - shooting mode, 63

- Extension, 89

F

- Field jacket, *see* Accessories
- Fill flash, 20
- Firmware, 76
- Firmware version, 76
- Flash, 20
 - mode, 20
- Focus, 16, 66
 - area, 16, 66
 - face-priority, 24
 - indicator, 16
 - lock, 66
 - mode, 37, 66
- Format card, 76
- Format memory, 76
 - formatting, 12, 76
 - internal memory, *see* Format memory
 - memory cards, *see* Format card
- Framing, 16, 18, 24, 32
 - guides, 32

H

- Help, 17

I

- ImageLink, 60, 86
- Image mode, 61
- Image size, *see* Image mode
- Indicator lamp, 11, 16, 36, 38, 64
- Indoor photography, 20, 21, 26
- Interface, 52, 53, 56, 60, 76
- Internal memory, 12, 14

J

- JPEG, 89
- JPG, 89

L

- Landscapes, 26
- Language, 76
 - Language, choosing, 76
- Lens, 2, 79
- List by date, 46

M

- Macro close-up, 23, 28
- Memory cards, 12–13, 76, 77, 88
 - approved, 77
 - capacity of, 88
 - formatting, 12, 76
 - inserting and removing, 12–13

Memory card slot, 3, 12–13

Menus, 5, 17, 61

Menus, 70

Monitor, 3, 6–7, 79

brightness, 73

indicators in, 6–7

Monitor settings, 73

MOV, 89

Movies, 35–37

recording, 35–37

viewing, 37

MOVIE menu, 36–37

Moving subjects, 34, 63

Multi selector, 4, 17

N

Night photography, 20, 26

Noise reduction, 21, 27–28, 34

Normal, *see* **Format card**

NTSC, *see* Video mode

Number of exposures remaining,
14, 88

O

On/off, *see* Power switch

One-touch portrait, 24–25

button, 2

menu, 25

P

PAL, *see* Video mode

Panorama, 29–30

Photo info, *see* **Monitor settings**

PictBridge, 55–59, 86

Pictmotion, 48–51

PictureProject, 50, 52–54

PLAYBACK MENU, 67–69

Playback, 19, 41

calendar, 45, 47

full-frame, 19, 41

list by date, 46–47

menu, 67–69

movies, 37

on TV, 52

Pictmotion, 51

thumbnail, 41

voice memo, 44

zoom, 42

Portraits, 24–25, 26

Power-on lamp, 2, 14

Power switch, 2, 14

Printing pictures, 55–60. *See also* Date and time, printing;

Date imprint; Digital Print Order
Format; PictBridge; **Print set**

Print set, 59

Print size, 57–58

Protect, 68

Protected pictures, 6–7, 68, 76

Q

Quick format, *see* **Format card**

Quick startup, 70

QuickTime, 91

R

Red-eye reduction, *see* Flash,
mode

Reset all, 76, 87

S

SCN (scene) mode, 26–31

Back light (📷), 28

Beach/Snow (🏖️), 27

Close-up (👤), 28

Copy (📄), 28

Dusk/Dawn (🌅), 28

Fireworks show (🎆), 28

Museum (🏛️), 28

Night landscape (🌃), 28

Panorama assist (📷), 29–30

Party/Indoor (🎉), 27

Sunset (🌇), 27

Scene assist modes, 32–34

Landscape (🏞️), 33

Night portrait (🌃), 34

Portrait (👤), 33

Sports (🏃), 34

Secure Digital (SD), *see* Memory
cards

Self-timer, 22

Self-timer lamp, 2, 22

Sepia, 66

SET-UP MENU, 70–76

SHOOTING MENU, 61–66

Shutter-release button, 2, 16

Shutter sound, *see* **Sound settings**

Single AF, *see* Focus, mode

Size, *see* **Image mode**

Sleep mode, *see* **Auto off**

Slide show, 68

Slow sync, *see* Flash, mode

Small pic., 69

Smear, 78

Sound, 37, 39, 44, 51, 75

Sound settings, 75

Speedlight, *see* Flash

Standby mode, *see* Auto off

Strap, camera, 2–3

Support information, 1

T

Telephoto, *see* Zoom

Television, 36, 52, 61, 76

connecting to, 52

Thumbnail playback, 41

Time, *see* **Date**

Time zone, 71–72, 90

Timer, *see* Self-timer

Transfer, 52–54

mark, 53

marking pictures for, 53, 68, 76

wireless, 00–00

Transfer marking, 68

Tripod, 3, 22, 27–28, 34

T button, *see* Zoom control

U

USB, 54, 76. *See also* **Interface**

USB, 52–54, 56, 60

cable, 8, 52–54, 56

connection, 52–54, 56

connector, 8, 52–54, 56

V

VCR, 52

Video mode, 52, 76. *See also* **Interface**

Vivid color, 66

Voice memo, 44

Voice recording, 38–40

Volume, 37, 39, 44, 51, 75

Volume, *see* **Sound settings**

W

WAV, 89

Welcome screen, 71

White balance, 62

White balance, 62

preset, 62

Wide angle, *see* Zoom

Wireless, 00–00

Wireless LED, 00–00

W button, *see* Zoom control

Z

Zoom, 15

digital, 15

indicator, 6–7, 15

optical, 15

playback, 42

Zoom control, 2