

## Table of contents

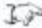 
<b>Table of contents</b> .....	1	Making an International Call.....	13
<b>Introduction</b> .....	3	Quick Extension Dialing.....	14
<b>Safety Information</b> .....	4	Call Records.....	14
<b>Appearance</b> .....	6	Call Waiting.....	14
<b>Display Description</b> .....	7	Active Call.....	15
<b>Key Description</b> .....	8	Making an IP Call.....	16
<b>Preparing your phone</b> .....	9	Switching Off.....	16
Inserting the SIM card.....	9	<b>Menu Structure</b> .....	17
Fitting the Battery.....	9	<b>Call records</b> .....	18
Removing the Battery.....	9	Missed calls.....	18
Charging the Battery.....	9	Received calls.....	18
Access Codes.....	10	Dialed numbers.....	18
<b>Using your phone</b> .....	12	Call duration.....	18
Switching on.....	12	Delete all.....	18
Making a call.....	12	<b>Phonebook</b> .....	19
Rejecting a call.....	12	Search entry.....	19
Answering a call.....	13	Add entry.....	20
Adjusting the Volume.....	13	Delete entry.....	20
Ending a Call.....	13	Copy entry.....	21
Emergency Services.....	13	Memory.....	22
		Own Number.....	22
		<b>SMS</b> .....	23

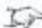 
Table of contents 1 **UIRD**


Write SMS.....	23	Phone settings.....	34
Inbox.....	25	Display.....	34
Outbox.....	26	Language settings.....	34
Unsent message.....	26	Security settings.....	34
Draft.....	27	IP access number.....	35
Voice mail.....	27	Battery low alert.....	35
Cell broadcast.....	27	Network settings.....	35
Template.....	28	Restore factory settings.....	36
Settings.....	28	<b>Tools</b> .....	37
Empty message.....	29	Alarm.....	37
<b>Settings</b> .....	30	Calendar.....	37
Profiles.....	30	Games.....	37
Incoming firewall.....	30	Software version.....	37
Time and date.....	30	<b>Input modes</b> .....	38
Call services.....	31	Switching Input Modes.....	38
Call divert.....	31	Numeric Mode (123).....	38
Call barring.....	31	English Mode (En).....	38
Call waiting.....	33	Symbol Mode (Symbol).....	38
Talk volume.....	33	<b>Battery precautions</b> .....	40
Auto redial.....	33	<b>Care and Maintenance</b> .....	41
Open to answer.....	33	<b>Telephone spec</b> .....	42
Cell timer.....	34		

**UIRD** 2 Table of contents

## Introduction

 Thank you for purchasing BIRD GSM dual band cellular phone. Your phone will allow you to use different international networks depending on the roaming agreements between the operators.

 We would like to remind you that this phone is approved to European standards.

 In order to use your phone effectively and in the best conditions, we advise you to read this manual written for attention carefully.

## Safety Information

Please note the following safety information. Failure to observe these instructions may lead to suspension of cellular telephone services to the user or legal actions .

### Traffic Safety

Avoid using a hand-held telephone while driving a vehicle. For road safety, park the vehicle before using a hand-held telephone.

### Operating Environment

Mobile radio transmitting equipment, including cellular telephones, may be subject to interference and may cause danger.

It is recommended that you follow any special regulations in your area. Switch off your cellular telephone whenever its use is forbidden.

### Hospital Safety

The use of cellular telephones may interfere with the function of medical devices in hospitals. Remember to follow special regulations

enforced in the area and switch off your phone when it is necessary.

### Electronic Device

Health Industry Manufacturers Association recommends that a minimum separation of 6 inches be maintained between a hand-held wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research and recommendations of Wireless Technology Research.

Persons with pacemaker should notice following conditions. If you have any reason to suspect that interference is taking place, please switch off your phone immediately.

- Should always keep the phone more than 6 inches from their pacemaker when the phone is switched on.
- Should not carry the phone in a breast pocket.
- Should use the ear opposite the pacemaker to minimize the potential interference.

### Aircraft Safety

The use of cellular telephones in an aircraft may disrupt radio transmission and signals and may be dangerous to the operation of the aircraft.

Be sure to switch off your cellular telephone when in an aircraft. For maximum safety when traveling by aircraft, remove the battery pack from the cellular telephone.

### Gasoline Stations

For maximum safety, switch off your cellular telephone when refueling your car.

### Explosive Sites

Restrictions on the use of cellular telephones should be observed in chemical plants, fuel storage, fuel distribution areas, or where blasting operation are in progress.

### Standard Usage

For satisfactory operation, use this equipment in accordance with the instructions in this manual.

### Qualified Service Personnel

Only qualified and authorized persons should service the cellular telephone. Faulty installation or repair may be hazardous.

### Accessories and Batteries

Be sure to use only accessories and batteries that are made specifically for your cellular phone.

### Emergency Calls

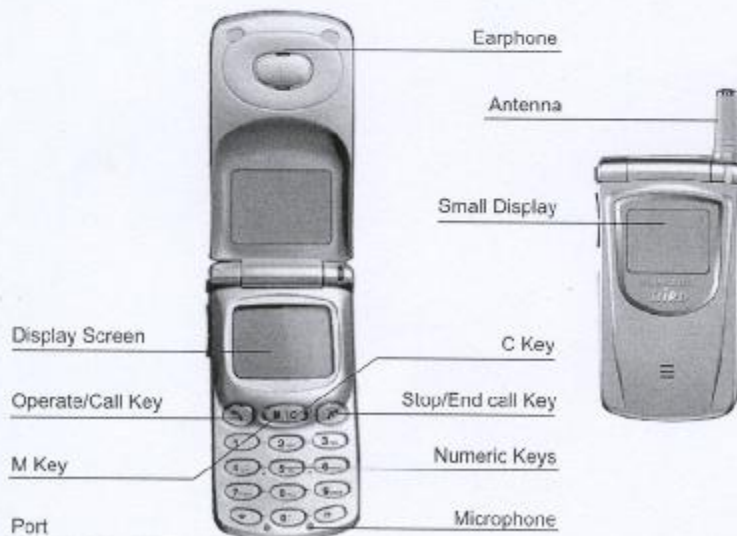
An emergency call can be made from the cellular telephone in network service areas.

### About SAR testing

For body worn operation this phone has been tested and meets FCC RF exposure guidelines when used with an accessory that contains no metal and that positions the headset a minimum of 1.5cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

Safety Information 5 **UIRD**

## Appearance



**UIRD** 6 Appearance



## Display Description

Icon	Description
	<b>Signal Strength</b> The more bars there are, the stronger the signal is.
	<b>Alarm</b> Indicates that Alarm function is set up and activated.
	<b>Battery Status</b> The more bars there are in the battery icon, the more power there is in the battery.
	<b>SMS</b> When there is an unread SMS in the Inbox, this icon will appear at the top of the display and blink.
	<b>Incoming Call Firewall</b> Indicates that the Incoming Call Firewall function is activated in your phone.

Icon	Description
	<b>Voice mail</b> Indicates that there is an unread voice mail.

## Display Description 7 **UIRD**

## Key Description

key	Description
	<b>Power/End/Cancel Key</b> This key is mainly used to switch the phone on or off, end a call or reject a call.
	<b>Dial/Answer Key</b> You can make a call or answer an incoming call. In the Idle Screen, you can view the list of recent Dialed Numbers by pressing this key.
<b>M/C</b>	<b>M key/C key</b> Perform the functions shown at bottom M/C corner of the display respectively.
	<b>IP Phone Key</b> This key is mainly used to make IP calls. It is also used to switch input modes in the Edit and Input Screens.

	<b>Up and Down Side Key</b> Adjust talk volume during a call. Scroll through pages in the Phonebook menu or setting options.
	<b>0-9 Keys</b> Number Keys are used for dialing numbers or inputting text in the Edit mode. Press and hold a Number Key in the Idle Screen for Quick Dialing of the number stored in the corresponding location of the Phonebook.
	<b>* Key</b> This key is used for entering * or quick extension dialing.
	<b># Key</b> This key is used for entering various punctuation marks and #.

## **UIRD** 8 Key Description

## Preparing your phone

### Inserting the SIM Card

- Please put the SIM card where children can't touch.
- Scratches can easily damage the metal contacts of the SIM card. Pay special attention to the SIM card as you handle and insert.
- Locate the SIM card slot in the battery compartment of your phone.

With the back of the phone facing you, you will see the SIM card slot. Insert the SIM card into the slot and press the SIM card cover. At the same time, slightly slide the SIM card downward into the proper position in the SIM card socket. When installing SIM card, make sure its metal contact side faces down and the bevel is placed at the bottom right corner.



### Fitting the Battery

Put the battery into the back of the phone and press it inwards until a "click" sound of battery lock is heard.



### Removing the Battery

With the back of the phone facing you, push the battery locking catch upwards and lift the battery out of the phone.

- After removing the battery, all settings and data stored in the SIM card and phone memory may be lost.

### Charging the Battery

Connect the charger plug with an arrow to the charging terminal at the bottom of the phone.

Preparing your phone 9 **LRD**

After connecting the charger plug, the bars in the battery strength icon at the upper right corner of the display will begin to scroll, indicating that the charging is in progress. The charging is complete when the bars fill the whole icon and stops scrolling. After that, press the buttons on both sides of the charger to pull out the plug.

- When the battery power becomes low, an alert message will appear on the main display of the phone. If the battery power is too low, the phone will switch off automatically. Do not leave the battery in low power status for a long period, or its quality and lifespan will be impaired.
- In order to ensure normal performance of the phone, it is important to use approved chargers.

### Access Codes

#### -PIN

This is the personal identification number of your SIM card. It is usually provided by your service provider together with the SIM card. If you enter the wrong PIN for three times successively, your SIM card will be locked. You need the PUK code for unlocking. Contact your service provider for more details in order to unlock your SIM card.

#### -PUK

PUK (Personal Unlocking Key) is required to change a locked PIN. If your SIM card is locked, enter ""\*05"" and you will be asked to enter PUK. After entering the correct PUK, your phone will be unlocked. If you enter the wrong PUK for ten times successively, your SIM card may be invalidated. PUK is usually provided by the service provider. Please contact your service provider to obtain the code. If you lose this code, also contact your service provider.

#### -Phone Password

Phone password is used to prevent unauthorized use of your phone by other people (default phone password is 0000). In order to ensure the security of your personal information, please change the default phone password as soon as possible.



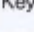 
#### -Security Code

To further ensure the security of your personal information, a security code is used to provide security for the phone. If you want to change your phone password or security code, your security code will first be verified before you can change the phone password.


Preparing your phone 11 **UIRD**

## Using your phone

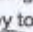 

### Switching On

1. Open the folder of your phone, press and hold the  Key to switch on the phone. If there is no SIM card or it is damaged, the phone will prompt you to insert a SIM card after playing the startup animation and melody. The phone will remain in this status. If your phone is being charged in the power off status, you can press and hold the  Key in the "Charging" screen to switch it on.
2. If the Auto Lock function in the Security Settings is activated, you will be prompted to enter the phone password after it is powered on.
3. If the SIM card in the phone is protected by PIN, "Please enter PIN" will be shown. After entering the correct PIN, press the  Key to confirm.
4. If the SIM card in the phone is locked, press \*\*\*05\*\* and you will be prompted to enter PUK.


5. The phone will search for network automatically after it is switched on.

 If an authorized network is found, the name and signal strength of the network will be shown on the display. If no authorized network is found, the phone can only be used for emergency calls or other non-communication functions.

### Making a Call

In the Idle mode, dial a phone number by pressing the corresponding Number Keys on the phone, including any necessary area code. Press the  Key to delete any incorrect input, then press the  Key to call this number after entering the whole number.

### Rejecting a Call


When there is an incoming call, you can press the  Key or close the folder to reject the



call. If you do not want to receive this person's call again, you can add his/her number to the Incoming Call Firewall.

#### Answering a Call

When there is an incoming call, the phone will give out corresponding alerts (such as vibrate, ring, etc.). The display of the phone will show the caller's name or number if this function is supported by the network. You can answer the call in the following two ways:

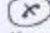 

1. If the folder is closed, answer the call by simply opening the folder (the Open to Answer option in the "Settings - Call Services" menu should be set to "Activated").
2. If the folder is open, press the  Key to answer the call.

#### Adjusting the Volume

You can adjust the volume in the corresponding menu; you can also adjust earpiece volume by pressing the Up/Down

Side Keys on the left of the phone during a call.

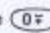 

#### Ending a Call


When a call is finished, press the  Key or close the folder to end the call. If you want to cancel making a call after dialing the number, also press the  Key or close the folder.

#### Emergency Services


You can dial Emergency Numbers directly without inserting a SIM card. Different networks provide different Emergency Numbers. Please contact your service provider for details.

#### Making an International Call

To make an international call, press and hold the  Key until "+" appears ("+" indicates the international prefix). Enter the country code, area code and phone number, and then press the  Key to call the number.


Using your phone 13 

#### Quick Extension Dialing

After entering a phone number, if you want to enter the extension number, press and hold the  key until "P" appears on the display, then enter the extension number.

#### Call Records


There are three ways to browse your recently missed/answered/dialed call numbers as well as the information, such as time and date, related to these numbers.


- When there are missed incoming calls, the "Missed Call" alert and the number of missed calls will be shown on the display. Press the **M** Key to show the list of recently missed calls, and press the Up/Down Side Keys to scroll through the list.
- In the Idle mode, press the  Key to show recently dialed numbers. Then press the Up/Down Side Keys to view the required numbers.
- In the Idle mode, press the **M** Key to access

the main menu, and then select "Call Records". After pressing the **M** Key, you can select the Missed Calls, Received Calls and Dialed Numbers submenus. Select one of them and then press the **M** Key to show the list of numbers.

#### Call Waiting

If there is a incoming call while you are on another call, the "Call Waiting" alert and the incoming call number will be shown on the display, then you can perform the following operations:

- Press the **C** Key or the  Key to select the End menu. In the End menu, you can select "End Current Call" or "End Waiting Call". If you select "End Current Call", you will end the active call and the incoming call screen of the waiting call will be shown. Conversely, if you select "End Waiting Call", you will end the waiting call and continue with the original call.

• By pressing the  Key, you will put the original call on hold and connect the waiting incoming call. In this status, you can press the **M** Key to access the menu options for active calls. You can select functions such as Phonebook, Swap, Hold, Resume, End Call, Mute, Join conference Call and SMS, etc.

#### **Active Call**

This function allows you to perform some functions while you are on a call with one or several parties.

**Phonebook:** during a call, press the **M** Key to access the active call functions. You can perform operations for the Phonebook such as Search and Add, etc.

**Swap:** when there is an active call and a held call at the same time, you can press the **M** Key to access the active call functions. Select Swap and the system will put the active call on hold and swap to the held call.

**Hold:** If you want to make a second call at the

same time, you can press the **M** Key to assess the active call functions. Select Hold and the system will put the current call on hold. If you do not hold the current call before making another call directly, the system will still put the original call on hold automatically when your new call is connected.

**Resume:** After holding a call with a party, if you want to resume the call with him/her, you can press the **M** Key to access the active call functions and select Resume to resume the held call.

**End Call:** During a call, press the **M** Key to access the active call functions and select End Call. You can choose to end the current call, the held call or all calls.

**Mute:** During a call, if you need to talk to another person and not want the conversation to be heard by the other party on the call, you can select this Mute function.

**Join conference Call:** this function requires relevant services provided by the service

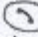 
Using your phone 15 

provider. It allows you to make a call with several parties at the same time.

**Private:** during a conference call, you can select this function to talk privately with a particular party in the conference call only.


**SMS:** during a call, you can press the **M** Key to access the active call functions and select SMS. In this function, you can receive, edit and send SMS during a call.


#### **Making an IP Call**

If the set IP access number is not "00000", you can press the IP Phone Key in the Idle Screen to quickly enter the IP access number. After entering a phone number (fixed long-distance call), you can also press the IP Phone Key to automatically add the IP access number in front of the number entered, and then press the  Key to dial this number. In the Phonebook, after the required phone number is found, you can press the IP Phone Key to add the IP access number in front of

the number and make the call.

#### **Switching Off**

In the Idle mode, you can press and hold the  Key to switch off your phone.

 16 Using your phone



## Menu Structure

### Call Records

- Missed calls
- Received calls
- Dialed numbers
- Call duration
- Delete all

### Phonebook

- Search entry
- Add entry
- Delete entry
- Copy entry
- Memory
- Own number

### SMS

- Write SMS
- Inbox
- Outbox
- Unsent message
- Draft
- Voice mail
- Cell broadcast
- Template
- Settings
- Empty Message

### Settings

- Profiles
- Incoming firewall
- Time and date
- Call services
  - Call divert
  - Call barring
  - Call waiting
  - Talk volume
  - Auto redial
  - Open to answer
  - Call timer
- Phone settings
  - Display
  - Language settings
  - Security settings
  - IP access number
  - Battery low alert
  - Network settings
- Restore factory settings

### Tools

- Alarm
- Calendar
- Games
- Software Version

Menu Structure 17 

## Call records

### Missed calls

Shows a list of recently missed calls. Press the Up/Down Side Keys to browse the missed call records. After selecting one of the records, you can select "Delete", "View details", "Save", "Call", "Reject" and "Send SMS" for the record.

### Received calls

Shows a list of recently answered calls. Press the Up/Down Side Keys to browse the answered call records. After selecting one of the records, you can select "Delete", "View details", "Save", "Call", "Reject" and "Sent SMS" for the record.

### Dialed numbers

Shows a list of recently dialed numbers. Press the Up/Down Side Keys to browse the dialed number records. After selecting one of the records, you can select "Delete", "View details", "Save", "Call", "Reject" and "Sent SMS" for the record.

### Call duration

- Last call**  
shows the duration of your most recent call.
- All calls**  
shows the total time of all calls since the last timer reset.
- Reset all**  
resets the timers of your call history.

### Delete all

- Dialed numbers**  
delete all recently dialed number records.
- Received calls**  
delete all recently answered call records.
- Missed calls**  
delete all recently missed call records.
- All calls**  
delete all recently dialed, answered and missed call records.

 18 Call records

## Phonebook

This function allows you to browse, add, edit, copy and delete numbers in the Phone and in the SIM card. In the Idle Screen, you can press the Up/Down Side Keys to access the Phonebook list directly.


**i** Location of entries: the storage locations of entries refer to the locations where Phonebook entries are saved in the Phonebook. The default storage locations of entries in the phone range from 1 to 100 (the storage capacity of the phone is 100 entries) while the locations for entries stored in SIM start from 101 onwards.

### Search entry

This function allows you to search the number of the required person:

In this option, you will be asked to enter the name corresponding to the number that you want to find. There are two methods to find

the required number:

1. You can enter the full name to search the stored number, or only enter the initial character or alphabet to search.
2. If you are not sure about the name corresponding to the number that you need, simply press the **M** Key to access the Phonebook, and then press the Up/Down Side Keys to scroll to the required number. When the number appears, you can press the  Key to call the number, or press the **M** Key to access the Select menu.

### -Send SMS

Send an SMS to the current number.

### -Call


Call the current number.

### -Edit

Edit the phonebook data of this number.

### -View details

View the name, number and storage location

Phonebook 19 

of the current record.

### -Delete

Select Delete to delete the current record directly.

### -Copy

Select Copy to copy the current record to the phone or SIM.

### Add entry

In the Phonebook menu, select "Add entry", then press the **M** Key to access name editor to add a new number:

1. Press the **M** Key for "OK" to add Phonebook entries.
2. Enter the name of the contact corresponding to the number and press the **M** Key for "OK".
3. Enter the number of the contact corresponding to the entry and press the **M** Key for "OK".
4. The system will assign the location to save the data automatically. You can also enter the location of the data by yourself and press the

**M** Key to confirm. When the message "Saved" appears, the number is saved.

### Delete entry


In the Phonebook menu, select the "Delete entry" function and press the **M** Key to access Delete Entries menu. This menu provides three ways to delete phonebook entries:

### -Delete by name

Select "Delete by name" and press the **M** Key to access "Delete by name". When the name editor appears, you can either enter a full name or the initial character (or alphabet) of the name or enter nothing at all to search the Phonebook data. After selecting an entry, press the **M** Key to show details of this entry (name, number and location) and press the **M** Key again to delete it.

### -All entries

Select "All entries" and press the **M** Key to access "All entries". If there is no record, "No Record" will be shown in the display; otherwise,

 20 Phonebook



you will be prompted to delete the information of all numbers. Press the **M** Key to delete all Phonebook entries (including entries saved in Phone and in SIM), or press the **M** Key to cancel the current operation.

**-All entries in SIM**

Select "All Numbers in SIM" and press the **M** Key to access "All entries in SIM". If there is no record, "No Record" will be shown in the display; otherwise, you will be prompted to delete the information of all numbers in SIM. Press the **M** Key to delete all Phonebook entries in SIM, or press the **C** Key to cancel the current operation.

**-All entries in Phone**

Select "All entries in Phone" and press the **M** Key to access "All entries in Phone". If there is no record, "No Record" will be shown in the display; otherwise, you will be prompted to delete the information of all numbers in the phone. Press the **M** Key to delete all Phonebook entries in the phone, or press the

**C** Key to cancel the current operation.

**Copy entry**

In the Phonebook menu, select the "Copy entry" function and press the **M** Key to access Copy Entries menu. This menu provides three ways to copy Phonebook entries:

**-Copy by name**

Select "Copy by name" and press the **M** Key to access "Copy by name". When the name editor appears, you can either enter a full name or the initial character (or alphabet) of the name or enter nothing at all to search the Phonebook data. After selecting an entry, press the **M** Key to show details of this entry (name, number and location) and press the **M** Key again to copy it to the phone or SIM card (the storage location is the first empty location).

**-From SIM to phone**

Select "From SIM to phone" and press the **M** Key to access "From SIM to Phone". You will be asked whether to copy entries in SIM or

not. Press the **M** Key to access the location editor, and you can edit the starting and ending locations of the entries that you want to copy (if you want to copy 20 entries from 101 to 120, you can enter 101 in the starting location and 120 in the ending location). Press the **M** Key to confirm and complete the copy operation.

**-From phone to SIM**

Select "From phone to SIM" and press the **M** Key to access. You will be asked whether to copy entries in Phone or not. Press the **M** Key to access the location editor, and you can edit the starting and ending locations of the entries that you want to copy (if you want to copy 20 entries from 1 to 20, you can enter 1 in the starting location and 20 in the ending location). Press the **M** Key to confirm and complete the copy operation.

**Memory**

**-Preferred memory**

In "Select memory", there are two options:

Phone and SIM. Press the **M** Key to select one of them as the default memory location for phone records.

**-SIM capacity**

In "SIM capacity", you can see the information of the SIM memory usage status.

**-Phone capacity**

In "Phone capacity", you can see information of the phone memory usage status.

**Own Number**


In Own Number, you can view the own number list, which can contain up to two numbers. After selecting a number, press the **M** Key to show the details of this number. Press the **M** Key again to access the operation menu, or press the **C** Key to return to the previous menu.



## SMS

This function allows you to send, receive and edit various types of text messages. All functions under this menu require network support. Please contact your service provider for details.

### Write SMS

You can use this function to compose text messages. In the Edit status, press the IP Phone Key to switch input modes. Press the C Key briefly to delete one character, or press and hold it to delete all characters to the right of the cursor. After entering the message you want to send, press the M Key to confirm or press the  Key to access the sending mode selection (Send to One or Send Multiple) screen.


#### -Send to one

In this menu, the methods of inputting numbers will be shown, including "Direct input" and

"From phonebook".

If you select "Direct input", you will go to the number input mode. Enter the number and press the M Key to send the SMS directly, and the "Sending message" alert will be shown in the display. If it is successfully sent, the "Message sent" alert will be shown; otherwise, "Send failed" will appear in the display.

If you select "From phonebook", a Phonebook list will be shown. You can press the Up/Down Side Keys to scroll through the list. After selecting an entry, press the M Key to show the number of the current entry in the Edit status, which allows you to make changes to the number. Press the M Key to send the SMS, and the "Sending message" alert will be shown in the display. If it is successfully sent, the "Message sent" alert will be shown and the message will be saved in the Cutbox automatically, otherwise "Send failed" will appear in the display.

SMS 23 

If the message is not successfully sent, it will be saved in the Unsent message automatically.

#### -Send multiple

In this menu, the methods of inputting numbers will be shown, including "Direct input" and "From phonebook".

If you select "Direct input", you will go to the number input mode. After entering the first number and pressing the M Key to confirm, you will see a number list, which contains the number you have just entered. Press the C Key to continue entering new numbers. After entering all the numbers, press the M Key to send the message, and the "Sending message" alert will be shown in the display when the message is being sent. If it is successfully sent, the "Message sent" alert will be shown; otherwise, "Send failed" will appear in the display.

If you select "From phonebook", a Phonebook list will be shown. You can press the Up/Down Side Keys to scroll through the list. After

selecting an entry, press the M Key to add the entry to the Send list, and then press the C Key to continue adding new numbers. After adding all the numbers, press the M Key to send the message, and the "Sending message" alert will be shown in the display when the message is being sent. If it is successfully sent, the "Message sent" alert will be shown; otherwise, "Send failed" will appear in the display.

If the message is not successfully sent, it will be saved in the Unsent message automatically.

#### -Save

In this menu, the methods of inputting numbers will be shown, including "Direct input" and "From phonebook".


Select "Direct input" to go to the number input mode. After entering a number, press the M Key to save it.

If you select "From phonebook", a Phonebook list will be shown. You can press the Up/Down Side Keys to scroll through the list. After

selecting an entry, press the **M** Key to show the selected number in the Edit status and press the **M** Key to save it.

If it is successfully saved, the "Completed" alert will be shown; otherwise, "Save failed" will appear in the display.

#### **Inbox**

You can use this function to save all read or unread SMS. When there is a new SMS, there will be an SMS alert tone and the "Read ?" alert will appear in the Idle Screen. At the same time, the  icon will also appear at the top of the Idle Screen.

You can simply press the **M** Key to read the latest SMS. The latest information (such as the time and date of receipt and the sender's number, etc) will be shown in the display. You can also read these messages in the Inbox. After reading an SMS, press the **M** Key for the options to dispose of it.

#### **-Delete**

Delete this SMS.

#### **-Edit**

Edit the SMS received.

#### **-Reply**

Reply a message to the sender.

#### **-Send to one**

You can forward the SMS to another person.

#### **-Send multiple**

You can forward the SMS to several persons at a time.

#### **-Call**


You can call the number shown in the message record.

#### **-Save number**

You can save the number of the sender of the SMS.

#### **-Delete all**

Select "Delete all" and press the **M** key to delete all of the messages in the Inbox.

SMS 25 

#### **Outbox**

In the Outbox, the messages that you have sent successfully recently will be shown. Press the Up/Down Side Keys to scroll to view the next message. Press the **M** Key to view the content of the current SMS, and press the **M** Key again to access the options screen to delete, edit or send the current SMS.

#### **-Delete**

select "Delete" and press the **M** Key to delete the message.

#### **-Edit**

select "Edit" and press the **M** Key to access the edit screen and edit the SMS, after which you can send it in different ways.

#### **-Send**

select "Send" and press the **M** Key to send the SMS in different ways.

#### **-Delete all**

Select "Delete all" and press the **M** key to delete all of the messages in the Outbox.

#### **Unsent message**

In the Unsent message, the messages that you have sent but failed recently will be shown. Press the Up/Down Side Keys to scroll to view the next message. Press the **M** Key to view the content of the current SMS, and press the **M** Key again to access the options screen to delete, edit or send the current SMS.

#### **-Delete**

select "Delete" and press the **M** Key to delete the message.

#### **-Edit**

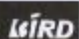 
select "Edit" and press the **M** Key to access the edit screen and edit the SMS, after which you can send it in different ways.

#### **-Send**

select "Send" and press the **M** Key to send the SMS in different ways.

#### **-Delete all**

Select "Delete all" and press the **M** key to delete all of the messages in the folder.

 26 SMS



**Draft**

In the Draft folder, the destination number of the current SMS will be shown (only one number can be shown). Press the Up/Down Side Keys to scroll to view the next message. Press the **M** Key to view the content of the current SMS, and press the **M** Key again to access the options screen to delete, edit or send the current SMS.

**-Delete**

select "Delete" and press the **M** Key to delete the message.

**-Edit**

select "Edit" and press the **M** Key to access the edit screen and edit the SMS, after which you can send it in different ways.

**-Send**

select "Send" and press the **M** Key to send the SMS in different ways.

**-Delete all**

Select "Delete all" and press the **M** key to delete all of the messages in the Draft folder.

**Voice mail**

When a new voice mail is received, there will be a new voice message alert. Press the **M** Key to connect to the Voice mail number and read the message. If the voice message number is not correctly set, the display will indicate the wrong number and return to the Idle Screen upon time-out. Press the **C** Key to close the alert message.

Return to the Idle Screen.

If there is any unread voice message from the network, the icon in the icon area will be shown; if there is no unread voice message from the network, the icon in the icon area will disappear.

**Cell broadcast**

Cell broadcast messages are text messages collected by the service provider from users. The CB messages may be related to weather forecast, traffic conditions or local taxi information, etc. Please contact your service provider for details.

**SMS 27** **-CB Inbox**

shows the cell broadcast messages and allows operations such as Delete and Call the cell broadcasts.

**-Channels**

shows information about the status of cell broadcast channels and perform operations such as Add and Delete cell broadcast channels.

**-CB language**

select the language for cell broadcast, including Simplified Chinese and American English.

**-CB settings**

shows the activate/deactivate settings of cell broadcast, including Activate and Deactivate modes.

**Template**

shows 10 templates. Use the Up/Down Side Keys to scroll and press the **M** Key to edit a template. After finished editing, press the **M** Key to access the submenu for template

functions where you can perform operations such as Send, Save or Delete in different ways.

**Settings****-Voice mail**


If you have set the voicemail number before, you should call out the number to the edit mode after accessing the Settings menu; otherwise, the edit mode will become empty. Enter the voicemail number (can be blank) and press the **M** Key to save it.

**-Message center**

If you have set the message center number before, you should call out the number to the edit mode after accessing the Settings menu; otherwise, the edit mode will become empty. Enter the message center number (can be blank) and press the **M** Key to save it.

**-Valid until**

If you have set the validity period (no. of days) before, you should call out the number of days to the edit mode; otherwise, the edit mode will

 **28 SMS**



become empty. Enter the number of days for the validity period (can be blank; the validity period should range from 0 to 99) and press the **M** Key to save it.

**-SMS sent tone**

This function allows you to set whether an alert tone is played when the SMS is sent successfully or fails to be sent.

**Empty message**

This function allows you can select the messages to delete.

**-Empty all messages**

You can delete all of the messages.

**-Empty inbox**

You can delete all of the messages in the inbox.

**-Empty Outbox**

You can delete all of the messages in the Outbox.

**-Empty Unsent**

You can delete all of the messages in the Unsent.

**-Empty Draft**

You can delete all of the messages in the Draft.

## Settings

### Profiles

**-Select profile**

Select the "Select profile" menu and press the **M** Key to select a ringtone profile. The phone provides five ringtone modes, including "Ringtone loud", "Ringtone soft", "Vibrate", "Vibrate and ring" and "Silent".

**-Edit profile**

Select the "Edit profile" menu and press the **M** Key to edit a profile. After selecting a profile, you can set the Incoming ringtone, Message received tone, Alarm ringtone, Keypad tone, Ringtone volume and Voice mail tone.

### Incoming firewall

This function can be used to reject specific incoming call numbers automatically.

**-Add new number**

Select the "Add new number" menu and press the **M** Key. You can add a number to be

rejected by "Direct input" or "From phonebook".

If the operation is successful, the "Added" alert will be shown in the display.

**-View rejected List**

Select the "View reject list" menu and press the **M** Key to view the Reject List. Select a rejected number and press the **M** Key to access the "Delete" and "Call" submenu options.

**-Firewall settings**

Select the "Firewall settings" menu and press the **M** Key to select "On" or "Off" for the "Incoming firewall" setting.

### Time and date

**-Set time and date**

This function allows you to set the current time and date on the phone.

**-Set time format**

This function allows you to set the time format shown in the Idle Screen as 12-hour or

24-hour format.

-Set date format

This function allows you to set the date format shown in the Idle Screen.

#### **Call services**

##### **-Call divert**

This service allows the user to divert an incoming call from the phone to another phone where you can answer the call.

##### ***Divert all calls***

select the "Divert all calls" menu and press the **M** Key to access its submenu:

1. In the "Activate" submenu, you will be prompted to enter the number to which you want to divert calls. Press the **M** Key after entering the number.
2. In the "Cancel" submenu, you can choose to cancel all settings for the past call diverts. The divert function is deactivated.
3. In the "View status" submenu, you will see either of the divert status alerts: "Service

activated + divert number" or "Service canceled".

##### ***Divert conditions***

This function allows you to select the conditions for diverting incoming calls, including "If busy", "If no answer" and "If unreachable".

##### ***Cancel all divert***

Select the "Cancel all divert" menu and press the **M** Key to cancel the call divert function.


##### **-Call Barring**

This service provides the "Barring" function for incoming or outgoing calls that meet certain condition(s). Barred incoming calls will be rejected while barred outgoing calls cannot be made.

##### ***All outgoing calls***

Select the "All outgoing calls" menu and press the **M** Key to access its submenu.

1. In the "Activate" submenu, you will be prompted to enter the "call barring password". After entering the correct password, press the **M** Key to confirm. All outgoing calls will be

**Settings 31** 

barred.

2. In the "Cancel" submenu, you will be prompted to enter the "call barring password". After entering the correct password, press the **M** Key to confirm. All outgoing calls will be allowed, which means barring is canceled.
3. In the "View status" submenu, you will see either of the barring status alerts: "Service activated" or "Service canceled".

##### ***International outgoing calls***

Select the "International outgoing calls" menu and press the **M** Key to access its submenu.

1. In the "Activate" submenu, you will be prompted to enter the "call barring password". After entering the correct password, press the **M** Key to confirm. All outgoing international calls will be barred.
2. In the "Cancel" submenu, you will be prompted to enter the "call barring password". After entering the correct password, press the **M** Key to confirm. All outgoing international calls will be allowed, which means barring is

canceled.

3. In the "View status" submenu, you will see either of the international call barring status alerts: "Service activated" or "Service canceled".

##### ***All incoming calls***

Select the "All incoming calls" menu and press the **M** Key to access its submenu.

1. In the "Activate" submenu, you will be prompted to enter the "call barring password". After entering the correct password, press the **M** Key to confirm. All incoming calls will be barred.
2. In the "Cancel" submenu, you will be prompted to enter the "call barring password". After entering the correct password, press the **M** Key to confirm. All incoming calls will be allowed, which means barring is canceled.
3. In the "View status" submenu, you will see either of the All Incoming Call Barring status alerts: "Service activated" or "Service canceled".



#### **Cancel call barring**

Select the "Cancel call barring" menu and press the **M** Key. You will see the "Cancel all?" message that prompts for confirmation. Press the **M** Key to confirm canceling the call barring function and you will be asked to enter the "call barring password". After entering the correct password, press the **M** Key to confirm canceling the "Call barring" function.

#### **-Call waiting**

This service can inform you of another incoming call when you are already on a call and allow you to choose to answer new call. Select the "Call waiting" menu and press the **M** Key to access the "Call waiting" function. You can activate and deactivate the Call waiting function by selecting "On" and "Off".

#### **-Talk volume**

Select the "Talk volume" menu and press the **M** Key to access talk volume adjustment screen. Press the Up/Down Side Keys respectively to increase and decrease the


volume, which is divided into 7 levels. Press the **M** Key to confirm and **C** Key to cancel the selection.

You can also press the Up/Down Side Keys to adjust the volume during a call. The talk volume will change accordingly as you make the adjustment and you do not need to press other keys to confirm or cancel. The display will return to the talk screen in 2 seconds.

#### **-Auto redial**

Select the "Auto redial" menu and press the **M** Key. If you select "Prompt", you will be prompted whether to redial or not when a call fails; if you select "Off", the redial prompt function will be deactivated.

#### **-Open to answer**

Select the "Open to answer" menu and press the **M** Key. If you set it to "On", when you receive a call, you will be connected to it immediately after you open the folder. If you set it to "Off", when you receive a call, you need to press the  Key after you open

the folder in order to be connected.

#### **-Call timer**

Select the "Call timer" menu and press the **M** Key. If you set it to "On", an alert tone will be played at the preset interval during a call. If you set it to "Off", the function will be deactivated.

#### **Phone settings**

##### **-Display**

##### **Contrast**

In this function, you can use the Up/Down Side Keys to adjust the contrast of the display.

##### **Backlight time**

In this function, you can select Activate (and the Backlight time) or Deactivate for the backlight of the display.

##### **-Language settings**

In this function, you can select the menu language shown in the display: Auto, English, Simplified Chinese or Russian.

#### **-Security settings**

##### **Phone Lock**

This function provides two phone locking functions: "Auto Lock" and "Lock Now". You can prevent your phone from unauthorized use by other people by setting the phone lock.

- **Auto lock:** after activating this function, you are required to enter the "Phone password" when you try to switch on the phone. You can switch on the phone only if you enter the correct phone password.
- **Lock now:** when your phone is switched on, if you want to leave your phone for a while but do not want it to be operated by other people, you can activate this function. You can return to the operation screen by entering the correct phone password.
- **Change phone password:** in this menu, you can change the phone password. You will be asked to enter the security code. After entering the correct security code, the system will prompt you to change the original



phone password. Enter a new password and press the Left Soft Key to confirm. There will be a message for the new phone password, indicating that the phone password is changed successfully.

#### **SIM card lock**

This function can prevent other people from using your SIM card.

- **Set SIM PIN:** in this function, you can set the status of the SIM lock. You can activate the SIM lock function by selecting "Activate" and entering the correct PIN.
- **Change SIM PIN:** in this function, you can change your PIN.

#### **Change Super-password**

In this function, you can change your security code. After entering the old security code, the system will prompt you to enter a new security code. Press the M Key to confirm. There will be a message for the new security code, indicating that the new security code is set successfully.

#### **-IP access number**

Select the "IP access number" menu and press the M Key to edit the IP Access Number. Enter the corresponding IP Access Number and press the M Key to complete setting the IP Access Number. The IP Access Number must contain 5 digits. If you enter 00000 for IP Access Number, the IP Phone Key will be disabled.

#### **-Battery low alert**

In this function, you can choose whether an alert tone will be played when the battery power is low by selecting "Activate" or "Deactivate".

#### **-Network settings**

##### **Change band**

This function allows you to change the operating frequency of your phone. For example, you can switch between GSM900, GSM1800 and GSM900/GSM1800.

##### **Existing networks**

This function can search and show the list of available networks for your phone under the

current conditions, such as China Mobile and China Unicom.

#### **Settings**

This function allows you to set your network registration mode and search frequency.

##### **Preferred network**

This function allows you to add or delete a network in the preferred network list of your phone.

##### **New network**

This function can show the list of new networks for your phone under the current conditions.

##### **Restore factory settings**

This function allows you to select Restore Settings and Restore All. You must enter the phone password before you can activate this function.

##### **-Restore Settings**

Restore all settings to their initial status. A "setting" means one of the options predefined in your phone selected and saved by you or

parameters directly entered and saved by you, which causes certain changes in the functions of the phone.

##### **-Restore All**


Completely restore the phone to factory status and clear all traces of user operations, including the Phonebook, Call Records, Reject List and SMS, etc.

## Tools

### Alarm

This function allows the phone to remind you by ringing or vibrating at the preset time every day. Press the corresponding Number Keys to enter the alarm time and press the **M** Key to confirm. After setting the Alarm, you can choose to deactivate it or reset the alarm time.

### Calendar

In Calendar, you can see a calendar with the cursor located at the current date. You can press the Up/Down Side Keys to move the cursor. Press the **M** Key or the  key to access the Select Date menu. Enter the date that you want to view and press the **M** Key to confirm.

The information of that date will be shown.

### Games

Your phone provides two games: Puzzle and Submarine War. See Help for game instructions.

### Software version

You can view the current software version of your phone in this menu.

## Input modes


Your phone provides several input modes for you to input data or text when using functions such as Search, Add, Edit Phonebook entries and Write SMS, etc.

### Switching Input Modes

When a text input screen is shown, if you want to change the input mode, press the **"IP"** Key to access the Input Modes menu and you can select the required input mode in the list.

- a) Numeric Mode (123)
- b) English Mode (En)
- c) Symbol Mode (Symbol)

The selected mode will be shown between the **M** and **C** Keys at the bottom of the screen.

You can also press and hold the  Key to switch between the input modes.

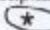 
- a) English Mode (En)
- b) Symbol Mode (Symbol)

### Numeric Mode

Select "123" in the Input Modes menu to switch to Numeric Mode. Press Number Keys (0-9) to enter the corresponding numbers.

### English Mode (En)

You can input English word by pressing the corresponding number keys. After inputting some letters, the associated words will appear in association successively. Press the up/down keys to select the next or forward word. Press the **M** key to select word which you need.

You can also input capital letters or small letters by press the  key.

### Symbol Mode (Symbol)

Symbols punctuation marks and other common signs such as empty space, "@", "\*", "#", "\$", "% and "&", etc. In Numeric and Alphabetic Modes, you can only enter English punctuation

is to select "Symbol" in the Input Modes menu, and the second is to press the **#** key briefly. However, when the number of characters entered reaches the maximum number permitted, you can no longer switch to the Symbol Mode.

After switching to Symbol Mode, a symbol candidate box will be shown in the display and a corresponding sequence number will appear above each symbol. Press the Up/Down Side Keys to scroll until the required symbol appears in the candidate box. Press the Number Key corresponding to the sequence number above the required symbol to enter it (or press the **M** Key to enter the first symbol in the candidate box). After entering a symbol, the phone will exit the Symbol Mode automatically and return to the previous input mode.

### Battery precautions

- The phone is powered by rechargeable battery. Charge the battery when power is weak. You will achieve optimum battery life by allowing the battery to fully discharge before recharging it.
- When the battery charger is not in use, disconnect it from its power source. Do not leave the battery connected to the charger for over a week. Over charging may shorten battery's life.
- Temperature extremes affect the ability of your battery to charge. It may require cooling or warming up first. If the battery temperature exceeds 40°C (104 F), it will not charge.
- Use the battery only for its intended purpose. Avoid battery short circuits. A short circuit the battery occurs when a metallic object makes a direct connection on the terminals (+ / -).
- Do not use a damaged battery.
- Do not leave the battery in extremely hot or cold places to avoid shortening battery life. A battery exposed to hot or cold temperature will prevent the phone from functioning properly, even when the battery is fully charged. Keep the battery in cool places, between 15°C to 25°C (50 F to 77 F).
- Recycle used batteries. Do not dispose of batteries in a fire! Dispose of batteries as required by local ordinances or regulations.



## Care and Maintenance


The following suggestions will help you take care of your phone.

- Keep the phone and all accessories out of children's reach.
- Keep the phone dry. Liquids contain minerals that can corrode electronic circuits.
- Keep the phone away from extreme temperatures. High temperatures can shorten the life of electronic devices, melt plastics, and damage batteries.
- Do not attempt to open the phone or take it apart. Non-expert handling may damage the phone.
- Do not use strong cleaning solvents to clean the phone.
- Use the battery type as specified in the instructions, or as provided by the manufacturer.

## Telephone spec

<b>Handset Weight:</b>	About 80g
<b>Dimensions:</b>	83 × 43 × 20mm
<b>Battery:</b>	Li-ion Battery
<b>Battery capacity :</b>	680mAh
<b>Standby Time :</b>	70 - 140 hours
<b>Talk time :</b>	1.5 - 3 hours
<b>Band:</b>	GSM 850/PCS1900MHz

---

 **warning:** The consequence caused by that the user does not observe above-mentioned suggestions or mistake to use the cell-phone, the producer does not shoulder any responsibility.

---

 **announce:** If involve the edition to upgrade, the producer will not issue a separate notice.

---