

Foreword

Thank you for choosing Bird mobile phone – you have made a wise choice, congratulations!

Our cellular phones are approved for GSM networks and meet stringent European standards. Your phone may be used internationally with various networks depending on your roaming arrangements with your service provider.

To use this phone you must subscribe to a GSM service from a provider. We have included many features in this device but their function depends on the features available with your subscribed wireless network.

Please contact your service provider for more information. This User Manual is published by the manufacturer without any warranty.

Revisions and improvements resulting from typographical errors, inaccuracy of current information, and improvements to the device or software may be done without any prior notification. Such changes will be incorporated into newer editions. More information and help on your phone may be available at the manufacturer's website. The manufacturer reserves all rights to the contents herein.

Copyrights and trade marks mentioned in this document remain with their respective owner. Reproduction, transfer, storage, or distribution in whole or in part of copyrighted materials without prior written permission is expressly prohibited.

We strongly recommend you carefully read and understand this manual before using your phone in order to keep it under best conditions for your effective usage and utmost satisfaction.

Environment

Recycling

To facilitate the recycling of packaging materials, please check the sorting area indicated locally for this type of waste.

Recycling

To facilitate the recycling of packaging materials, please check the sorting area indicated locally for this type of waste.

Knowing the Keys

Key	Description
	Left soft-key/Right soft-key: Implement the functions shown in the lower leftright hand corner.
	Call/Answer key (Green key): Make and pick up call. In idle mode, press this key to end the outgoing call or accept incoming call.
	On/Off, End/Cancel key (Red key): End call or reject the incoming call. Long press to switch ON or OFF the phone. In edit mode, press this key to exit the edit mode. In other interfaces to directly return to idle mode.
	Navigator keys: To move left, right, up or down the cursor or browse the menu. In idle mode, press or long press to enter the corresponding menu or functions.
	OK key: In idle mode to enter main menu. In general situation, it is identical with the left soft key.
	Alphanumeric keys: Be used to dial and input text in edit interface. Long press the [0] key to input international initial dial-up "+". Speed dial key: Edit 8 groups of speed dial numbers (corresponding numeric keys are [2]-[9]), long press the default speed dial key and then press the Call key could directly dial.
	* key# key: In idle mode, press the * key to input *, long press to activate or deactivate the forced silent mode. In idle mode, press the # key to input #, long press to lock or unlock the keypad.

Preparing your phone

Installing SIM card

- Keep SIM card out of children's touch.
- Any abrasion or folding could easily damage SIM card, so please be extremely careful when you insert, remove and preserve it.
- Please make sure that you have cut off the power supply and have taken out battery before you remove SIM card.

Find SIM card's groove in the back of the phone and slide it completely there. During installation, please make sure the chip is facing downwards. Do not touch the gold contacts and pay attention to slot direction.

Installing Battery

1. Align the battery with the metallic salient point in battery jar. Insert the battery until it is inserted into the battery jar.
2. Slide battery cover into back of the phone until it is locked. (Refer to the figure)

Removing Battery

Switch of the phone, lift the back cover at the bottom side of the phone to remove, then lift the battery at the bottom side to remove.

Security codes

PH code: This is the private identity code of your SIM card, and PIN is usually provided by the Operator Company.

PIN2 code: PIN2 code is provided by the Operator Company together with some SIM cards. If you enter the wrong PIN (The SIM card will be locked) and PIN2 code for successive three times, you need to enter PUK and PUK2 code to unlock. For further information please contact the network Operator Company.

PUK code: Change of locked PIN needs PUK, the private unlocking code. PUK and SIM card are provided together. Otherwise, please contact your service provider to obtain the code. If you lose this code, you should also contact your service provider.

Phone code: Phone code can prevent others to use your phone without authorization (original phone code is 1234). To protect the safety of your personal information, please timely modify the original phone lock code.

Using your Phone

Switching ON/OFF

1. Long press the **Red key** to switch ON your phone.
2. If SIM card is being protected by PIN, you have to enter the correct PIN code.
3. If the phone password has been activated, you have to enter the phone password to unlock your phone.
4. After switched ON, the phone will automatically search the network.

Network name and signal level will display in screen if the phone has searched the authorized network. Otherwise the phone could only use some non-communication function like emergency calls.

5. Long press the **Red key** to switch OFF your phone.

Making a call

1. In idle mode, press the numeric keys corresponding to enter the phone number, including the necessary country code and district number, long press the [0] key to input "P" which can dial a fixed extension number, press the Right soft key [Delete] to delete the wrong enter, press the **Green key** to make a call.
2. In idle mode, press the down navigator key or select Phonebook in the main menu to enter the phonebook contact list interface, find the contact you want, then press the **Green key** to dial.
3. In idle mode, press the **Green key** to enter the recent call records, find the record you want, then press the **Green key** to dial.
4. You can directly dial the emergency service number without SIM card. Different networks use different emergency service number, so for details please inquire the network Operator Company.

Receiving a call

When you receive a call, the number of your correspondent is displayed when it is presented by the network.
1. Press the **Green key**, and speak.
2. To refuse the call, press the **Red key**.
3. At the end of the conversation press the **Red key** to hang up.

Menu Structure

- 1. Games
- 2. Phone Book
 - Contacts list
 - View
 - Send SMS
 - Call MMS
 - Add New
 - Search
 - Edit
 - Memory Status
 - Copy
 - Change Group
 - Speed Dial
 - Filter Contact
 - Contacts Filtered
 - Manage Groups
 - Own Number
 - List Choice
 - Memory Status
- 3. Settings
 - Phone Settings
 - Time and Date
 - Language
 - Hotkeys Setting
 - Auto Keypad Lock
 - Input Methods
 - Ringtones Setting
 - Ringing
 - Converter
 - Incoming Call Alert
 - Incoming Message Alert
 - Low Alarm
 - Display Settings
 - Wallpaper
 - Desktop
 - Backlight
 - Contrast
 - Call Settings
 - Auto Redial
 - Call Waiting
 - Call Divert
 - Call Barring
 - HeadSet Answer
 - Minute Reminder
 - Anonymous
 - Network Settings
 - Auto. Select
 - Manual Select
 - Security Settings
 - PIN
 - PIN2
 - Phone Password
 - Restore Factory Settings
 - 4. Alarm
- 5. Message Center
 - SMS
 - New Message
 - Encrypted Messages
 - Sent
 - Drafts
 - Template
 - Settings
 - Cell Broadcast
 - Voice Mail
 - Memory Status
 - MMS
 - New Message
 - Inbox
 - Draft
 - Outbox
 - Sent
 - Settings
 - Templates
- 6. Call Records
 - (Call records list)
 - View
 - Sent SMS
 - Send MMS
 - Call
 - Save
 - Delete to Existing
 - Send Card
 - Delete
 - Delete all
 - Filter Contact
 - Call Timers
 - SMS Counters
 - Dialed
 - Received
 - Missed
 - Filtered
- 7. Extras
 - Tuner
 - My Planner
 - Calculator
 - Perpetual Calendar
 - Note Book
 - Stopwatch
 - Converter
 - World Times
 - Currency Converter
 - Height & Weight
 - Birthday
 - STK*
- 8. WAP
- 9. My Favorite

Phone Book

You can save names and phone numbers in the phone's memory and in the SIM card's memory. The phone's memory can save up to 250 numbers. The SIM's capacity depends on different SIM card.

Press the Down navigator key to access the phonebook in idle mode, enter the phonebook menu to access all lists of phonebook, including all records saved in the phone and in the SIM card. Press the **Green key** to dial the number and press the **Red key** to end dialing. Press the **OK key** to access the name and number details. Press the Left soft key [Options] to make the following operations:

- View: Display details of the currently recorded.
- Send SMS: Send a short message to the selected number.
- Send MMS: Send MMS to the selected number.
- Call: Display the calling interface and dial the currently selected phone number.
- Add New: This menu allows you to add the new record to the SIM card or the Phone.
- SIM: Select this option, press the **OK key** or press the Left soft key [Options] then select [Edit] to enter Name input interface, then input the corresponding name, press the Left soft key [OK] to confirm. Press the navigator to switch to number column, enter the phone number and confirm, finally press the Left soft key [Options] to select [Save], and adding records to the SIM card will be done.
- To Phone: The phone will add records to the phone are the same as that of the SIM card. But you can add group for adding records to the phone.
- Search: 1. In phonebook list interface, you can press corresponding numeric keys to quickly search including contactor records of which the name begins with this letter, number.
2. Select this option, you can search by entering full name of one character or even one letter.
3. Or directly press the Left soft key [OK] to enter phonebook list to view all phonebook list.

Edit: Modify the currently selected contactor record.
Send Card: Send selected record to the other via SMS.
Delete: Select [Current] option to delete the currently selected record, select [Custom] to delete several records in the phonebook list in the form of multiple choice list, or select [All] to delete all records in SIM card or/and phone memory.
Copy: Select [Current] option to copy this record to SIM card if it is saved in the phone and vice versa, select [Custom] to copy several records in phonebook in the form of multiple choice list, or select [All] to copy all records in SIM card/phone to the phone/SIM card memory.
Change Groups: Change incoming call group of the currently selected record.
Speed Dial: As a matter of convenience for user dialing, this phone provides set number function with 8 numbers at most. When you have set a phone number as set number, in the idle interface, press the numeric key "2-9" then the **Green key** to dial corresponding phone number.
Filter Contact: Add the current selected phone number to the contacts Filtered for reject this number's calls or messages. Press the **OK key** to select or cancel select, then press the Left soft key [Options] and select [Done] to confirm.
Contacts Filtered: Display list of rejected incoming calls or messages. You can add any record from phonebook, message or unsaved ones with 10 at most. When a phone number has been added to the Filter Call or Filter Message, it will be automatically rejected in any circumstance.
Manage Groups: Default groups in this phone are: SIM, Converter, Family, Friends, Colleagues and Classmate, and you can add or delete new groups.
Own Number: Display my number list. This phone numbers depend on the SIM card.
List Choice: This menu allows you to select the displaying mode of the phone book list: SIM, Phone or SIM/Phone.
Memory Status: View the memory status of the SIM card and phone's phonebook. The capacity of SIM card depends on different SIM card.

Settings

Phone Settings

- Time and Date:** Select the time and date.
- Time and Date Setting:** Directly press the numerical keys to key in the present date, or press the Up/Down navigator keys to select the present date. Follow the same procedure to set the present time.
- Format Setting:** Time format can be set as 12-hour or 24-hour. Date Format can be set as DD-MM-YYYY, MM-DD-YYYY or DD-MM-YY.
- Time Zone:** Select your current time zone.
- SMS Time Sync:** After set the own number in accurately, select this option to calibrate the system time by sending short messages.
- Language:** Select from languages provided in this phone.
- Hotkeys Setting:** Set hotkeys in idle mode of numeric keys, after setting, long press the numeric keys to enter corresponding functions you set.
- Auto Keypad Lock:** In this option you can set the time for opening or closing keypad lock. After setting the time for keypad lock, keypad will automatically lock in the idle mode when there is no operation within period of time. When keypad is locked, long press the # key to unlock it.
- Input Methods:** You can select inputting methods offered by the phone to set the inputting method for editing.

Ringtones Settings

In this option, you can: Select a ringtone as the alert ring for outgoing call and SMS. Adjust volumes of call alert, message alert, call, power On/Off, key alarm as well as vibrate grade. Select incoming call or SMS alert type. Activate or Deactivate the battery low alert.

Display Settings

- Wallpaper:** Set the wall paper displayed in idle mode.
- Desktop:** In this option you can choose whether to display operator name, date, time or not.
- Contrast:** Set the contrast ratio of the screen of the phone. Press the right/left navigator keys to select a proper grade.

Call Settings

- Auto Redial:** Switch on or off auto redialing function. When switched on, if the receiver does not answer in dialing, the phone will automatically redial the number. The maximum redial times are 10, and during this period, the subscriber cannot dial any other number. Press the Right soft key or the Red key to end auto redialing function.
- Call Waiting:** In this option you can activate, deactivate or check status. When it is activated, a second incoming call number and call waiting information will display in the screen when you are talking on the phone. If work permits, you can also activate functions like call holding and multistair calling.
- Call Divert:** This function allows you to divert incoming call to your voice box or another appointed phone number. This function needs network support, for details please contact the operation company.
- Call Barring:** To set call answering or dialing barring, you must apply to network supplier to open the international long distance function, obtain network barring code and set each barring function.
- HeadSet Answer:** Activate or deactivate this function. If it is activated and phone is in earphone mode, it will automatically answer incoming call after about 5 seconds.
- Minute Reminder:** Display my number list. This phone number will be displayed at the other side when making a call.
- Anonymous (requires network support):** Activate or deactivate this function. When it is activated, your phone number will not be displayed at the other side when making a call.

Network Settings

To set automatically or manually selecting network.

Security Settings

- PIN:** In this option you can activate or deactivate PIN, which require correct PIN code. When it is activated, you have to input PIN code every times when switching on your phone. You can change PIN when it is activated.
 - Tip: If you enter wrong PIN code for more than three times, SIM card would be locked, you need enter PUK code to unlock the SIM card, for details please contact the network operator company.
- PIN2:** PIN2 is provided by the network Operator Company, for details please contact the network Operator Company.
- Phone Password:** You can activate or deactivate the phone password which require correct phone password. When it is activated, you have to input the correct phone password every times after replace the SIM card. You can change phone password.
 - Tip: Default phone password is 1234, change it to your set password as soon as possible.

Restore Factory Settings

Restore the parameter setup of the phone to the original value after confirming.

Alarm

This phone can set two alarm clocks at most, which still work in phone switched Off status. Select an alarm clock and press the Left soft key [Edit] to enter its setting menu, press the Up/Down navigator keys to select from the following options, press the **OK key** or the Left soft key [Options] to select [Edit] to set:
1. Activate or deactivate the alarm by selecting [On] or [Off].
2. Edit alarm time by Up/Down navigator keys or numeric keys.
3. Set the alarm alert frequency as once or daily or weekly according requirement.
4. Choose one ring tone which can be [Vibrate] as alarm ring.
5. Edit alarm notification. Press the Left soft key [Options] to select [Save] and confirm saving. And you can also follow the same procedure to save the alarm settings after modifying.

BIRD

S160/S160a User Manual

Accessories

Use only batteries, chargers, and accessories approved by Bird with this device. Use of any other types will invalidate the warranty and may be dangerous. Check with your dealer for available accessories. You may opt to buy:

Extra Battery

Extra batteries of various capacities are available from our company or through your dealer.

Quick Charger

Light weight, practical quick chargers used to connect with the USB data cable for charging on wall outlets. Charging time is about 2 to 4 hours. The charging condition is displayed on screen. You may use your phone while charging.

Earphone

A mini, practical, hands-free device, you can use its button to send, receive and edit all kinds of messages, for details please contact the network Operator Company.

DO NOT plug or unplug the earphone when connecting dialed or incoming calls.

Understanding Display Icons

Icon	Description
	Network signal level: The more the straight stripes, the stronger the network signal is.
	GPRS network signal: The phone has been connected with GPRS network.
	New SMS icon: SMS unread in the inbox.
	Message full icon: When the inbox is full, this icon will be displayed and faded. You have to delete at least one message to receive the new one.
	New MMS icon: MMS unread in the inbox.
	Alarm clock: Alarm clock function has been set and activated.
	Call divert: Unconditional calls has been set and activated.
	Battery power: The fuller the fill, the more the battery electric mass is.
	Incoming Call Alert Types: Alert types of incoming call are: Ring, Vibrate, Silent, Vibrate then Ring, Vibrate & Ring, Ascending.

Call Records

The phone can register the phone numbers of received, dialed, missed and the approximate length of your calls. The phone registers these items only if the network supports these functions, and the phone is switched on within the network service area. 20 records of received, dialed and missed calls (including missed calls) are saved in the created MMS.

The phone will automatically cover the earliest record.

In the idle mode, press the **Green key** or select call records in the main menu to browse all call records. When call records is empty, screen displays empty, otherwise there are different icons before the different records, press the **Green key** to dial the selected record, press the **OK key** to display the record's call date, time, name and number, press the Left soft key [Options] to make the following operations: **View**, **Send SMS**, **Send MMS**, **Call**, **Save**, **Add to Existing**, **Send Card**, **Delete**, **Delete all**, **Filter Contact**, **Call Timers**, **SMS Counters**, **SMS Counters**, **Dialed/Received/Missed/Filtered**.

SMS Counters: View total number of sent and received SMS, the number displayed is different from inbox and outbox, it is convenient for user to view to display several messages in one interface in the inbox, and user should view the SMS content to check actual number of sent and received messages.

Dialed/Received/Missed/Filtered: Display dialed, received, missed, filtered calls list and be made of corresponding operations. For specific options and operations please refer to above instructions.

Perpetual Calendar

Select the calendar menu, and the screen will display the calendar of that month, with date of that day shown by a special color. Press the navigator keys to modify date and calendar in screen display will be correspondingly renewed.

Select a date and press the **OK key** to view the agenda of current day. Press the Left soft key [Options] to make the following operations: **View**, **Edit**, **Delete**, **Delete all**.

Calculator: The phone provides you a calculator with four basic functions, which facilitates simple calculations.

STK*: The accuracy rate of calculator is nine effective numbers, and calculations of over nine effective numbers will cause errors.

WAP

Internet surfing using the phone is based on Wireless Application Protocol (WAP). WAP translates the internet language into WML and HTML languages understandable by your phone. It requires only the phone and a WAP server support to surf the net. Your network will need to support this feature for you to surf the internet using your phone.

Your operator's homepage will be available once the WAP menu is accessed. Check with your service provider for detail on the web page.

You can visit or connected the WAP address by:
1. **Homepage:** Access the homepage.
2. **Bookmarks:** Manages sites or pages that you had bookmarked for easier access.
3. **Recent Pages:** Manages sites or pages that you had recently visited for easier access.
4. **Enter URL:** Input an address and access it.
5. **Push Box:** Access and manage your received web service messages and WAP PUSH messages according to operator ID for domestic users and those in part countries and regions, so they do not have to make parameter settings, but users in other regions need to get relevant parameters from their operators to make parameter settings.

Set submenu provides the current WAP service profile list. Different profiles can be selected in WAP setting. On left side of selected profile there is a box option. To set a new proxy, you can select an undefined one to edit.

World Times

Under this menu, you can look up current time and time zones of different cities in the world after selecting the time zone.

Currency Converter

Entering currency translation interface, enter exchange rate and confirm, and then enter conversion interface, in rate switch column, press the Left/Right navigator keys to switch proportion methods of current exchange rate, i.e. rate or reciprocal value of the current exchange rate. Press the Left soft key [Add] to add scheduling, and specific operation steps are as follows: Subject, Date, Time, Frequency, Alert, Memo.

Height & Weight

Select this option, you can press the navigator and number key to set the sex, height and weight respectively. After finished setting, press the **OK key** or the Left soft key [OK] to view the information of your avoirdupois, the result is reference only.

Bi rhythm

Under this function, you can look up the cyclic curve of intelligence, physical strength and spirit in different periods according to your birthday.

- My Bi rhythm:** Under this menu, the phone will display your biological clock curve and number of that day according to the set birthday, i.e., the joint picture of the curve of intelligence, physical strength and spirit and number. Press the Up/Down navigator keys or the **OK key**, and the screen will successively display: my biological clock and separate curve and number of intelligence, physical strength and spirit.
- Bi rhythm:** Default groups in this phone are: SIM, Converter, Family, Friends, Colleagues and Classmate, and you can add or delete new groups.

STK*: STK(SIM TOOL KIT) allows SIM based on smart card to run its own application. This phone supports value-adding service provided by STK and different network operators provide different types, so function table will display only when your SIM card supports it. Function table name and content depend on available service. For SIM card service's availability, price and information, please consult your network operator, service provider or other dealers.

Perpetual Calendar

Select the calendar menu, and the screen will display the calendar of that month, with date of that day shown by a special color. Press the navigator keys to modify date and calendar in screen display will be correspondingly renewed.

Select a date and press the **OK key** to view the agenda of current day. Press the Left soft key [Options] to make the following operations: **View**, **Edit**, **Delete**, **Delete all**.

Note Book

The notebook can only record text information. If there is no record, it will display "Empty", press the Left soft key [Options] to select [Add] and come to the editing interface of new record. If there is a record, it will display the record list, press the **OK key** to view the selected record, and press the Left soft key [Options] to make the operations of View, Edit, Add, Delete as well as Delete all.

Input Methods

This phone provides diversified input modes for you to enter character when editing SMS and adding phonebook. Input method type depends on your setting in [Settings/Phone Settings/Input Methods].

When editing the key controls:
Use the phone's numeric keypad to enter characters confirmation. The Right soft key: Press to clear one character, long press to clear all.
The Red key: Return to the idle interface.
Key to switch between book list input methods.
"F" key: In every input status, press this key to call out punctuation and symbol input frame (Long press to call out under the number input method).

Numeric input method
Press numeric keys 0-9 to input corresponding numbers.

Multipat abc(ABC) input Method
Each key is used to input several characters, fast and repeatedly press the key until your required character appears. Press the [0] key to input blank.

Smart English input method
Smart English input method is divided into majuscule and minuscule, i.e. just smart majuscule ABC and smart minuscule abc. The input method is simple and correct word, so it requires less time than traditional English input method.

Press the Left soft key or the right navigator to select word, press the [0] key to complete word confirmation and input blank, press the "*" key to switch capitalization.

Safety

Never attempt to disassemble your phone. You are alone responsible for how you use your phone and any accessories of its use. The phone is not a toy. Use it responsibly. As a general rule, always switch off your phone wherever the use of a phone is prohibited. Use your phone in a safe and secure place. The phone is subject to safety measures designed to protect users and their environment. Do not use your phone in damp areas (bathroom, swimming pool, ...) Protect it from liquids and other moisture. Do not expose your phone to extreme temperatures lower than -10°C and higher than +55°C. The physicochemical processes created by chargers impose temperature limits when charging the battery. Your phone automatically protects the batteries in extreme temperatures. Do not leave your phone within the reach of small children (certain removable parts may be accidentally ingested).

Electrical safety
Only use the chargers listed in the manufacturer's catalogue. Use any other charger may be dangerous, it would also invalidate your warranty. Line voltage must be exactly the one indicated on the charger's serial plate.

Aircraft safety
When traveling by plane, you will need to switch your phone off. Do not use your phone in aircraft or other restricted areas. Using a mobile phone may be dangerous to the operation of the aircraft and may disrupt the phone network. Its use is prohibited in aircraft and you could be prosecuted or banned from using cellular networks in the future if you do not abide by these regulations.

Explosive materials
Please comply with warning signs at petrol station asking you to switch your phone off.

You will need to comply with radio equipment usage restrictions in places such as chemical plants, fuel depots and at any location where blasting operations are under way.

FEDERAL COMMUNICATIONS COMMISSION INTERFERENCE STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference. This mobile device meets guidelines for exposure to radio waves. Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

CAUTION:
Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment. Body-worn operations are restricted to belt-clips, holsters or similar accessories that have no metallic component in the assembly and must provide at least 1.5 cm separation between the device and the user's body.

RF exposure warning:
The equipment complies with FCC RF exposure limits set forth for an uncontrolled environment. The equipment must not be co-located or operating in conjunction with any other antenna or transmitter. SAR Value: 0.940 W/kg

Message Center

Message service is a kind of network function which enables you to send, receive and edit all kinds of messages, for details please contact the network Operator Company.

SMS

- New Message**
Tip: To send message, you need to set the correct message service center number which can be obtained from the service provider.
Send: Directly send the created SMS.
Insert: Insert the below text to message.
Template: Select the templates prestored or customized in the phone.
Contact: Select the phone number from the phonebook that you want to send.
Save to Draft: Save the edit SMS to the draft.
Save to Template: Save the edit SMS as customized template.
Exit: Exit the edit SMS interface.
Send: Select the recipient editing interface, you can directly input the phone number or press the OK key to search in phonebook when the recipient list is empty. Press the Left soft key [Options] to send the message by following mode:
Contact: Select the contacts in phonebook and then confirm, the selected contact will appear in recipient screen.
Custom: Select one number or several contacts from the phonebook as recipients.
Enter: selecting interface of the number list, press the Up/Down navigator keys to move to your desired contacts and press the OK key to select or cancel this record ("v" will be displayed in the box before the selected record), if you select [Done], the selected contacts will be displayed in recipients screen.
Group: Send the SMS to all contacts in your named group.

- Reply SMS:** Directly reply SMS to the message sender.
- Reply MMS:** Directly reply MMS to the message sender.
- Return Call:** Directly call the number of SMS sender.
- Forward:** Forward the SMS to someone else.
- Delete:** Delete the current SMS.
- Extract Number:** Save sender's name or the number in the message.
- Filter Contact:** Add this message sender's phone number to contacts filtered for reject this number's calls or messages.
- New News:** View the next SMS.
- Encrypted Messages**
When encrypted message function is activated, the message whose sender is in encrypted list will be saved in this option, and you must read the message in this option.
To enter this option, you must enter the correct code. The default code is 1234. If you input wrong code, phone will display the alert "Empty" and return to encrypted message menu, but no any messages display and encrypted list is also empty; if you input correct code, you will view the encrypted messages list if this function is activated.
Settings: Set and save MMS service parameters.
Previous/Next Page: Go to the previous/next slide, available only when there are previous/succeeding slides.
Delete Page: Delete the current slide, available only after a slide was added.
After composing, press the Left soft key [Options] for the following options: **Send**, **Save**, **Add to Templates**, **Exit**.
- Inbox**
When you receive a message, a melody (defined in the menu Settings/Ringing Settings/Incoming Message Alert) rings and a message icon is displayed on the screen. You can press the Left soft key [View] to read the new message. Or you can press the Right soft key [Cancel] and the message will be stored to Inbox where you can read it later. A display icon will be displayed on top line of the screen indicating that there are unread messages in the Inbox.
Settings: Activate or deactivate background play. When the function is opened, otherwise all messages are treated as common messages.
Close Encrypted Message: Close encrypted message function and all messages are treated as common ones.
Sent
Save the message that has been selected to save and successfully sent.
Drafts
Saves the messages that have been edited or unsuccessfully sent.
Template
Display 15 templates, among which 1 to 10 cannot be edited, the other 5 can be edited by users themselves.
Settings
Store Sent SMS: You can set whether store sent SMS.
Acknowledgement: Switch On or Off. When it is On, system will send confirmation message after address has received SMS.
Validity: Set storage and sending time of the short message in service center.
Message Center Number: Set the service center number of the short message. This number can be obtained from the network operator. Please contact the network operator for more details.
Default Save: Set the default storage as SIM card or phone.
Cell Broadcast
Cell broadcast refers to public message sent by network operator and it needs the operator's support, for details please contact the network Operator Company.
MMS Options: Service, you could receive from network operator messages of various topics like weather, taxi and hospital. For usable topic message, please consult the local network operation company. Only in the idle interface, phone can receive the cell broadcast message.
Voice Mail
When you cannot answer incoming call, it will be automatically diverted to voice mail service number, then the caller could leave you a message and will be saved in voice mail system of service network, so you can visit voice mail system to listen to it. Realization of voice mail function requires network operator support, so you need to apply to open it. For details please contact the network Operator Company.
Memory Status
View the memory status of the short message in the SIM card and phone. The SIM capacity depends on different SIM card.

MMS

This service is supported from the network Operator Company and the GPRS function must be opened. For details please consult with the network Operator Company.

- New Message**
Pressing the Left soft key [Options] while composing the message for the following options:
Send: Directly send the created MMS.
You can press the Left soft key to set "To (recipient)", "Cc" (copy furnished), and "Bcc" (confidentially copy furnished) and "Sub" (insert a subject for the message).
Preview: Play and preview the MMS message.
Add/delete Image: Add/delete a picture or animation.
Add/delete Audio: Add/delete a sound, melody, music or ringtone save in the File manager.
Add Page: Insert or add a new page after the current slide.
Add/delete Attachment: Add/delete an attachment from file folders.
Settings: Set and save MMS service parameters.
Previous/Next Page: Go to the previous/next slide, available only when there are previous/succeeding slides.
Delete Page: Delete the current slide, available only after a slide was added.
After composing, press the Left soft key [Options] for the following options: **Send**, **Save**, **Add to Templates**, **Exit**.
- Inbox**
When you receive a message, a melody (defined in the menu Settings/Ringing Settings/Incoming Message Alert) rings and a message icon is displayed on the screen. You can press the Left soft key [View] to read the new message. Or you can press the Right soft key [Cancel] and the message will be stored to Inbox where you can read it later. A display icon will be displayed on top line of the screen indicating that there are unread messages in the Inbox.
Settings: Activate or deactivate background play. When the function is opened, otherwise all messages are treated as common messages.
Close Encrypted Message: Close encrypted message function and all messages are treated as common ones.
View: View the details of the message.
Download: Available if the message has not been downloaded.
- Forward:** Send the received message to another person.
Reply: Reply MMS to the sender.
Reply All: Write a reply to the sender and other recipients of the message.
Reply SMS: Reply SMS to the sender.
Delete: Delete the message.
Attributes: View the details of the messages such as the sender, Cc, Subject, Date, and Size.
Save contact: Call or save the sender's name or numbers within the message (over the 3 digits numbers will be extracted and displayed in a list).
Draft
Incompletely composed and saved messages can be organized and reset the channel list.
Outbox
Save the message that unsuccessfully sent.
Sent
Sent & saved messages can be stored and are accessed here.
Settings
Set and save MMS service parameters.
Profile: You can select any one of profiles to activate or edit.
MMS Options: Service, you could receive from network operator messages of various topics like weather, taxi and hospital. For usable topic message, please consult the local network operation company. Only in the idle interface, phone can receive the cell broadcast message.
Voice Mail
When you cannot answer incoming call, it will be automatically diverted to voice mail service number, then the caller could leave you a message and will be saved in voice mail system of service network, so you can visit voice mail system to listen to it. Realization of voice mail function requires network operator support, so you need to apply to open it. For details please contact the network Operator Company.
Memory Status
View the memory status of the short message in the SIM card and phone. The SIM capacity depends on different SIM card.

Call Records

The phone can register the phone numbers of received, dialed, missed and the approximate length of your calls. The phone registers these items only if the network supports these functions, and the phone is switched on within the network service area. 20 records of received, dialed and missed calls (including missed calls) are saved in the created MMS.

The phone will automatically cover the earliest record.

In the idle mode, press the **Green key** or select call records in the main menu to browse all call records. When call records is empty, screen displays empty, otherwise there are different icons before the different records, press the **Green key** to dial the selected record, press the **OK key** to display the record's call date, time, name and number, press the Left soft key [Options] to make the following operations: **View**, **Send SMS**, **Send MMS**, **Call**, **Save**, **Add to Existing**, **Send Card**, **Delete**, **Delete all**, **Filter Contact**, **Call Timers**, **SMS Counters**, **SMS Counters**, **Dialed/Received/Missed/Filtered**.

SMS Counters: View total number of sent and received SMS, the number displayed is different from inbox and outbox, it is convenient for user to view to display several messages in one interface in the inbox, and user should view the SMS content to check actual number of sent and received messages.

Dialed/Received/Missed/Filtered: Display dialed, received, missed, filtered calls list and be made of corresponding operations. For specific options and operations please refer to above instructions.

Perpetual Calendar

Select the calendar menu, and the screen will display the calendar of that month, with date of that day shown by a special color. Press the navigator keys to modify date and calendar in screen display will be correspondingly renewed.

Select a date and press the **OK key** to view the agenda of current day. Press the Left soft key [Options] to make the following operations: **View**, **Edit**, **Delete**, **Delete all**.

Note Book

The notebook can only record text information. If there is no record, it will display "Empty", press the Left soft key [Options] to select [Add] and come to the editing interface of new record. If there is a record, it will display the record list, press the **OK key** to view the selected record, and press the Left soft key [Options] to make the operations of View, Edit, Add, Delete as well as Delete all.

After editing above options, press the Left soft key [Options] to select [Save] to confirm saving.

- Tip:** phone obligates a certain amount of available memory for schedule. When phone gives alert that memory space is full, you have to delete some unwanted schedule records, press the Right soft key [Delete] to delete. Only when planned matter's alert isn't set as [Off], its ring tone setting is effective otherwise there is no alert.

When there is schedule, select one and press the Left soft key [Options] to make the following operations: **View**, **Add**, **Edit**, **Delete**, **Delete all**.

Calculator: The phone provides you a calculator with four basic functions, which facilitates simple calculations.

STK*: The accuracy rate of calculator is nine effective numbers, and calculations of over nine effective numbers will cause errors.

Perpetual Calendar

Select the calendar menu, and the screen will display the calendar of that month, with date of that day shown by a special color. Press the navigator keys to modify date and calendar in screen display will be correspondingly renewed.

Select a date and press the <