

## Table of Contents

<b>Table of Contents</b> .....	1	End a Call.....	15
<b>Foreword</b> .....	3	Lock the keypad.....	15
<b>Accessories</b> .....	4	Emergency Services.....	15
<b>Glimpse of Your Phone</b> .....	5	Call options.....	15
<b>Knowing the Keys</b> .....	6	Switch Off.....	16
<b>Understanding Display Icons</b> .....	8	<b>Menu Structure</b> .....	17
<b>Preparing Your Phone</b> .....	9	<b>SMS</b> .....	19
Installing SIM Card.....	9	New Messages.....	19
Installing Battery.....	9	Inbox.....	20
Removing Battery.....	10	Encrypted Message.....	22
Charging Battery.....	10	Sent.....	22
Security Codes.....	11	Drafts.....	23
<b>Using Your Phone</b> .....	13	Template.....	23
Switching ON.....	13	Settings.....	23
Making a Call.....	13	Cell Broadcast.....	24
Calling a number in the phonebook.....	14	Voice Mail.....	25
Call a number in the Call Records.....	14	Memory Status.....	25
Receive a Call.....	14	<b>Phone Book</b> .....	26
Rejecting a Call.....	15	<b>Games</b> .....	30
Adjust Volume.....	15	<b>Call Records</b> .....	31

## Foreword

Thank you for choosing Bird mobile phone – you have made a wise choice, congratulations!

Our cellular phones are approved for GSM networks and meet stringent European standards. Your phone may be used internationally with various networks depending on your roaming arrangements with your service provider.

To use this phone you must subscribe to a GSM service from a provider. We have included many features in this device but their function depends on the features available with your subscribed wireless network. Please contact your service provider for more information.

This User Manual is published by the manufacturer without any warranty. Revisions and improvements resulting from typographical errors, inaccuracy of current information, and improvements to the device or software may be done without any prior

notification, but will be incorporated into newer editions. More information and help on your phone may be available at the manufacturer's website. The manufacturer reserves all rights to the contents herein. Copyrights and trade marks mentioned in this document remain with their respective owner. Reproduction, transfer, storage, or distribution in whole or in part of copyrighted materials without prior written permission is expressly prohibited.

We strongly recommend you carefully read and understand this manual before using your phone in order to keep it under best conditions for your effective usage and utmost satisfaction.

<b>Alarm</b> .....	34	STK*.....	46
<b>Settings</b> .....	35	<b>Input Methods</b> .....	47
Phone Settings.....	35	The Numeric Input Method(123).....	47
Ringtone Settings.....	36	The Alphabetic input Method(abc/ABC).....	47
Display Settings.....	36	The Predictive English Input(eng/Eng/ENG).....	48
Call Settings.....	37	<b>Technical Specifications</b> .....	49
Network Settings.....	39	<b>SAR</b> .....	50
Security Settings.....	39	<b>Safety</b> .....	51
Restore Factory Settings.....	40	<b>Caring for Battery</b> .....	53
<b>My Planner</b> .....	41	<b>Environment</b> .....	54
<b>Extras</b> .....	42		
Tuner.....	42		
Calculator.....	42		
Perpetual Calendar.....	43		
Note Book.....	43		
Stopwatch.....	44		
Converter.....	44		
World Times.....	44		
Currency Converter.....	45		
Height & Weight.....	45		
Biorhythm.....	45		
Handset Data.....	46		

## Accessories

Use only batteries, chargers, and accessories approved by Bird with this device. Use of any other types will invalidate the warranty and may be dangerous. Check with your dealer for available accessories. You may opt to buy:

DO NOT plug or unplug the earphone when connecting dialed or incoming calls.

### Extra Battery

Extra batteries of various capacities are available from our company or through your dealer.

### Quick Charger

Light weight, practical quick chargers used to charge on wall outlets. Charging time is about 2 to 4 hours. The charging condition is displayed on screen. You may use your phone while charging.

### Earphone

A mini, practical, hands-free device; you can use its button to answer and end calls. Some models may also come with a volume control knob.

### Glimpse of Your Phone

(The pictures below are for reference only)



Glimpse of Your Phone 5 **UIRD**

Key	Description	Key	Description
	<b>OK key</b> Press the key in idle interface to enter menu function. In general situation, it is identical with the confirmation key.		<b>* key</b> In idle interface, press the key to type *, long press the key to activate/deactivate forced silent mode. In edit interface, press the key to switch capitalization for English input method.
	<b>Alphanumeric keys</b> Be used to dial and input text in edit interface. When you are dialing an international call, long press the [0] key to input international initial dial-up "+". Speed dial key: edit 8 groups of speed dial numbers (corresponding numeric keys are [2]-[9]), press the default speed dial key and then press the call key could directly dial.		<b># keys</b> In idle interface, press the key to type #, long press the key to lock or unlock the keypad. In edit interface, press the key can switch input methods.

Knowing the Keys 7 **UIRD**

### Knowing the Keys

Key	Description	Key	Description
	<b>Left soft-key/Right soft-key</b> This key implements functions shown in the lower left/right hand corner. In idle mode, press the left soft key to enter menu interface, and right soft key to enter SMS.		<b>Navigator keys</b> Left/Right navigator: The cursor will move leftwards or rightwards when editing. Up/Down navigator: Browse name, phone number, SMS and each submenu option one by one. The cursor will move upwards and downwards when editing. In idle interface, press up navigator to enter search function of the phonebook, press left navigator to enter Inbox list interface, press down navigator to enter phonebook contacts list interface, press right navigator to enter Ringtone settings menu interface.
	<b>Call/Answer key</b> Make and pick up call. In idle mode, press this key to display your recent call records.		
	<b>On/Off, Eng/Cancel key</b> End call or reject incoming call. Long press the key to switch on or off phone. In edit interface, press the key to exit the edit interface. Press the key in other interfaces to directly return to idle mode.		

**UIRD** 6 Knowing the Keys

### Understanding Display Icons

Icon	Description	Icon	Description
	<b>Network signal level</b> The more the straight stripes, the stronger the network signal is.		<b>Incoming call alert types</b> Alert types of incoming call are: Ring, Vibrate, Silent, Vibrate then Ring, Vibrate & Ring, Ascending.
	<b>New SMS icon</b> SMS unread in the inbox.		
	<b>Message full icon</b> When the inbox is full, this icon will display and flash, you can receive new message only when you delete at least one message.		
	<b>Alarm clock</b> Alarm clock function has been set and activated.		
	<b>Battery power</b> The fuller the fill, the more the battery electric mass is.		

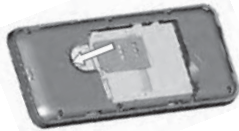 
**UIRD** 8 Understanding Display Icons

## Preparing your phone

### Install SIM card

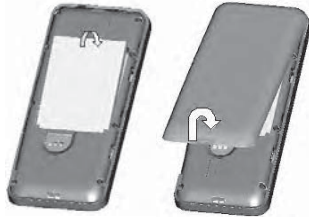
- ❖ Keep SIM card out of children's touch.
- ❖ Any abrasion or folding could easily damage SIM card, so please be extremely careful when you insert, remove and preserve it.
- ❖ Please make sure that you have cut off the power supply and have taken out battery before you remove SIM card.

Find SIM card's groove in the back of phone and slide it completely there. During installation, please make sure that the chip is facing downwards and pay attention to slot direction.



### Install Battery

1. Align the battery chip with the metallic salient point in battery jar, insert the battery and press top of the battery downwards as per the arrow direction until it is inserted into the battery jar.
2. Slide battery cover into back of the phone until it is locked. (Refer to the figure)



Preparing your phone 9 **LRD**

### Remove Battery

First switch off the phone and make it face downwards, Slide the back cover toward the bottom of the phone until it can be removed, then push toward the top of the phone and lift the battery at the center of the bottom side to remove.



- ❖ All settings or information stored in SIM card and the phone may be lost when the battery is removed.
- ❖ Please remove the battery when the phone is switched off, because it may suffer from abnormality if you remove the battery when it is switched on.

### Charge Battery

Unclose dustproof soft gum of attachment mode on right side of the phone, insert one end of the charger, i.e., the charging plug into attachment mode and the other end into electrical outlet. If the phone is switched on and the battery power icon stripes in right hand of the screen are rolling, then it is charging. If the stripes are full and have stopped rolling, it is fully charged. If the phone is switched off when charging, the information of the charging will display in screen. After charging is finished, just pull out the plug.

**LRD** 10 Preparing your phone



- ❖ Do not directly remove the battery panel when charging.
- ❖ The phone must be put in a ventilated place with the ambient temperature of 0°C ~ 45°C when charging.

### Security codes

#### -PIN code

This is the private identity code of your SIM card, and PIN is usually provided by the Operation Company together with SIM card. If you enter the wrong PIN for successive three times, the SIM card will be locked and you need to enter PUK code to unlock. For further information please contact the operation company to unlock it.

#### -PIN2 code

PIN2 code is provided together with some SIM cards. This number provided by Operation Company is for inputting some functions (such as charge unit, FDN and etc). If you enter the wrong PIN2 for successive three times, you also need to enter PUK2

- ❖ When the battery current is low, the phone will give warning alert, and when it is too low, the phone will automatically switch off. Do not keep the battery current low for a long time, otherwise the battery quality and life could be damaged.
- ❖ A pre-charge will occur when the battery voltage is too low, so it is normal that the phone may not give charging alert.
- ❖ To guarantee the phone's normal work, please use the designated charger.

Preparing your phone 11 **LRD**

code for unlocking. For further information please contact network operation company.

#### -PUK code

Change of locked PIN needs PUK, the private unlocking code. PUK and SIM card are provided together. Otherwise, please contact your service provider to obtain the code. If you lose this code, you should also contact your service provider.




#### -Phone lock code

Phone lock code can prevent others to use your phone without authorization (original phone lock code is 1234). To protect the safety of your personal information, please timely modify the original phone lock code.

**LRD** 12 Preparing your phone

## Using your phone

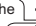 

### Switching On

1. Long press the  key to switch on your phone, the backlight will be turned on and a switch-on animation will be displayed in screen.
2. The screen will display a warning interface if SIM card has not been installed or has bad contact. Long press the  key to switch off, please install SIM card again and make sure it is correctly installed.
3. If SIM card is being protected by PIN, you have to enter the correct PIN, then press the  key to confirm it.
4. If SIM card is locked, you need to enter PUK.
5. If the phone lock code has been set, you have to enter the code to unlock your phone.
6. After switched on, the phone will automatically search the network.

◇ Network name and signal level will display in screen if the phone has searched the authorized network. Otherwise the phone could only use some non-communication function like emergency calls.


### Making a call

#### -Making a domestic call

In the idle interface, press the numeric keys corresponding to enter the phone number that you want to dial, including the necessary district number, press the  key to delete wrong enter; press the  key to make a call, then a dialing animation will display in screen, when the other side answers call status information will display in the screen.

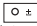 
**-Making a call to a fixed extension set**  
some fixed extension sets can not be directly dialed through, you have to dial the

Using your phone 13 

switchboard first, long press the  key until "P" displays in screen, then you can dial the extension number.

Dial the fixed extension set on the following sequence:  
District number - Switchboard number - P - extension number - Dial key


#### -Making an international call

To make an international call, long press the  key until the prefix symbol "+" of international call display in screen, which enables you to call the phone number from any country when you do not know the local prefix symbol (for example, it is 00 in china). Make an international call on the following sequence:



+ - country code - whole telephone number - Dial key

After entering the prefix number, you need to enter the district number and whole telephone number. Status district number are in accordance with conventional ones. Just like the dialing of international call, "0" before the city district number should be deleted.

### Calling a number in the Phonebook

Directly press the down navigator in the idle interface, or select Phonebook in the main menu to enter the phonebook contacts list interface, press the up/down navigator to find the contact that you want to dial, then directly press the  key to make a call.



### Calling a number in the Call Records

All dialed calls, answered calls and missed calls are saved in each menu under the phone's call records according to their different type. When the records is full, former records will be automatically deleted. Press the  key in the idle interface then you can directly view recent call records. For the records display in the call record list, you can press the  key to directly dial.



### Receiving a call

When there is an incoming call, the phone will give corresponding alert (such as vibration, ring and so on). If the network supports, the phone screen can even

 14 Using your phone

display the caller's name or number (depending on whether there is information about the caller in your phonebook), you can press the  key or the  key to answer the call.



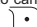 

### Rejecting a call

If you do not want to answer an incoming call, press the  key or the  key to reject it.


### Adjust volume

You can adjust the volume by the settings function, and also you can press the up/down navigator to adjust volume during calling.

### End a call

You can press the  key or the  key to end a call. If you want to cancel a dialed call you can also press the  key or the  key.


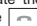 
### Lock the keypads


In the idle interface, and the backlight is turn on, long press the  key can lock or unlock the keypads.

### Emergency service

You can directly dial the emergency service number without SIM card. Different networks use different urgency service number, so for details please inquire the network operation company.

### Call options

During call, long press the  key to select H-Free can activate the sound amplification and long press the  key again to close.

Press the  [Option] key to enter call option which can be only seen during call.

Functions like call waiting, call hold, multilateral conference need network support, and for details please contact the network operation company.

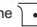 
In call options you can make the following operations:

Using your phone 15 

- **Phone Book**: Enter the phonebook browse status.
- **SMS**: Enter SMS editing interface.
- **Hold/Unhold**: To hold the active call or resume a held call.
- **Hands-free**: to activate or deactivate the loudspeaker for hands-free function.
- **Mute/Mute OFF**: Mute local voice can not be sent when activate the mute function.
- **Build MPTY**: Enter the multilateral conference call status.
- **Release All**: End all calls.

### Switch Off

Long press the  key to switch off your phone.

◇ During the multilateral conference call status, press the  [Switch] key could swap between the held call and the active call.

◇ Menu options labeled with \* could display only under specific circumstances, such as "Release All" will display only in the coexistence of call and call suspension.

◇ As for activation of the conference function, you need to apply to corresponding network operator.

 16 Using your phone

## Menu Structure

### 1. Messages

- New Message
- Inbox
- Encrypted Messages
- Sent
- Drafts
- Template
- Settings
  - Store Sent SMS
  - Acknowledgement
  - Validity
  - Message Center Number
  - Default Save
- Cell Broadcast
- Voice Mail
- Memory Status

### 2. Phone Book

- (Phone Book List)
  - View
  - Send Message
  - Call
  - Add New
  - Search
  - Edit
  - Send Card
  - Delete
  - Copy
  - Change Group
  - Speed Dial
  - Filter Contact
  - Contacts Filtered
  - Manage Groups
  - Own Number
  - List Choice
  - Memory Status

### 3. Games

#### 4. Call Records

- (Call records List)
  - View
  - Send Message
  - Call
  - Save
  - Add to Existing
  - Send Card
  - Delete
  - Delete All
  - Filter Contact
  - Call Timers
  - SMS Counters
  - Dialed
  - Received
  - Missed
  - Filtered


Menu Structure 17 

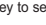 
## SMS

Message service is a network dependent function, which allows you to send, receive and edit all kinds of messages. Please contact the network operator for more details.


### New Message

**Note:** to send SMS, you need to set the correct SMS service center number which can be obtained from network provider.

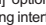 
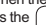 
In standby mode, press the  [Menu] key to access the main menu. Select [SMS/New Message] to access the editing interface.

Press the  [Options] key to select options when editing:

- **Send:** directly send the created message.
- **Insert:** insert the below text to message.
- **Template:** select the templates pre-stored or customized in the phone. Press the Up/Down navigator key to select the templates and confirm to insert.
- **Contact:** Select the phone number from the

phone book that you want to insert, then press the  key to confirm, the selected contact name and number will be inserted in SMS.

- **Save to Draft:** save the created message in the draft box.
- **Save to Template:** save the created message as customized template.
- **Exit:** exit the edit interface.

Select [Send] option and confirm, enter the recipient editing interface. You can directly input phone number or press the  key to search in phonebook when the recipient list is empty. You can also press the  [Options] key to send the message by following mode:

- **Contact:** search the contacts in phonebook and then confirm, the selected contact will display in recipients screen.
- **Custom:** select one number or several contacts from the phone book as recipients. Enter selecting interface of the number list, press the Up/Down navigator key to move to

SMS 19 

### 4. Alarm

### 5. Settings

- Phone Settings
  - Time and Date
  - Language
  - Hotkeys Setting
  - Auto Keypad Lock
  - Input Methods
- Ringtone Settings
  - Ringtone
  - Volume
  - Incoming Call Alert
  - Incoming Message Alert
  - Battery Low Alert
- Display Settings
  - Wallpaper
  - Desktop
  - Backlight
  - Contrast
- Call Settings
  - Auto Redial


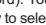 
- Call Waiting
- Call Divert
- Call Barring
- Earphone Auto Answer
- Minute Reminder
- Anonymous
- Network Settings
  - Auto. Select
  - Manual Select
- Security Settings
  - PIN
  - PIN2
  - Phone Password
- Restore Factory Settings

### 6. My planner

### 7. Extras

- Tuner
- Calculator
- Perpetual Calendar
- Note Book
- Stopwatch
- Converter
- World Times
- Currency Converter
- Height & Weight
- Biorhythm
- Handset Data
- STK\*



 18 Menu Structure


your desired contacts and press the  key to select or cancel this record ("v" displays in the box before selected record). You can also press the  [Options] key to select [Select/Cancel, Select All, Reverse] or [Cancel All], if you select [Done], the selected contacts will display in recipients screen.

- **Group:** send the SMS to all contacts in your named group.
  - **Edit Content:** back to text edit interface to compose the SMS again.
- If [Settings/Store Sent SMS] is [On] or [Query], but select [Yes] when sending, the sent successfully SMS will be saved to Sent; otherwise the SMS will not be saved. Sent unsuccessfully SMS will be saved to draft, you can edit and send again.

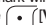 
### Inbox

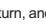 
All read and unread SMS will be saved in this option.

-  Indicates unread SMS in SIM card
-  Indicates read SMS in SIM card

 Indicates read SMS in phone

 Indicates unread SMS in phone

When you have received a message, after tones or vibration (as defined in the menu [Ringtone Settings/Incoming Message Alert]) can alert you with the indication of "New message, read?", and message mark will also be shown on the screen. Press the  [View] key to read the new message.

Press the  [Cancel] key to return, and you can access the inbox to read the new message.

**Note:** If the message sender is in encrypted list, and encrypted message function is activated, you must enter [Encrypted Message] to read the SMS.

If the message memory is full, the indication "Memory full" and the blinking message icon (message memory full) will be shown on the screen. Before you can receive new messages, delete some of your old messages in the inbox folder. If the capacity of new messages is beyond the capacity of the inbox,

 20 SMS

the information will be lost and incomplete.

Press the [Options] key in message list to make the following menu:

- **Read:** read the current selected message.
- **Reply SMS:** directly reply SMS to the message sender. You can send a SMS as empty screen or with original message attached. The edit procedure as same as in [New Message].

- **Search:** search required SMS by name, by number, by content or by date.

- **Delete:** delete the messages.

- **Current:** delete current selected message.

**Read:** delete all the read messages.

**Custom:** list all messages in the inbox for you to choose. Press the Up/Down navigator key to select one message and press the [Enter] key to select or cancel this message ("v" displays in the box before selected message). You can also press the [Options] key to select [Select/Cancel, Select All, Reverse] or [Cancel All], if you select [Done], the selected message will be delete.

**All:** delete all messages in inbox.

In message list interface, press the [Enter] key to directly read the selected message, and then press the [Options] key to do following operations after reading the SMS:

- **Reply SMS:** directly reply SMS to the message sender.

- **Return Call:** directly dial the number of SMS sender.

- **Forward:** forward the message to someone else. The phone will display this information when "forward" function is selected.

Subscribers can revise or add something and then send to someone else. The operation is the same as editing short messages.

- **Delete:** delete the current SMS.

- **Extract Number:** save sender's number or the number in the message. You can choose to save the number in the phone or the SIM card.

- **Filter Contact:** Add this message sender's phone number to Contacts Filtered for reject this number's calls or messages.

Press the [Enter] key to select or cancel, then press the [Options] key and select

SMS 21 

[Done] to confirm.

- **View Next:** view the next SMS.

#### Encrypted Messages

When encrypted message function is activated, the message whose sender is in encrypted list will be saved in this option, and you must read the message in this option.

To enter this option, you must enter the correct code. The default code is 1234. If you input wrong code, phone will display the alert "Empty" and return to encrypted message menu, but no any messages display and encrypted list is also empty; if you input correct code, you will view the encrypted messages list if this function is activated.

Press the [Enter] key to read selected message; press the [Options] key to make [Read, Reply SMS, Search, Delete] operations, which refer to [Inbox]. Besides you can also make the following operations:

- **Change Encrypted Code:** used to update code for encrypted messages. You have to correctly enter the old password before

entering the new one. For protection of your safety, the new password must be entered and confirmed for 2 times.

- **Encrypted List:** the list saves encrypted messages' phone number, and messages from the numbers are directly saved as encrypted ones to prevent others from viewing. You can select options to add, edit and delete encrypted numbers.

- **Open Encrypted Message:** encrypted message are valid only when the function is opened; otherwise all messages are treated as common ones.

- **Close Encrypted Message:** close encrypted message function and all messages are treated as common ones.

If encrypted message is deactivated, you only can make [Change Encrypted Code, Encrypted List, Open Encrypted Message] operations.

#### Sent

Save the message that has been selected to save and successfully sent.

 22 SMS

In sent message list, press the [Options] key to make operations of [Read, Forward, Search, Delete].

Press the [Enter] key to read the selected message and then press the [Options] key to do the following operations:

- **Forward:** forward the message to the others.
- **Delete:** delete this message.

#### Drafts

Saves the messages that have been edited or unsuccessfully sent.

Press the [Options] key in Draft message list to spring the menu. See inbox for specific operations.

Press the [Enter] key to read the selected message and then press the [Options] key to do the following operations:

- **Send:** send the message again. The recipient can be edited.

- **Edit:** edit this message, and the operation is the same as forwarding message of the inbox.

- **Delete:** delete this message.

#### Template

Display 15 templates, among which 1 to 10 cannot be edited, while 11 to 15 can be edited by users themselves. Scroll by the up/down navigator key. Press the [Options] key to access the following menu: [Read, Send, and Edit] (Only be available for No.11-15 templates).

#### Settings

##### - Store Sent SMS

You can set whether store sent SMS.

- **On:** the sent SMS will be saved always.

- **Query:** you must choose whether save the SMS when sending, if you select "Yes", the SMS will be saved, otherwise the SMS will not be saved.

- **Off:** the sent SMS will not be saved always.

##### - Acknowledgement

Switch On or Off. When it is on, system will send confirmation message after address has received SMS.

SMS 23 

#### - Validity

Set storage and sending time of the short message in service center. You can choose 1 hour, 12 hours, 24 hours, 1 week, 1month, 3 months or maximum which is determined by MMS centre.

#### - Message Center Number

Set the service center number of the short message. This number can be obtained from the network operator. Please contact the network operator for more details.

#### - Default Save

You can set the default SMS storage location as SIM card or phone. If you select SIM card, new incoming message will be saved to SIM card automatically. SMS will be saved to phone until the SIM card memory is full.

#### Cell Broadcast

Cell broadcast message is public information offered by the network operator, which needs to be supported by the network operator company. For more details, please contact the network operator company. You can get

all kinds of information from the network operator company, such as weather forecast, traffic news or local taxi information. For more information, please consult the local network provider.

You can receive cell broadcast information only in standby interface.

Enter the sub-menu of cell broadcast, and you can see three menu options:

#### - Info Desk

Switch on or off the function.

#### - Channels

You can add new cell broadcast channel and set up the name and number of the channels; or switch on or off the cell broadcast to be chosen from so as not to receive unnecessary cell broadcast; select to reset the present channel; select to delete chosen channels.

#### - Language

You can select the language of the cell broadcast, with 10 at most and one at least. Or you can select all languages.

 24 SMS

### Voice Mail

When you cannot answer calls, the incoming call will be diverted to the service number of voice mailbox, which allows you to listen to the caller's message saved in the voice mailbox system of service network. You will receive a voice mail. And you can visit the voice mailbox to access the message.

The voice mailbox is available only if it is supported by the network operator. You may need to apply for opening this service.

For more details, please contact the network operator.

### Memory Status


View the memory status of the short message in the SIM card and phone.

The SIM capacity depends on different SIM card.

SMS 25 

### Phone Book

You can save names and phone numbers in the phone's memory and in the SIM card's memory. The phone's memory can save up to 250 numbers. The capacity depends on different SIM card.

Press the Down navigator key to access the phone book in standby mode. Or press  to access the [Phone Book] menu. Enter the phone book menu to access all lists of phone book, including all records saved in the phone and the SIM card.




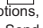 
There are different icons before different records indicating its memory location.


 SIM Memory

 Phone Memory

In phone book list interface, you can press the corresponding numeric keys to search, including the name record starting with letters or letter and numerals. For example, if you want to search for the name starts with "L", press the [5] key third to input the character

"L", the phone will automatically find the names starting with "L".

After searching for the name, press the  key to dial the number and press the  key to end dialing. Press the  key to access the name and number details; Press the  [Options] key to access the menu options, including Send Message, Call, Edit, Send Card, Delete, Copy, Change Group, Filter Contact. (The operation of this menu is similar to that of option menu of phone book list.)

In phone book list interface, press the  [Options] key to access the options and do the following operations:

#### - View

Display details of currently recorded.

#### - Send Message

Send short messages to this number.

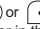 
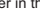 
#### - Call

Display the calling interface and dial the currently selected phone number.


 
 
 26 Phone Book

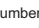 
### - Add New

This menu allow you to add the new record to the SIM card or the Phone.

Enter the phone number directly in standby mode, then press the  or  [Save] key to save the phone number in the SIM card or the Phone.

Enter [Add New] menu, first you need to select storage: To SIM card or To Phone.


• **To SIM** : Select this option, press the  key or press the  [Options] key then select [Edit] to enter Name input interface, then input the corresponding name, press the  [OK] key to confirm.

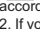 
Press the navigator to switch to number column, enter the phone number and confirm, finally press the  [Options] key to select [Save], and adding records to the SIM card will be done.

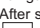 

• **To Phone**: The steps for adding records to the phone are the same as that of the SIM card. But you can add group for adding records to the phone.

### - Search

Entering name interface, you have two ways to search for required contactor record:

1. You can search by entering full name or one character or even one letter, press the  [OK] key and a list of all contactors who accord with searching requirements displays.

2. If you are not sure about the name that you want to search, directly press the  [OK] key to enter phonebook list. Press Up/Down navigator key to view contactor records.

After searching required contactor, press the  key to dial the phone number, and press the  [Options] key to enter menu which has similar operations with the option menu of phonebook list.

#### - Edit

Modify the currently selected contactor record.


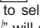 
#### - Send Card

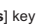 
Send selected contactor record to the other via SMS.

#### - Delete

• **Current**: Delete the currently selected record.

Phone Book 27 

• **Custom**: Selecting this option to display phonebook record list, you can select several records, press the  or  [Options] key to select [Select/Cancel] to select or cancel the current record, then "√" will display in the box before selected record.

You can also press the  [Options] key to select [Select All, Reverse] or [Cancel All], if you select [Done] and confirm to delete the selected records.

• **All**: Delete all records in SIM card or/and phone memory.

#### - Copy

• **Current**: Copy this record to SIM card if it is saved in phone and vice versa.

• **Custom**: Select several records in phone book list to copy in the form of multiple-choice list.


• **All**: Select [SIM to Phone] and copy all records in SIM card to the phone memory. Select [Phone to SIM] and copy all records in the phone memory to SIM card.


#### - Change Groups

Change incoming call group of the currently

selected record. Default Incoming call groups include: SIM, Ungrouped, Family, Friends, Colleagues, Classmates.

#### - Speed Dial

As a matter of convenience for user dialing, this phone provides set number function with 8 numbers at most. When you have set a phone number as set number, in standby press numeric key "2~9" then the  key to dial corresponding phone numbers.

Entering set number menu, you can see the set number list which shows numeric key's corresponding phone record name and "Empty" for those which have not been set. Select a numeric key and press the  [Options] key to make the following operations:

• **View**: No this option when this numeric key has no corresponding phone number.

Select this option and confirm to view the details of the currently edited phone number.

• **Edit**: set this numeric key's corresponding phone number.

• **Delete**: No this option when this numeric



 28 Phone Book



key has no corresponding phone number. Select this option and confirm to delete the currently edited phone number.

#### - Filter Contact

Add the current selected phone number to Contacts Filtered for reject this number's calls or messages.

Press the  key to select or cancel select, then press the  [Options] key and select [Done] to confirm.

#### - Contacts Filtered

Display list of rejected incoming calls or messages. You can add any record from phonebook, message or unsaved ones with 10 at most. When a phone number has been added to the Filter Call or Filter Message, it will be automatically rejected in any circumstance.

#### - Manage Groups


Default groups in this phone are: ungrouped, SIM, Family, Friends, Colleagues and Classmates, and you can add or delete new groups. Selecting a group, you can rename

it, view, add or delete its members and set group ring tone.

**Note:** default group can not be rename and delete in the phone.

#### - Own Number

Display my number list. This phone numbers depend on the SIM card.

Press the  [Options] key to make the following operations: View, Edit and Delete.

#### - List Choice

This menu allow you to select the displaying mode of the phone book list: SIM, Phone or SIM&Phone.

#### - Memory Status

View the service condition of the SIM card and phone's phone book.



The capacity of SIM card depends on different SIM card.

## Games


The phone provides several classic games. For specific operations, please refer to the directions of each game.


## Call Records

The phone can register the phone numbers of received, dialed, missed calls and the approximate length of your calls. The phone registers these items only if the network supports these functions, and the phone is switched on within the network service area. 20 records of received, dialed and missed calls can be saved at most respectively. The phone will automatically cover the earliest record.

You can press the  key to browse all call records in standby mode, or press the  [Ok] key to access [Call Records] menu and look up the assorted list of call records.

 
There are different small icons before different records.




 indicates received call


 indicates dialed call

 indicates missed call

 indicates Filtered call

If the call register is empty, display "Empty", otherwise display the all call list. Press the  to call the selected number on all call list interface.

Press the  key to view details such as name, number, calling time and call duration. Press the  key on details interface to directly call the number; press the  [Options] key to access the option menu, including Send Message, Call, Save, Add to Existing, Send Card, Delete. (The operation of this menu is similar to that of option menu of all call list.)

Press the  [Options] key to access the option and do the following operations in all call list:

#### - View

Display the details of the selected record.

#### - Send Message

You can send message to the number of this record.

#### - Call

Display the calling interface and dial the currently selected phone number.

#### - Save

Add this call record phone number to phonebook.


#### - Add to Existing

Add this phone number to existent contactor name.


#### - Send Card

Enter the phonebook list, select one vCard and send its name as well as phone number to this this phone number by SMS.

#### - Delete

Delete this call record. When the screen show whether to delete or not, press the  [Yes] key for confirmation to delete the record.



#### - Delete All

Delete all call records. When the screen show whether to delete or not, press the  [Yes] key for confirmation to delete all records.

#### - Filter Contact

Add the current selected record to Contacts

Filtered for reject this number's calls or messages.

Press the  key to select or cancel select, then press the  [Options] key and select [Done] to confirm.

#### - Call Timers

Enter call duration menu to view the following ones:

• **Last Call:** display the latest call duration.

• **Received:** display the sum of dialed call durations since your last record erasion.

• **Dialed:** display the sum of answered call durations since your last record erasion.

• **All Calls:** display the sum of all call durations since your last record erasion.

• **Reset:** erase all call durations.

#### - SMS Counters

View number of sent and received SMS. One SMS can hold no more than 70 characters, so when it holds 268, it contains 4 pieces of SMS and number displayed by SMS counter is different from those of inbox and outbox. It is convenient for user to view to display several messages in one interface in the



inbox, and user should view the SMS counter to check actual number of sent and received messages.

**- Dialed**

Display only dialed call list and be made of corresponding operations.

For specific options and operations please refer to above instructions.

**- Received**

Display only answered call list and be made of corresponding operations.

For specific options and operations please refer to above instructions.

**- Missed**

Display only missed call list and be made of corresponding operations.

For specific options and operations please refer to above instructions.


**- Filtered**

 

Display only Filtered call list and be made of corresponding operations.

For specific options and operations please refer to above instructions.

## Alarm

This phone can set two alarm clocks at most, which still work in phone switched-off status.

From alarm clock list displayed in alarm clock menu select an alarm clock and press the  [Edit] key to enter its setting menu, and

specific operation steps are as follows (press the Up/Down navigator key to select from the following options), press the  key or  [Options] key to select [Edit] to set:

 
1. Activate or deactivate the alarm by selecting [On] or [Off], if an alarm is activated, this alarm will bright display and an alarm icon will display in idle screen.

2. Edit alarm time by Up/Down navigator key or numeric keys.

3. Set the alarm alert frequency as once or daily or weekly according requirement.

4. Choose one ring tone in the list which can be [Vibrate] as alarm ring.

5. Edit alarm notification

After editing above options, press the  [Options] key to select [Save] and confirm

saving, then alarm clock icon displays in idle mode upside.

And you can also follow the same procedure to save the alarm settings after modifying.

## Settings

You can set your phone according to your habits under this menu.

### Phone Settings

#### - Time and Date

**- Time and Date Settings:** Directly press the numerical key to key in the present date; or press the Up/Down navigator key to input the present date.

Follow the same procedure to set the present time.

**- Format Setting:** Time format can be set as 12-hour or 24-hour; Date format can be set as DD-MM-YYYY, YYYY-MM-DD or MM-DD-YYYY. Among which DD stands for date, MM stands for month, and YYYY stands for year.

 
 

 
**- Time Zone:** Select your current time zone.

**- SMS Time Sync.:** After set the own number in accurately, select this function to calibrate the system time by sending short messages.

#### - Language

You can select the operation language of the phone.


#### - Hotkeys Settings

 
You can set hotkeys in standby of numeric keys. Enter the menu, select any one numerical key then press the  or  [Edit] key to access the optional functions list, press Up/Down navigator key to select then press the  or  [OK] key to confirm. You can also select "Key NULL" if you don't want set the hotkey.

After setting, you can long press the numeric keys to enter corresponding functions you set in standby.

#### - Auto Keypad Lock

In this option you can set the time for opening or closing keypad lock. After setting the time for keypad lock, keypad will automatically lock in the idle mode when there is no operation within period of time.

If select **Off**, you can lock the keypad manually by long pressing the  key.

When keypad is locked, you can also long press the  key to unlock it.

 

#### - Input Methods

You can select inputting methods offered by the phone to set the inputting method for editing text. 123/abc is system inputting method, which is not optional.

 
### Ringtone Settings

#### - Ringtone

You can select one ringing tone as the alert for incoming call or incoming message.

Press the Up/Down navigator key to select your favorite ringtones and press the  key or the  [OK] key to confirm the current selection.

#### - Volume

Adjust volumes of call alert, message alert, call, power on/off, call, key and alarm, you can also adjust the vibrate grade. Press the Up/Down navigator key to select your required volume and press the  key or the

 [OK] key to confirm current setting.

#### - Incoming Call Alert

Press the Up/Down navigator key to select incoming call alert type: Ringing, Vibrate, Silent, Vibrate then Ring, Vibrate & Ring, as well as Ascending.

#### - Incoming Message Alert

Press the Up/Down navigator key to select incoming message alert type: Ringing, Vibrate, Silent, Vibrate then Ring, Vibrate & Ring, as well as Ascending.

#### - Battery Low Alert

Set low-voltage warning alert tone switch on or off.

### Display Settings

You can select displaying status of the phone.

#### - Wallpaper

Set the wall paper displayed in standby mode of the phone.

#### - Desktop

In this option you can choose whether to

display operator name, date time or not.

#### - Backlight



Set the background light of the phone switched on, including being on for 5, 15, 30, seconds or being on for 60 seconds.

#### - Contrast

Set the contrast ratio of the screen of the phone, including 10 grades. Press the Right/Left navigator key to select a proper grade.

#### Call Settings

##### - Auto Redial

Switch on or off auto redialing function. When switched on, if the receiver does not answer in dialing, the phone will automatically redial the number. The maximum redial times are 10. And during this period, the subscriber cannot dial any other number. Press the  key or the  key to end auto redial.

##### - Call Waiting (supported by the network)

You can switch on and off or searching for the call waiting function.


Switch on call waiting, and you will hear warning alert tone if there is a new incoming call during a call, with a phone number of another call on the screen.

##### - Call Divert (supported by the network)

Divert your incoming calls to voicemail or other numbers. There are five diverting ways, each of which can be set to activate, deactivate or check status.

After the function is activated, you can key in the number to divert calls according to the indications on the screen.

- **Unconditional:** Divert all incoming calls to the designated number under any circumstance.

- **If Busy:** When the phone is busy or the incoming call rings and press the  key to reject, divert the incoming call to the designated number.

- **If No Answer:** If there is no reply within the time limit, the incoming call will be diverted to the designated number.

- **If Unreachable:** When the phone is switched off or not in the network coverage area, the

incoming call will be diverted to the designated number.

- **Cancel All:** Cancel all set diverting.

#### - Call Barring

Restrict to answer or dial the call in any situation. You need to apply to the network operator for opening the international long-distance function and get network restricting code for barring setups. Any item of call barring can be set to activate, cancel or query. Call barring includes:

- **All Outgoing Calls:** Restrict all dialing.

- **All Int'l Outgoing:** Restrict all international dialing.

- **All Domestic Calls:** Restrict domestic long-distance dialing.

- **All Incoming Calls:** Include all incoming calls and random incoming calls. When the phone is switched on, the subscriber will be restricted by the network operator and not receive any incoming calls.

- **All Int'l Roaming Incoming:** Restrict international roaming incoming calls. When the phone is switched on, the subscriber will

be restricted by the network operator and not receive any incoming calls.

- **Change Barring Code:** Modify the barring code.

- **Cancel All Barring:** Cancel all call barring.

#### - Earphone Auto Answer

Activate or deactivate this function. When this function is activated and phone is in earphone mode, it will automatically answer incoming call after about 5 seconds.

#### - Minute Reminder

Activate or deactivate this function.

If this function is activated, you can check the call duration by the beep sound every minute during a call.

#### - Anonymous(supported by the network)

Switch on or off the anonymous mode. When the anonymous mode is switched on, the incoming call number will not be displayed on the receiver's screen during a call. When the anonymous mode is switched off, my number will be displayed on the receiver's screen.

#### Network Settings

##### - Auto Select

For the automatic selection, the phone will preferentially select according to the SIM card network.

##### - Manual Select

It cannot be used until the same network as that of the network operator by whom the SIM card is registered is available.

##### Security Settings

You can set security options of the phone under this menu so that the phone or the SIM card cannot be illegally used.

##### - PIN Code

The PIN code can be used to prevent your SIM card from being used illegally. You can activate or deactivate PIN code and also modify it.

You can make the following setups:

- 1.If the PIN code is switched off, select [**On**] and key in the correct PIN code, and this function is valid. You cannot enter until the

correct PIN code is input when switching on the phone. The SIM card is protected by the PIN code.

- 2.If the PIN code is switched on, select [**Off**] and key in the correct PIN code to switch off PIN code protection.

- 3.If you want to revise the original PIN code, select [**Modify**] and key in the correct original PIN code. The phone will indicate you to key in the new code twice and whether revising is successful. This function is valid only in the On status and PIN code can be changed.

**Note:** If you key in the incorrect PIN code for three times consecutively, the SIM card will be locked.

The PIN code and PUK code may be offered with the SIM card, otherwise contact your service provider. The default PIN code is usually 1234. Please change your initial phone code promptly.

##### - PIN2 Code

Key in the correct original PIN2 code and you can set PIN2 code.

#### - Phone Password

Phone code can prevent your mobile phone being used illegally by someone else. Enter this menu and you can conduct the following setups:

- 1.Select [**On**] to switch on phone lock code protection. You cannot enter until the correct phone code is input when the phone is switched on.

- 2.Select [**Off**] to switch off phone lock code protection.

- 3.Select [**Modify**] to revise the phone lock code, and set your personal code.

**Note:** The default phone lock code is 1234. Please change your initial phone code promptly. The above code should be set in the format, such as 0000~00000000.

#### Restore Factory Settings

Restore the parameter setup of the phone to the original value after confirming.

## My Planner

With this function you could expediently manage all kinds of missions in work and life as well as arrange and record your future matters. When your prearranged matter time is up, phone will give warning tone for reminding you to finish it. When the current schedule is empty, press the [Add] key to add scheduling, and specific operation steps are as follows (press up/down navigator to select and press the key or the [Options]key to select [Exit] to edit the following options):

- 1.Subject: edit planned matter's subject.
- 2.Date: set start date for execution of planned matters.
- 3.Time: set start time for execution of planned matters.
- 4.Frequency: set repeated date of alarm clock alert for planned matter as once, daily, weekly(default is from Monday to Friday, and user can set several days in a week as required), monthly or Annually.

5.Alert: Set alarm clock's ring tone, which can be set as [Off] or [Vibrate only].

6.Memo: edit planned matter's memo.

After editing above options, press the [Options] key to select [Save] to confirm saving.

**Note:** phone obligates a certain amount of available memory for schedule. When phone gives alert that memory space is full, you have to delete some unwanted schedule records to create new ones.

Only when planned matter's alert isn't set as [Off], its ring tone setting is effective otherwise there is no alert.

When there is schedule, select one and press the [Options] key to make the following operations:

- **View:** view selected schedule's details.
- **Add:** create new schedule.
- **Edit:** edit and modify selected schedule.
- **Delete:** delete this schedule.
- **Delete all:** delete all schedules.

My Planner 41

## Extras

This phone provides many practical functions.

### Tuner

Tuner is supported by the phone. Access the function only when you plug the earphone.

In tuner interface, press the key to open/close tuner function, press the Up/Down navigator key to adjust the volume, you can search the channel by manual, each press the Left/Right navigator key to decrease/increase 0.1HZ.

Press the [Options] key to access the following menu:

- **Turn On Tuner:** open or close the tuner.
- **Save Channel:** save the selected channel. Input the name and confirm, the channel name and frequency will be saved to channel list
- **Auto Search and Reset:** auto search the channel automatically and reset the channel list.
- **Set frequency:** input channel frequency

that you want to listen. The frequency value is between 87.5HZ and 108.0HZ.

• **Channel List:** save channel name and frequency. At most 9 channels can be saved in list.

• **Background Play:** activate or deactivate background play. When the function is activate, you can listen the tuner in standby or other menu interface.

**Note:** Quality of radio subscription is possibly influenced by environment like indoor or under shield. You can improve this situation as following: stand closer to the window, adjust the position of earphone line or adjust the channel manually.

### Calculator

Your phone provides you a calculator with four basic functions, which facilitates simple calculations.

Enter the sub-menu of the calculator to display the interface of calculator operation:

42 Extras

0-9 numerical key: key in the numeral you want to calculate.

key: key in the decimal point.

key: switch to minus (-)

Navigator key: key in +, -, ×, ÷

or key: key in =.

key: clear the last input or results

(Press this key to quit the calculator function if there is no numeral input; hold this key to delete all inputs.)

**Note:** The accuracy rate of calculator is nine effective numbers, and calculations of over nine effective numbers will cause errors.

### Perpetual Calendar

Select the calendar menu, and the screen will display the calendar of that month, with date of that day shown by a special color. Press the navigator key to modify date and calendar in screen upside will be correspondingly renewed.

Select a date and press the key to view the agenda of current date; press the

[Options] key and make the following options:

- **Agenda:** view the current day's schedul.
- **Go to Date:** after editing a specific date, press the key to access the calendar interface. But the selected year, month and date are date edited just now.
- **Set as System Date:** set the selected date as the system date of the phone.

### Note Book

The notebook can only record text information. If there is no record, it will display "Empty". Press the [Options] key and come to the editing interface of new record. If there is a record, it will display the record list. Press the key to view the selected record. Press the [Options] key to access the options:

- **View:** view the details of the selected record.
- **Edit:** revise the selected record.
- **Add:** edit a new record.
- **Delete:** indicate "Delete Record?". Press the [Yes] key to delete the selected record.

Extras 43

• **Delete All:** Indicate "Delete All?". Press the [Yes] key to delete all the records.

**Note:** When notebook list is empty, there is only one item [Add].

### Stopwatch

Use your phone as a stopwatch.

#### - Individual Timer

Select this option and press the [Start] key to start timing; press the [Record] key to record next time, 10 at most. Press the [Back] key to stop timing, screen will give alert of whether to exit or not, press the [Yes] key to exit timing interface and press the [No] key to continue timing.

#### - Lap Timer

It has the same function as split, but it times as per number of rounds. For specific operations please refer to [Individual Timer].

### Converter

Select this option and press the Up/Down navigator key to select the converted unit that

you want to convert.

Press the Up/Down navigator key to switch present unit, converted unit and input column; press the Right/Left navigator key to select the needed unit.

1.Press the numerical key to key in the numbers, and the phone will immediately display the converted value.

2.Press the key to key in the decimal point.

3.Press the key to delete last input numeral or symbol. When input is empty, return to the higher-level menu.

**Note:** Maximal input range of unit conversion is 9-bit significant figures (including decimal points). It has no means of inputting if this range is exceeded.

### World Times

Under this menu, you can look up current time and time zones of different cities in the world after selecting the time zone.


 
44 Extras

#### Currency Converter

Entering currency translation interface, enter exchange rate and confirm, and then enter conversion interface, in rate switch column, press the Left/Right navigator to switch proportion methods of current exchange rate, i.e. rate or reciprocal value of domestic currency to foreign currency, press the Up/Down navigator to switch to domestic currency column, enter domestic currency quantity and display conversion outcome in foreign currency column immediately.

#### Height & Weight

Select this option, you can press the navigator and number key to set the sex, height and weight respectively.


After finished setting, press the  [OK] key or  key to view the information of your avoidupois.

**Note:** the result is reference only.

#### Biorhythm

Under this function, you can look up the cyclic curve of intelligence, physical strength and spirit in different periods according to the birthday.

#### - My Biorhythm

Under this menu, the phone will display your biological clock curve and number of that day according to the set birthday, i.e., the joint picture of the curve of intelligence, physical strength and spirit and number. Press the Up/Down navigator key or the  key, and the screen will successively display: my biological clock and separate curve and number of intelligence, physical strength and spirit. Press the Right/Left navigator key to search for my biological clock curve and number of a desired day.

#### - Set Birthday

Under this menu, press the navigator key to set the birthday.

Extras 45 

#### Handset Data

You can look up the information about software edition of the phone.


#### STK\*

 
STK(SIM TOOL KIT) allows SIM based on smart card to run its own application.

 
This phone supports value-adding service provided by STK and different network operators provide different types, so function table will display only when your SIM card supports it. Function table name and content depend on available service. For SIM card service's availability, price and information, please consult your network operator, service provider or other dealers.

 46 Extras

#### Input Methods

 
Your phone supports common easy to used input methods. Use the  key at any edit interface (such as the edit message screen and contact name input screen) to shift between input methods except when the type of input requires particular or specific input method only.

Use the  key to switch between all capitalized, all lower case, or smart capitalization (for Predictive English only) inputs for alphabetical inputs.

Symbols may be accessed using the "1" key: Pressed when in Alphabetical input method; Press & held when in Numeric input method; Pressed when in edit mode Predictive English input methods. To input a symbol, access symbols table, use left or right navigator to select and up or down navigator to scroll between pages of available symbols, when at a desired symbol, press the  key to use.

The  key is used to delete last inputted

character, or exit edit mode when there are no inputs.

The  key is used to input a space except when in numeric input method.

#### The Numeric Input Method (123)

To input numerical values, press the respective numeric keys.

#### The Alphabetic Input Method (abc/ABC)


- 1.Press the corresponding key to the letter desired.
- 2.An selection box will appear at the bottom of the screen with the first letter selected with the key press.
- 3.Highlighted character is accepted and inputted if there is no key press on the same key for about a second or by pressing other keys for another character input.
- 4.To input other letters from the same key, press repeatedly at about half second intervals, as each press in made, the selector

Input Methods 47 

will move at available characters in the selection box, as you stop at a character, it will be inputted.


5.Please refer to overview on Input Methods for inputting symbols and spaces and switching input methods and capitalization.

#### The Predictive English Input (Eng/ENG/eng)

- 1.Press the corresponding key to each letter of a word, i.e.: to input the word 'ABLE', press in sequence "2"; "2"; "5"; "3".
- 2.A most commonly used word corresponding to the available letters from the key press will appear on screen highlighted.
- 3.Use any of the navigator keys to go to next available word if the first word is not the desired one.
- 4.When the desired word is displayed, input a space or press the  key to confirm and proceed to the next word input.
- 5.Symbols may be inputted by pressing the "1" key when in edit mode (words are inputted and confirmed, no word is highlighted), see Input Methods overview for

details.

6.The Smart Capitalization (Eng) will automatically capitalize first letters of all words inputted using this mode.

7.Pressing the  key in input mode will cancel last key press; while it will delete the last character inputted in the edit mode.

 48 Input Methods

## Technical Specifications

**Handset Weight:** About 62.2g  
**Dimensions:** 107.7 x 46.5 x 11.5mm  
**Battery:** Li-ion Battery, 3.7V  
**S701 supports Europe band:**  
GSM 900MHz/DCS 1800MHz  
**S701a supports America band:**  
GSM 850MHz/PCS 1900MHz

Battery Time (No prior or separate notice is required for capacity changes)

 
**Type:** Lithium Ion

 
**Capacity:** 650 mAh


**Charging Time:** 1.5 – 4 hrs.

**Talk Time:** about 3 hrs.

**Standby Time:** about 150 hrs.

 **Note:** Actual operating conditions depend on the local network environment, SIM, and user behavior.

 **Warning:** Any consequence caused by misuse, abuse, or not following any and all of the above-written suggestions and instructions shall not hold the producer in any way responsible to any degree.

 **Announcement:** The manufacturer reserves the right to change or upgrade specifications or software versions without prior or separate notice. Trade marks mentioned or used in this material belong to their respective owners.

Technical Specifications 49 

## SAR

### This Model Meets International Guidelines for Exposure to Radio Waves

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device when tested at the ear was 0.862 W/kg (\*) per 10 gram of tissue. As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide (\*\*).

As SAR is measured utilizing the devices highest transmitting power the actual SAR of this device while operating is typically below

that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a 'hands-free' device to keep the mobile phone away from the head and body. Additional Information can be found on the websites of the World Health Organization (<http://www.who.int/emf>).

\* The tests are carried out in accordance with international guidelines for testing.

\*\* Please see the section about body worn operation.

 50 SAR

## Safety

Never attempt to disassemble your phone. You alone are responsible for how you use your phone and any consequences of its use. As a general rule, always switch off your phone wherever the use of a phone is prohibited.


Use of your phone is subject to safety measures designed to protect users and their environment.


Do not use your phone in damp areas (bathroom, swimming pool...). Protect it from liquids and other moisture.

Do not expose your phone to extreme temperatures lower than - 10°C and higher than + 55°C.


The physicochemical processes created by chargers impose temperature limits when charging the battery. Your phone automatically protects the batteries in extreme temperatures.

Do not leave your phone within the reach of small children (certain removable parts may be accidentally ingested).

 **Electrical safety**  
Only use the chargers listed in the manufacturer's catalogue. Using any other charger may be dangerous; it would also invalidate your warranty. Line voltage must be exactly the one indicated on the charger's serial plate.


 **Aircraft safety**  
When travelling by plane, you will need to switch your phone off when so instructed by the cabin crew or the warning signs. Using a mobile phone may be dangerous to the operation of the aircraft and may disrupt the phone network.


Its use is illegal and you could be prosecuted or banned from using cellular networks in the future if you do not abide by these regulations.


 **Explosive materials**  
Please comply with warning signs at petrol station asking you to switch your phone off. You will need to comply with radio equipment

Safety 51 

usage restrictions in places such as chemical plants, fuel depots and at any location where blasting operations are under way.


 **Electronic equipment**  
To avoid the risk of demagnetisation, do not let electronic devices close to your phone for a long time.

 **Electronic medical equipment**  
Your phone is a radio transmitter which may interfere with electronic medical equipment or implants, such as hearing aids, pacemakers, insulin pumps, etc. It is recommended that a minimum separation of 15 cm be maintained between the phone and an implant. Your doctor or the manufacturers of such equipment will be able to give you any advice you may need in this area.

 **Hospitals**  
Always make sure that your phone is switched off in hospitals when so instructed by warning signs or by medical staff.

 **Road safety**  
Do not use your phone when driving. In order

to give your full attention to driving, stop and park safely before making a call. You must comply with any current legislation.

 **Distance of operation**  
This phone model has been tested and meets radiofrequency exposure guidelines when used as follows:


- Against the ear: place or receive a phone call and hold the phone as you would a wireline telephone.
- Body worn: when transmitting, place the phone in a carry accessory that contains no metal and positions the phone a minimum of 2.5 cm from your body. Use of other accessories may not ensure compliance with radiofrequency exposure guidelines. If you do not use a body worn accessory and are not holding the phone at the ear, position the phone a minimum of 2.5 cm from your body.
- Data operation: when using a data feature, position the phone a minimum of 2.5 cm from your body for the whole duration of the data transmission.


 52 Safety

### Caring for Battery

- ⚠ This phone uses a rechargeable battery as power source, when the charge is weak, recharge immediately to protect the battery life. It is best to drain the battery charge first.
  - ⚠ When not using the charger, unplug it from the power source and the phone. Over charging will shorten the battery life. not leave the charger connected to the unit or battery for more than a week.
  - ⚠ Temperature affects battery charge capacity. Your battery may need to be warm up or cool down before charging. If the battery temperature is lower than 0°C and higher than +45°C, it will not recharge.
  - ⚠ Use the battery as it is originally intended. Do not short circuit the battery by connecting the positive and negative terminals with a conductor.
  - ⚠ Do not use a damaged battery.
  - ⚠ The battery will not perform properly and its life will be shortened if exposed to extreme temperatures.
- ⚠ Do not place the battery in fire, follow local laws and ordinances in disposing used battery.

### Environment

 **Packaging**  
To facilitate the recycling of packaging materials, please obey the sorting rules instituted locally for this type of waste.

 **Batteries**  
Spent batteries must be deposited at the designated collection points.

 **The product**  
The crossed-out waste bin mark affixed to the product means that it belongs to the family of electrical and electronic equipment.  
To promote the recycling and recovery of waste electrical and electronic equipment (WEEE) and at the same time safeguard the environment, European regulations require you to obey the sorting rules instituted locally for this type of waste.