














Display Icons





Icon	Description
	Signal Strength Shows the received signal strength. More bars indicates stronger signal.
	Alarm Appears when an alarm is set.
	Battery Status Shows the charge level of phone battery. More stripes indicate more power left.
	SMS Indicates that there is a new text message waiting to be checked.
	MMS Indicates that there is a new multimedia message waiting to be checked.

	Call Indicates that the phone is an establishing a call. It indicates that mute is on if there is an "x" mark on top.
	Silent mode Appears when you mute all phone sound settings.
	Key Pad Lock Indicating that the key pad is locked. You can unlock key pad by pressing the * key then the LEFT SOFT Key.
GPRS	GPRS Indicates that GPRS service is active.
	Amplified mode Press the Operate/Call key long, you can active or deactivate the amplified mode during a call.

Display Icons 11 

Key Descriptions

Key	Descriptions
	Left Soft Key/Right Soft Key These are selection and/or shortcut keys that perform respective functions as indicated on the bottom line of the display directly above them.
	Operate/Call Key Makes or answers a call. In Standby mode, pressing the green call recalls the last dialed number.
	Stop/End call Key Ends a call, reject a call, or directly exit a menu. Switches the phone ON or OFF when pressed and held.
	Navigation Keys Use to navigate the menus and or playing games. Press the UP/DOWN key to enter the main menu from standby mode.

	Numeric Keys Enter numbers, letters and special characters. In Standby mode, the 1 key connects you to the Voice Mail server immediately when pressed and held.
	* Key Long pressing * key to active/deactivate Silent mode. In edit mode, pressing the key can shift between input methods and capital and small letters.
	# Key Inputs the # character. In edit mode, pressing the key will enter the insert symbols menu allowing you to add special symbols.
	Camera key Enters the camera preview when pressed while the phone is on standby.

 12 Key Descriptions

Preparing Your Phone

Inserting SIM Card

- ! • Scratches can easily damage the metal contacts of the SIM card. Pay special attention as you handle and insert the SIM card.
- Locate the SIM card slot in the battery compartment of your phone.

Slide the entire SIM card into the slot with the metal contacts of the SIM card facing down and its beveled corner on the bottom right. Then slide back the metal stator to lock SIM card in place.



Installing Battery

Place the bottom end of the battery against the base of the battery compartment. Press the top of the battery downwards until it clicks into the compartment.



Removing Battery

Do not remove the battery while your phone is ON. You may lose all your personal settings stored either in your SIM card or phone memory.

- ! Pull the battery latch and the battery rises automatically. Lift the battery off the compartment.

Preparing Your Phone 13 

Charging Battery

Make sure that the charger and the AC outlet operates under the same voltage, plug the charger to AC outlet. Then insert the connector to the bottom side of the unit, you will hear it click into place. Do not force the connector into the slot, check if you are inserting it right side up. During charging, the battery icon on the LCD will scroll until the battery is fully charged.

- ! • When the battery is low, you will hear a warning tone. Your phone will power off automatically if the voltage becomes too low.
- Use only approved batteries, charger and accessories to ensure proper function of your phone and battery life. Any malfunction or damage caused by the use of any third-party accessories will void warranty.
- Do not remove the battery from unit during charging.
- Pull out the charger connector when charging is done.

Security Passwords

-PIN Code

The PIN (Personal Identification Number) code protects your SIM card against unauthorized use. It is normally supplied with the SIM card package. When it is activated, your phone will request you to enter PIN code every time it is switched ON. When it is deactivated, your phone will connect to the network directly without asking for the PIN code. Be careful while entering PIN code, 3 wrong tries in entering PIN code will block it and the SIM from use.

-PIN2 Code

The PIN2 code supplied with some SIM cards is required to access some functions such as Advice of Call Charges and Fixed Dialing. These functions are available only if supported by your SIM card.

-PUK Code

The PUK (Personal Unblocking Key) code is required to unblock a blocked PIN code. It is normally supplied with the SIM package;


 

otherwise contact your service provider for the code. Keep your PUK code in a safe place, do not throw it away. Contact your service provider if it is lost.

-Phone Code

The Phone Code is a security code that protects unauthorized use of your phone. The factory default number is "0000". Once activated, the phone will request you to enter Phone code every time the unit is switched ON.

Using Your Phone

 

Switching ON



1. Press and hold down the  key to turn on your phone. Once switched ON, the backlight will be lighted and the power up animation will be shown. (When switching on your phone for the first time, your phone will ask you to set certain parameters such as time, and time zone)
2. When prompted, enter your PIN and/or Phone code. If you typed a wrong number, delete it by pressing the  key. When done, press the  key to confirm.
3. If the SIM card is blocked, the phone will prompt you to enter the PUK code to unblock.
4. Once initialized, the phone will automatically search for network.

- ! • When network signal is received successfully, the screen will show the network name or code where you are connect to, then goes into idle mode.
- If connected to a network you do not have access to, the signal strength will


be showed on the screen. But you can only make an emergency call and use other non-communications functions.

Making Calls

Dial the desired number using the keys on the numeric keypad, use the  key to delete wrong digits. Then press the  key to connect.


Dialed, refused, and accepted call numbers may be dialed if they have not been deleted from your phone by pressing the  key and scroll to the number then pressing the  key again to connect.

Refusing Calls

Press the  key to refuse an incoming call.

Answering Calls


When a call comes in, your phone will ring and/or vibrate to alert you of the incoming call. The screen will display the name or phone


number of the caller. Press the  key to answer.

Adjusting Earphone Volume

 
Press the Up/Down Navigation Keys to increase or decrease the earphone volume during a call.

Ending Calls

When a call is finished, press the  key to hang up and return to idle mode.

Press the  key if you want to drop a call after dialing.


Emergency Services

Enter 112 (the international emergency number) and press the  key.

This emergency call can be made without a SIM card inserted, as long as you are within the coverage of the type of network used by your phone.

Making International Calls



Long press the "0" key until "+" is displayed. Enter the recipient's country code, area code


and phone number, and then press the  key to connect.

Making Calls Using Phone Book


You can store the phone numbers in the SIM card and telephone memory called Phone Book. When you want to call a number from your Phone Book, simply select the required name to recall the associated number to dial.

Other In-Call Functions

Pressing the  key (Mute ON) will mute the microphone; the other party will not hear you. Pressing the  key (Mute OFF) again will deactivate muting.

Pressing the  key (Options) will enter a menu. You can activate and deactivate Amplified Mode (Loudspeaker / Hands-free); Hold Call; End Call; and Secret Mode (Mute). You can also access your Phone Book or the Main Menu here without terminating the call.

Switching OFF

Switch OFF your phone by long pressing the  key.

Using Your Phone 17 

Menu structure

Phone Book

- Contacts Menu
- Add SIM/Phone Contact
- Own Number
- Mailing List
- Memory
- Delete All
- Back up to SIM

Message

- Write Messages
- Inbox
- Outbox
- Sent
- Drafts
- Options
- Memory
- Cell Broadcast
- Voice Mail
- Mailing List

Organizer

- See Month
- See Week
- See Today
- See Date
- Calendar Menu
- Help

Settings

- Sounds Settings
- Display Settings
- Camera
- Languages
- Call Settings
- Security
- Network
- Time and date
- Reset Settings
- Connectivity
- WAP Settings
- Help

Multimedia

- My Pictures
- My ringtones
- Memory
- Help

Accessories

- Alarm
- Timer
- Reminder
- Calculator
- Converter

WAP



- Home URL
- Bookmarks
- Go to URL
- Inbox
- Advanced...
- Quit

Games

- More Games
- Settings
- About
- Help
- Tetris

Camera


Phone Book

You can create a personal phonebook by saving phone numbers and names (contacts) in both or either phone or SIM memory. It is much easier to recall names or numbers from phone book than remembering and dialing someone's phone number every time you want to make a call. Move the cursor to the Phone Book icon in Main menu and press the  key (Select) or press "8" in the Main menu to enter Phone Book menu. Press the  key (Options) for Contacts Menu to access sub-menus.

When your phone displays contacts stored in your SIM, it is using and accessing the SIM memory, and is indicated by a SIM card icon on top of the screen. On the other hand, when it displays contacts stored in your phone, it is using and accessing the phone memory, and is indicated by a phone icon on top of the screen.

Add Phone/SIM Contacts

1. Access the Contacts Menu by pressing the

 key (Options), select Add Phone Contact if you want to save the contact in phone memory, or select Go to SIM List then Add SIM Contact if you want to save to SIM memory.

2. In the Add Contacts menu, select by moving to each field and press modify. Enter required data (all fields with a star are required), select OK, and then Save.

For every saved record, selecting it in the Phone Book menu will allow you to:

- **Call:** Dial the number directly.
- **Modify Contact:** Change or modify the fields.
- **Send Message:** Create and send a message.
- **Send By:** Send the contact info. to another number via SMS or MMS.
- **Copy to SIM/Mobile:** Copy the record to SIM or Phone memory.
- **Delete:** Deleted the record from memory.

Own Number

Use this menu to create and maintain records of your own phone numbers.

Mailing List

Allow you to create groups to whom you can send SMS or MMS to all members where you do not have to enter each contact number when sending.

Memory

Checks and displays memory usage status of the SIM card and phone.

Delete All

Allows user to delete all records in either SIM or phone memory.

Back up to SIM

Allows you to copy your contacts from your phone to your SIM card.