Message

If your network supports and you have subscribed to messaging services such as the SMS (Short Messaging Services) or MMS (Multimedia Messaging Services), you will be able to send, save and receive messages to and from other compatible mobile phones. The memory capacity of incoming and outgoing messages depends on the SIM memory capacity. The phone memory can store up to 100 SMS messages, while MMS messages capacity depends on the size of MMS messages you saved. If the storage capacity is full, the message icon flashes and you will not be able to receive or save any new messages. Use the Up/Down navigation keys to scroll through the menu options, the key to select an option, the key to go back one step.

Write Messages

Select Write Messages from the Messages menu.

-SMS

Select SMS from the Write Messages menu. You will be able to compose text messages. Short press the hey to shift between input methods; long press the hey to shift between lower and upper case; short press the hey to access the symbols table, use the navigation keys to go to the desired symbol, and press the hey (OK) to insert the symbol. Press the hey (Options) during or after composing the message will allow you to:

- Send: Send the message by entering the recipient number. You will have options to directly send; add another recipient; delete a recipient; edit a number; Send options or save the message to SIM or phone.
- · ABC Mode: Select letter input.
- T9 Mode: Select predictive T9 text input.
- Save: Save the message to SIM or phone memory.
- · Cancel: Quit composing message.

Message 21

GÍRD

- Activate/Deactivate Silent: Enable or disable key pad sound while composing message.
- Formatting: Format and enrich text to styles, upper case, and alignments.
- Insert: Inserting emoticons (emotion icons), sounds, visit cards, calendar, or symbols;
- Help: Display help notes and hints.

-MMS

To use this function your SIM card must support GPRS. Select MMS from the Write Messages menu. You will be able to compose multimedia messages. Press the key (Options) during or after composing the message will allow you to:

 Send: Send the message by entering the recipient number. You will have options to directly send; add another recipient; add subject; edit a number; or save the message to SIM or phone. In its Send Options menu you can also set Message Validity; Request Delivery Report; set Priority; set Early Delivery Time.

- Insert: Take photo; record (voice) comment; and insert it to the message. Can also insert saved ring tones; pictures; symbols; visit cards; and calendar.
- · ABC Mode: Select letter input.
- 123 Mode: Select number input.
- **T9 Mode**: Select predictive T9 text input.
- Save: Save the message to SIM or phone memory.
- Cancel: Quit composing message.
- Slide: Select slide duration and arrangement.
- · Preview: Preview the message.
- · Help: Display help notes and hints.

Inbox

This menu stores the text messages that you have received. When you receive a message the message icon appears on your telephone screen. If you do not read the messages, this icon remains displaying on the screen. When it flashes, the memory is full. Once you entered this menu, you can see the received message. Each message shows the

presence of any attachments, the time and date the message was received. Icons are used to describe the type of messages (Multimedia, SMS/EMS and so on). Messages are listed in chronological order, the latest one being displayed first. Scroll to the desired message by using the Up/Down navigation keys. While viewing a message, you can choose the following options:

- · Read: Open and read received messages.
- Reply...

Reply: You can reply the received messages. Reply with histo.: Reply the received messages with history.

- · Forward: Forward the messages to others.
- · Details: Details of the message such as the subject, sender, and time & date.
- · Delete: Delete the selected message.
- Delete Read: Delete read messages.
- Delete All: Delete all messages in the inbox. -SMS
- Call back: You can call the number immediately.

-MMS

- · View: Open.
- · Reply...

Reply: You can reply the received messages. Reply with histo.: Reply the received messages with history.

- · Forward: Forward the messages to others.
- · Details: Details of the message such as the subject, sender, and time & date.
- · Delete: Delete the selected message.
- Delete Read: Delete read messages.
- · Delete All: Delete all messages in the inbox.
- · Call back: You can call the number immediately.

Outbox

In this menu, you will see a list of unsent messages. Select a message with the navigation key and press the \(\bigcirc \) key (Options), then you can select the options:

- Read: Browse the contents.
- · Modify: Modify the contents.
- Forward: Forward the messages to others.

Message 23 (GIRD

- · Delete: Delete the selected message.
- · Delete all: Delete all messages stored in the out box.

-MMS

- · View: You can browse particular contents about it.
- · Details: You can view the message's subject and body.
- · Modify: Modify the contents in it.
- · Send menu

Send: Send the MMS.

Send all: Send all MMS in Outbox.

- Delete: Delete the selected message.
- · Delete All: Delete all messages stored in the Outbox.

Sent

You have to activate Save Sent Messages in the Message Settings menu to use this function. In this menu, you will see a list of sent messages. Select a message with the navigation key and press the \(\) key (Options), then you can select the options:

-SMS

- · Read: Browse the contents.
- Forward: Forward the messages to others.
- · Details: Details of the message such as the subject, sender, and time & date.
- · Delete: Delete the selected message.
- · Delete all: Delete all messages stored in the out box.

-MMS

- · View: Browse the contents.
- · Forward: Forward the messages to others.
- · Details: Details of the message such as the subject, sender, and time & date.
- · Delete: Delete the selected message.
- · Delete all: Delete all messages stored in the out box.

Draft

Messages edited and saved but not sent are kept here, press the Up/Down navigation keys and select one message, press the 🔁 key (Options) to:

· Read: Read the message and choose

GÍRD

24 Message

options to Send, set Send Options, Delete, and Modify or Cancel the message.

- · Modify: modify the contents.
- Send: send the message.
- Details: Details of the message such as the subject, sender, and time & date.
- · Delete: Delete the message.
- · Delete all: Delete all in drafts.

- · View: Read the message and choose options to Send, Call, see Details, Modify, mute (Activate Silent), or Delete the message.
- · Modify: Modify the contents.
- Send: Send the message.
- · Details: Details of the message such as the subject, sender, and time & date.
- · Delete: Delete the message.
- · Delete all: Delete all in drafts.

Options

Default SMS & MMS message settings are edited and set here.

-SMS

· Save sent msgs: Save a copy of messages

sent to the sent folder.

- · Acknowledgement: Activate or deactivate network notification of message sending
- Reply given: Similar to Acknowledgement;
- Message validity.: Set message validity to 6 hours; 1 day; 1 week; or Maximum.
- · Message format: Set message format as Text; Fax; E-mail; Voicemail; Pager; X400; or ERMES.
- Message center n°: Set the message center number.

-MMS

- · Save sent msgs: Save a copy of messages sent to the sent folder.
- Retrieval mode: Activate and deactivates roaming retrieval. Also sets home network receive mode to manual or automatic. In a poor coverage area, it may be more convenient to choose the manual retrieval mode that allows you the option to retrieve
- · Priority: Sets message priority to Normal, High, or Low.

Message 25 GIRD

- · Request delivery.: Activates and deactivates request for delivery report of the message.
- Message validity.: Set message validity to 1 hour, 12 hours; 1 day; 1 week; or Maximum.
- Advanced settings: Other more advanced settings such as Send Delivery Report when receive a MMS message; Ignore incoming MMS; set MMS Server; activate or deactivate Display Bcc; Sender Visibility; and Maximum Size.

Memory

Displays the memory available in SIM card and phone for SMS messages and percentage of memory consumption of each individual features.

Cell Broadcast

This function is a value-added service from the network operator wherein information such as weather and traffic conditions are broadcasted. For details please contact your service provider.

Voicemail

This is a network function, if supported and subscribed, callers can leave a voice message in your voice mail box for your retrieval later. You will need a voice mail box number from the network operator. For details please contact your service provider.

Mailing List

You can create mailing lists compose of several contacts (from the phone memory only) as members to whom you might have to send the same messages in the future to simplify your task. After a mailing list is created, you can add another, View contents, Modify Name, Add Contact, view its Properties; Delete one list, or Delete All lists.

GÍRD

26 Message

Organizer

Your phone provides tools that help you organize your everyday life. Go to one of the functions in this menu using the Up/Down navigation keys and select.

See Month

Lets you access events on a month-to-month basis. Use the Left/Right navigation keys to move between months.

See Week

Lets you access events on a week-to-week basis. Use the Left/Right navigation keys to move between days of the week.

See Today

Lets you access events of the current date.

See Date

Lets you access events on a specific date * In all 4 of the above menus you can add vocal (voice) or written events, categorize

them, set Title, Description, Starting Time, Ending Time, Alarm, Periodicity (frequency), and save the events. You can also use the Memory menu to see memory capacity used by these functions.

Calendar Menu

Lets you add events, access actions possible on all events, and manage events. Select one of the functions in the list with the Up/Down navigation keys.

- Add Written Events: Allows you to add events according to their categories. Depending on the event category, you will have to fill in the following properties: Appointment, Meeting, Events, Birthday, Travel, Holidays. Set Title, Description, Starting Time, Ending Time, Alarm, Periodicity (frequency), and save the events.
- · Add Vocal Events: Allows you to add events according to their categories. Depending on the event category, you will have to fill in the

Organizer 27 GIRD

following properties: Appointment, Meeting, Events, Birthday, Travel, Holidays. Set Title, record voice notes, Starting Time, Ending Time, Alarm, Periodicity (frequency), and save the events.

- · Clean Up: Allows you to delete events by defined time frame of older than One day; One week; or One month.
- · Memory: Allows you to view the memory capacity used by the different functions.
- · Delete All: Allows you to delete all the events.
- · Categories: Allows you to see the different event categories, assign a specific ring tone to each individual category, know the number of events in each category and see them.

Help

This displays useful notes and hints in using this menu.

GÍRD

28 Organizer

Settings

Sound Settings

This menu helps you customize sound settings for various functions.

-Select Ringtone

Select ring tones for Calls, SMS, MMS, Cell broadcast, Fax and Alarm. There is also a Help function to displays useful notes and hints in using this menu. Press the up/down navigation keys to select the ring tone you like, press the key (OK) to select.

-Vibrate

Select the alert type: Ring, Vibrate, Ring and Vibrate, or Vibrate then ting, press the key (OK) to select.

-Silent Mode

Activates and deactivates silent mode. Switching ON/OFF the phone will deactivate silent mode automatically.

-Beeps

Change, activate, or deactivate Key Pad Beep (keypad tone), Network Alert, and Battery Low Alert.

-Recording

Record and save audio files such as melody.

Display settings

This menu helps you changes your screen display according to your preference.

-Color scheme

Changes color of some display components.

-Wallpaper

Changes the wallpaper of the display from the pictures saved in your phone, you can also have your pictures displayed as wallpaper randomly.

-Operator name

Activate or deactivate displaying the operator name in the idle screen.

-Energy saving

Choose Screen Only backlight or Full (screen and keypad) backlight.

Settings 29 GIRD

Camera

This menu helps you customize your camera settings.

Allows you to set capture delay timer to None; 5 Seconds; 10 Seconds; or 15 Seconds.

Changes the type and activates or deactivates the clicking sound of the camera.

-Photo format

Sets the format to which photographs taken will be saved, it can be On request (user select); High res. or Mobile format.

-Help

Displays useful notes and hints in using this menu.

Languages

This function changes the language interface of the phone. If you choose automatic, the language used will be the one relative to your SIM card.

Call settings

This menu allows you to check and manage calls made and received.

-Call forward

This network dependent service enables incoming calls to be diverted to the number that you specify or to your message box.

- · Voice calls: Divert all voice calls.
- · All conditional: Divert all calls.
- · Cancel voice: Cancel all voice call diverts.
- If busy: Divert the call when the line is busy.
- · If no answer: Divert the call when nobody answers.
- · If unavailable: Divert the call when it is unavailable or unreachable.
- · Data: Divert only data information.
- · Faxes: Divert only fax calls.

After selecting above options, you can choose the following sub-options:

To voicemail: To your voicemail. To a number...: To another number. De-activation: Stops divert.

Status: Checking the status of the corresponding service.

GÍRD

30 Settings