


-View last calls

Displays list of dialed, received, missed calls. Press the  key (Options) to Create Contact (save to memory); Add to Contact (save to current memory); Delete; Delete All; or Send Message.

-Counters

Shows and sets counters for calls and GPRS.

• Cost

Counter: Show the count of the last call/ Total.

Delete costs: Needing PIN2 code support. Clear data costs.

• Duration

Last and total: Show the duration of the last call / Total.

Delete durations: Delete the duration of the last call / Total.

Display of duration: Activate/Deactivate the call time display.

• GPRS counters

Last session: Check the flux of last session.

Total: Check the flux of all sessions.

Delete counters: Clear data counters.

-Display numbers

Network dependent function to whether numbers will be displayed.

-Call waiting

Activate or deactivate to set the network to notify you when a call comes in while you are on an active call, the number will be displayed and you may choose to accept or refuse the call. This is a network service function that requires network support.

-Auto redial

Set your phone to automatically attempt to connect again on an unsuccessful attempt, you can set it to On Request (ask first), Systematic (auto redial), or Inactive (no redial).

-Blacklist

If a number is rejected or missed 10 times, it will be put into the Black List.

-Voicemail

A network service function requiring network support, if subscribed, you can have a voice mail box number where your callers can leave a voice message for your later retrieval.

Settings 31 



-Help

Displays useful notes and hints in using this menu.

Security

Several features are built into your phone allowing user configuration of phones security settings.

-Key pad locking

Activates or deactivates key pad lock to prevent unwanted key press. If you choose to activate, you can set automatic locking time. Press the  key then the  key to unlock key pad or to manually lock key pad.

-PIN

Activates and deactivates or changes PIN.

• **Modify:** To change PIN code. Enter old code and press Left soft key, then input the new code twice and press Left soft key.

• **Control PIN:** Activates and deactivates or changes PIN, when activated, you need to enter the PIN code every time your phone is switched ON.

-PIN2

PIN2 code is provided by the service operator to open support for certain special functions. You can modify or change PIN2 in similar manner as changing PIN.

-Phone code

Locks your phone to keep it from unauthorized people. User needs to enter the phone code every time the phone is switched ON when the SIM card is changed. You can change the code in similar manner to changing the PIN.

-Confidentiality

Allows activation of automatic deletion of Call records, Messages, and Logs stored in the phone memory when the SIM card is changed. It also allows automatic deletion of call records in phone memory upon powering ON/OFF.

-Operator

Contact your network operator for details, it can allow limitations of incoming and outgoing calls, the procedure for changing the code is similar to procedure for changing PIN.

-Call Barring

You can prohibit certain types of incoming or outgoing calls, it needs network support, please contact network operator for more details.

-Fixed Dialing

Needing PIN2 code support, if activated, user can only make calls to numbers of a pre-set list.

-Cost

Needing PIN2 code support, You can limit or configure your phone cost.

Network

This menu allows you to select and set your network.

-Selection

Choose to manually or automatically select network.

-Preferred

Lists the preferred networks in the SIM card. If the networks are not listed, please input country code and network code (check the information of the SIM card).


-Network Type

Choose to automatically select network type or choose GSM-DCS or PCS networks.

-GPRS

Choose the way how you wanted to be connected to the GPRS network: Upon Request (when launching a data connection) or Always ON.

Time and date**-Set Date/Time**

Enables you to set current date and time. Use numeric keys or the Up/Down navigation keys to set date or time, the Left/Right navigation keys to move the cursor, press the  key to save settings.

-Automatic update

Manually, Automatically, or On Demand (when asked) update date and time.

-Display

Selects to have the clock on idle display in Digital, Analog, or None (no clock displayed).

-Time Zone

Allows you to change time in relation to the GMT time. On the Date/Time menu, please select Time zone and validate. Choose the time of the country desired by calculating the time from the GMT time.

-Daylight saving

This menu allows you to set your phone to the summer/winter time. On the Date/Time menu, please select 1 hour or 2 hours summer time or winter time depending on the season, and validate.

Reset Settings

This menu allows the user to return all setting parameters to their factory defaults.

Connectivity

This menu allows you to set parameters for connected devices.

-Serial Speed

Sets the serial device connection speed, choose among Automatic; 115200; 57600; 38400; 19200; 9600; 4800; 2400; or 1200 kbps.

-Car Kit

Sets car kit parameters: activates or deactivates Auto Response; mobile Switch OFF; and Kit Volume.

WAP settings

This menu lets you edit your phone's GPRS connection parameters. The sub-menus must be setup properly to browse WAP sites.

-Profiles

Add a WAP profiles and see the Memory consumption; After creating a profile name, by selecting it you can:

- **Info:** See the profile's information such as its origin and creation date.
- **Modify:** Edit Provider Title; Home Page; Preferred Connection (GPRS, GSM if No GPRS, or GSM); GSM parameters (Login name, Password, Proxy, Dial-up Number, and Mode); and GPRS Parameters (Login name, Password, Proxy, and APN).
- **Delete:** Delete the profile.

-Bookmarks

Set a bookmark for most pages, they can then

be accessed directly from any web page. Bookmarks save you time by reducing the number of steps required to access a given page. Add a Bookmark and see the Memory consumption; Selecting a Bookmark you can:

- **Goto:** Visit and browse the URL.
- **Modify:** Edit the URL address.
- **Delete:** Erase the bookmark.
- **Send by message:** Send the URL to other compatible phones using the messaging service.

Help


This displays useful notes and hints in using this menu.

Multimedia


This Menu allows you to store and manage your personal multimedia files such as pictures and sounds.

My Pictures

-Pictures

You can enter the Pictures Menu, and press the  key you can:


- **New photo:** Allows you to take new photo.
- **Delete all:** Allows you to delete all pictures that you saved.

Select the picture by using the Up/Down navigation keys and press the  key to:

- **Send by MMS:** Allows you to send picture to others via MMS.
- **Edit picture:** Allows you to edit a picture.
- **Wall paper:** Allows you to use the picture as wallpaper.
- **Rename:** Allows you to rename a picture.
- **Properties:** Allows you to view its core properties.
- **Delete:** Allows you to delete a picture.
- **View:** Allow you to view pictures.

My Ringtones

You can take new or delete all ringnes that you have saved in the Audio Menu.

Select the ringtone by using the Up/Down navigation keys and press the  key to:

- **Send by MMS:** Allows you to send ringtone to others via MMS.
- **Use As:** Allows you to use the ringtone as Calls; SMS; MMS; Fax; Alarm; or Cell Broadcast.
- **Rename:** Allow you to change the name of the ringtone.
- **Properties:** Allow you to view its properties.
- **Delete:** Allows you to delete a ringtone.
- **Listen:** Allow you to playback and listen to the ringtone.

Memory

Check and view how much memory you are using for the various features of your phone.

Help

This displays useful notes and hints in using this menu.

Accessories

This menu contains useful tools and extras that will help you perform and manage daily tasks.

Alarm

You can use your phone as an alarm clock. Activate the alarm and set the time you want the alarm to bell. If activated, a bell icon will appear in your idle display. Use this menu too to deactivate the alarm.

Timer

The phone can also be used as a timer. Activate the timer and set the time in the same fashion as setting the alarm. If activated, a bell icon will also appear in your idle display. Use this menu too to deactivate the timer.

Reminder

You can set the phone to remind you of things to do at any particular time. You can make written or voice reminders. You have to input

the Description, Title, Category, Due Date/Time, Alarm type, and Save to successfully create a reminder.




Access the ToDo sub-menu in this menu to Add Written Todo, Add Vocal Todo; select to see Categories (Shopping List; Business; Private; Call; Idea; Gift; or Unknown) and set alarm tones for the category; Delete All reminders; view Memory status; and see Help for the menu.


Selecting the ToDo item created in the Reminder menu allows you to See ToDo reminders, Modify ToDo reminders, Delete reminders, or Send the reminder via MMS.

Calculator

You can use the phone as a calculator or do currency exchange conversions. Use numeric keys to input digits and the navigation keys to enter mathematical operations, the Up navigation key for addition, the Down navigation key for subtraction, the

Accessories 37 

Right navigation key for multiplication, and the Left navigation key for division, Use the  key to input decimal point and the  key to back-step or delete an erroneous input. After an expression is entered, use the  key to get the result.

Before completion of expressions, pressing the  key will bring you directly to the Currency Converter.

Converter


Use the Left soft key active to set conversion options. First you must make the Rapid Exchange active and set the currency name and exchange rates.

Input the amount and use the Up/Down navigation keys (as shown in the display) to get the resulting conversion.

You may also jump to the calculator function in the currency converter options.

WAP

Your phone supports services based on Wireless Application Protocol (WAP). You can access services supported by your network. The services menu allows you to get information such as news, weather reports, and flight schedules.

You can access WAP menu via shortcut key (the  key) from the idle display or through the main menu.

Home Page

If you press the Left soft key, a connection will be established with your service provider and the corresponding homepage is displayed. The content of the WAP browser's startup homepage depends on your wireless web service provider.

Note: you must set up the WAP parameter firstly.

Bookmarks

You can set a bookmark for most pages, they can then be accessed directly from any web

page. Bookmarks save you time by reducing the number of steps required to access a given page. Add a Bookmark and see the Memory consumption; Selecting a Bookmark you can:

-Goto

Visit and browse the URL.

-Modify

Edit the URL address.

-Delete

Erase the bookmark.

-Send by message

Send the URL to other compatible phones using the messaging service.

Go To URL

Enter the URL address you want to visit and browse the web page.

Inbox

You can read messages readable only by WAP browsers here.

WAP 39



Advanced



-Settings

Set WAP profiles here (as described in WAP Settings). You set also set the duration of WAP Connection Timeout (disconnect service if there is no input or data transfer during the set time frame).

-Disconnect

Disconnect from a service, you can still browse opened network.

-Delete Cookies

Press the  key to enter and press the  key to confirm (YES) or Cancel action.

Quit

To quit and terminate WAP function menu.