 










Key Description

key	Description
	Left soft key/Right soft key Implements the functions on the left/right lower corner of the display. In Standby mode, press the left key to enter the main menu; press the right key to enter SMS.
	Menu key In Standby mode, press this key to enter display setting, and in other modes, it bears the function in the middle of the display.
	Navigation keys In Standby mode, press the upper navigation key to enter phonebook; the lower navigation key to enter call settings; the left navigation key to enter Sound settings, and the right key to enter the Inbox. In other modes, it may be used to move the cursor or view options.

key	Description
	Number keys Used for dialing or the editing of text in the edit mode.
	Dial/answer key You may dial and answer calls. In Standby mode, press this key to show all recent call records.
	Power On/Off/Cancellation Key Used mainly for the starting/shutting-off of the phone, also used to end calls or reject incoming calls.
	Up/Down Key During a call, adjusts the earpiece volume. Backlights of the main and mini display will be turned on when this key is pressed. View options

Key Description 11 

key	Description
	* Key To enter *; in Standby mode, press and hold this key to switch current modes.
	# Key To enter #; in Standby mode, press and hold this key to enter the phone lock mode, you need to enter password to unlock the phone.

 12 Key Description

Preparing your phone

Installing the SIM Card

- ! • Keep all miniature SIM cards out of the reach of small children.
- The SIM card can be easily damaged by scratches or bending, so be careful in handling, inserting or removing the card.
- When removing the SIM card, always make sure that the phone is switched off.

With the back of the phone facing you, locate the position of the SIM card holder. Press carefully the SIM card till it fully enters the SIM card holder, then close the fixation accessories of SIM card. When installing SIM card, please make sure the metal contact is facing downwards, and the cutting corner is at the left lower corner (see the picture).



Installing Battery

Insert the battery into the back of the phone, then gently press the battery downwards, till you hear "click" of the battery lock.



Removing Battery

Turn the phone back to your, push the battery lock upwards, take the battery out.

- ! • When removing the battery, all settings or data stored in the SIM card and the phone may be lost.

Charging the Battery

Connect the lead with arrowhead to the socket on the bottom of your phone. On the main display the battery indicator

Preparing your phone 13 **GIRD**

scrolls during charging. If the bar will fill the charging indicator, and will stop scrolling, it means that the charging is complete. When charging is complete, press the button on both sides of the charger to pull the lead out.

- ! • When there is insufficient power, alarm message will appear on the main display of the mobile phone. When the power is too low, the phone will be shut off automatically. Avoid keeping the battery in the status of insufficient power for a long time, or else the quality and service of the battery will be damaged.
- In order to ensure normal operation of your phone, please use designated charger.

Security Password

-PIN

This is the PIN of your SIM card. PIN and SIM card are often provided by the carriers. If you enter wrong PIN for 3 consecutive times, SIM card will be locked, then PUK shall be

entered to unlock the mobile phone. Contact carriers for unlocking the phone.

-PUK

PUK (personal unlocking keyword) is needed to unlock locked PIN.

If your SIM card is locked, the phone will automatically provide you with the mode for the entry of PUK, and when correct PUK is entered, your phone will be unlocked. When you enter wrong PUK for 10 consecutive times, your SIM card may become useless. PUK is generally provided by the carriers. Please contact your service providers to obtain PUK. If you lose this password, contact your service providers similarly.


-Phone Password


Phone password may prevent others from unauthorized use of your phone (original phone password is 0000).


In order to ensure the security of your personal information, please modify original password of the phone in a timely manner.

Using your phone

Switching the phone on

1. Open the fold of your phone, press and hold  key to start your phone.

If there is no SIM card or if the SIM card is damaged, then after showing start animation and playing start music, the phone will alert that the SIM card is wrong, please check SIM card. You may continue to use or stop the phone. After selecting continue, you may enter the menu of functions that need no SIM card. If your phone is switched off and is in charging mode, you may press and hold  key to start your phone.

2. If the SIM card in the phone is protected by PIN, the phone will show "please enter PIN code", and after entering correct PIN code, press  key for confirmation.

3. If the SIM card of the phone is locked, it will alert for the entry of PUK.

4. If in the Settings automatic locking function is started in the security setting, when the phone is switched on, it will alert you to enter



the phone password.


5. After being switched on, the mobile phone will automatically search the network.



- If the phone has searched authorized network, the display will show the name and signal strength of the network; if no authorized network is searched, only emergency call and other non-communication functions can be used with the phone.
- When the phone is switched on, if not necessary, please do not touch the antenna, or else the effect of communication will be affected, and the mobile phone will also work in the status above the scope of energy. Please do not touch the antenna when using the phone, and in so doing the function of antenna can be better performed, and the call time of the phone can be better used.

Using your phone 15 


Making a call

In standby mode, press corresponding number key to enter the phone number that you want to make, including necessary prefix. Press  key to delete wrong entry, and when the number is dialed, press  key, you may make a call to that number.

You may also use the Phonebook to make a call. Find the number that you want to call in the Phonebook (please refer to "Search" in the "Phonebook"), press  key to call the number.


If you want to call the number that you have called in the past, in standby mode you may press  key to enter Call records or enter all menus in the Call records, find that number out and press  key to make a call to that number.

Rejecting a call

When you have an incoming call, press  key or directly close the fold the call will be rejected. If you do not want to receive the call any longer, you may enter the number into the incoming call firewall.

Answering a call



When you have an incoming call, the phone will give corresponding alert (like vibration and ring tone, etc.); and if it is supported by the network, the display will show the name or number of the caller, at this time you have the following 2 manners to answer the call:

1. When fold of the mobile phone is closed, directly open the fold the call will begin. ("Activate" shall be set up in the "open to answer" in the menu of the call settings).
2. if the fold of the phone is open, press  key, and you will answer the call.

Adjusting the volume of the call


You may use the menu to adjust the volume, and may also adjust the volume of the earpiece by pressing the up/down side key during a call.

Ending a call

When the call is over, press  key or close the fold, the call will be ended. When you want to cancel a call after dialing it, you may press  key or close the fold.

 16 Using your phone




Locking the phone

If in particular case you do not want your phone to be operated by others, you may choose to lock the phone. In standby mode, press and hold  key, you may lock the phone, you may also do all kinds of settings in the phone lock function through the menu (please refer to "Security settings" in the "settings").


Emergency service

You may directly dial emergency service call without the need for SIM card. Different networks use different emergency number. Please make inquiries to the network operation corporation for details.


Making IP call

In number entry mode press menu to spring up the  key. When choosing IP dialing, you may choose to insert IP number before the number that you want to dial, and press  key to make IP call; or in number entry mode, press and hold  key to make IP call for the number.



Making international call

To make international all, first press and hold  key to show "+" (+ stands for the initial number for making international call), then enter 2-digit country code, regional code and telephone number, press  key to make a call to that number.





Speed extension dialing

After entering the phone number, if you need to enter the extension number, press and hold  key, and when "P" appears on the display, you may enter your extension number.



Call Records



You have 3 ways of browsing the most recent missed/received/dialed phone number as well as the date and time, etc. relevant to the call.
1. If a call is missed, "missed call" and the number of missed calls will appear on the display, press  key to display the list of all recent missed calls, and press the navigation key to view it. Press  key, you may enter the detailed viewing interface of the record.

Using your phone 17 

2. In standby mode, press  key to display all telephone number of the most recent call records, and press the navigation key to view the telephone number needed.
3. In standby mode, press  key to enter the main function menu, choose "Call records", press  key to enter, and then choose the sub-menus of dialed, received and missed calls. Choose one of them and press  key to display the list of numbers.


Call Waiting


When you are in a call another phone number is making a call to your phone, the display will show "Call Waiting" and the number of the incoming call (you need to start "Call Waiting"). Then you may do the following operations: Press  key or  key to end the menu and enter end menu: you may choose "ending current call" and "ending waiting call"; you may choose "ending current call" to end the call in progress, and you may choose "ending waiting call" to end the call waiting and continue the original call.


Press  key, you may cause the original call in call holding status, and start the new waiting call. In this mode, press  key to enter the menu options for the call in progress, and you may choose: phonebook, call records, exchange, ending a call, silence, enter conference call and SMS, etc. The call waiting function needs network service, please make inquiry to the network operator or the service provider on whether or not necessary service has been provided or not.


Options in the call


Such function provides some operation options that you may do when you are in the process of call or conference call; some of the options are network service, please make inquiry to the network operator or the service provider on whether or not necessary service has been provided or not.

Phonebook: during a call, press  key to enter progressive call function, choose phonebook, you may do search, addition, etc. to the phonebook.

Exchange: when you have progressive and waiting calls, you may press  key to enter progressive call function. Choose the exchange function, the system will hold the call in progress, at the same change to the holding call.

Holding: when you are in a call and still want to make another call, you may press  key to enter progressive call function; choose the holding menu, the system will cause current call in holding mode. If you make another call without holding current call, the system will automatically cause the original call in holding mode when connecting your new call.

Restoration: when you are making a call, if you want to restore the call after holding the call with others, you may press  key to enter progressive call function and choose the restoration menu to restore the holding call.


Ending a call: during the call, press  key to enter progressive call function, and select ending a call, you may choose to end current call, holding call or all calls.

Silencing: during a call, if you want to talk with others, while you do not want your call



heard by the other side the call, you may choose such silencing function.

Entering conference call: such function needs the opening of relevant service by the network operator, and such a function provides you with the function to talk with more than 1 party at the same time.

Setting personal call: during a conference call, you may choose to talk with anyone in the conference call by choosing this function.

SMS: during a call, press  key to enter progressive call function; choose SMS, and in this function, you may do the receipt, editing and transmission of short message at the time of the call.

Switching the phone off

In switch-on mode, press and hold  key, the display will show "Power off?", press  key to choose "Yes" and you will switch off your mobile phone.

Using your phone 19 

Menu Structure

Messages

Write message
Inbox
Sent
Unsent
Draft
Settings
Delete messages
Cell broadcast
Voice mail

Phonebook

Search
Add
Delete
Copy
Groups
Memory
Own number

Settings

Time and date
Display settings
Keypad light
Refuse call
Call settings
Security settings
Network settings
language
Restore factory settings

Call records

Missed calls
Received calls
Dialed numbers
All records
Call duration
Delete all

Sound settings

Select ringtone
Adjust volume
Prompt mode
Keypad tone
Alert tone
SMS sent tone

Accessories

Alarm
Games
Calendar
Calculator
Stopwatch