










number that you want calculate, press  key to delete the last number that you have entered. Press  key to enter decimal, press  key to enter "+" and "-", and press the up-down, left-right navigation keys to enter computation symbol, and then enter the 2nd number that you want calculate, and press  key to get the result. After entering the number or when the computation is over, press  key to clear all numbers. Note: this calculator is limited in precision, and is used for simple calculation.





### Stopwatch


This stopwatch can record 9 entries. In standby mode, press  key to enter the main menu, select "Accessories" and "Stopwatch" by turn and enter the interface of stopwatch, press  key to start timing. In the process of timing, press  key to record different timing, and when there is need to start the timing, press  key to start timing once again.


## Input modes

Your phone provides several input modes for you to use in adding, editing phonebook record, searching name and writing messages, etc.

### Selection of input modes

1. In the text input interface, press  key to display the menu, move the cursor to select the input mode, and after pressing  key, the display will show the names of all input modes. Press the up-down navigation key to move the cursor to the input mode chosen, and press  key to select the input mode. Press  key to give up the selection of input mode and return to the editing interface.

2. Press  key repeatedly, you can change between different input modes (English/123/). The icon in the central part at the bottom of the display shows current input mode.



When the input mode is English, press and hold  key, you may change between the input of English letters and English words.

### Numerical symbol input mode


#### -Enter number

You may press number key (0-9) to enter corresponding numbers; press and hold (0) key to enter space.

#### -Enter symbol

Press and hold (1) key, the display will show symbol frame. Move the cursor to choose corresponding symbols via the navigation keys or 2/8/4/6 keys, press  key or (5) key to enter the symbol of the cursor. Press  key to shut down the symbol frame.

### English input mode



This phone provides 2 English input modes: traditional letter input and associated word input. Press and hold  key to change between these 2 modes.

#### -Enter letter

1. Press the number key with letters, the display will show the frame of all letters of the

key, and the cursor is positioned at the first letter.

2. Continue to press or press and hold the same number key to bring the cursor to the next letter, or press the left/right navigation key to bring the cursor to the previous/next letter.


3. When there is letter frame on the frame, stop pressing the key for 1 second or press  key to enter the letter at the cursor, press  key to shut off the letter frame and cancel the input of the letter.

4. When there is letter frame on the display, press another number key with letters, then the letter with the cursor will be entered, when the cursor is positioned at the 1st letter, the entry of next letter will begin.

#### **-Enter words**


1. Use the number keys (2-9) enter word, the word will be entered when all letters of the word is entered only once. For each pressing of the key, the words on the display will change accordingly. For example, if you need to enter

the word "about", you only need to press (1) key to enter "a", press (1) key to enter "b", press (6) key to enter "o", press "8" key to enter "u", and press "8" to enter "t".


2. When the word needed appears in the frame, press the navigation key to move the cursor and choose corresponding words, and press  key to enter the word where the cursor is at.

3. You may enter  key to delete the previous letter, or press  key to cancel the entry of the letter.

4. The entry of word has the function of association, i.e., a word may be entered without the need to press all corresponding keys. For example, when entering "about", press (2) key twice and the word "about" will appear in the frame.

5. Press  key or "o" key, you may enter the word where the cursor is at.

#### **-Change between small and capitalized letters**

You may press  key to change between small and capitalized letters. When entering

**Input modes 43** 

words, you may change between "all small", "first letter capitalized" and "all capitalized".


#### **-Enter space**

To enter space by pressing (0) key.

#### **-Enter number**

Press and hold number keys (0-9) to enter corresponding number.

#### **-Enter symbol**

Press (1) key, the display will show symbol frame. Move the cursor to choose corresponding symbols via the navigation keys or 2/8/4/6 keys, press  key or (5) key to enter the symbol of the cursor. Press  key to shut off the frame of the symbol.

 **44 Input modes**

## Battery precautions

- The phone is powered by rechargeable battery. Charge the battery when power is weak. You will achieve optimum battery life by allowing the battery to fully discharge before recharging it.
- When the battery charger is not in use, disconnect it from its power source. Do not leave the battery connected to the charger for over a week. Over charging may shorten battery's life.
- Temperature extremes affect the ability of your battery to charge. It may require cooling or warming up first. If the battery temperature exceeds 40°C (104 F) , it will not charge.
- Use the battery only for its intended purpose. Avoid battery short circuits. A short circuit the battery occurs when a metallic object makes a direct connection on the terminals (+ / -).
- Do not use a damaged battery.
- Do not leave the battery in extremely hot or cold places to avoid shortening battery life. A battery exposed to hot or cold temperature will prevent the phone from functioning properly, even when the battery is fully charged. Keep the battery in cool places, between 15°C to 25°C (50 F to 77 F).
- Recycle used batteries. Do not dispose of batteries in a fire! Dispose of batteries as required by local ordinances or regulations.

Battery precautions 45 

## Care and Maintenance

The following suggestions will help you take care of your phone.


- Keep the phone and all accessories out of children's reach.
- Keep the phone dry. Liquids contain minerals that can corrode electronic circuits.
- Keep the phone away from extreme temperatures. High temperatures can shorten the life of electronic devices, melt plastics, and damage batteries.
- Do not attempt to open the phone or take it apart. Non-expert handling may damage the phone.
- Do not use strong cleaning solvents to clean the phone.
- Use the battery type as specified in the instructions, or as provided by the manufacturer.

 46 Care and Maintenance


## Telephone spec

**Handset Weight:** About 66g  
**Dimensions:** 74.5×42×20mm  
**Battery:** Li-ion Battery  
**Battery capacity :** 500mAh  
**Standby Time :** 50 - 100 hours  
**Talk time :** 1.5 - 4 hours  
**Band:** GSM850MHz / PCS1900MHz

---

 **warning:**The consequence caused by that the user does not observe above-mentioned suggestions or mistake to use the cell-phone, the producer does not shoulder any responsibility.

---

 **announce:**If involve the edition to upgrade, the producer will not issue a separate notice.

---