 


Preparing your phone

Inserting the SIM card

- ! Please put the SIM card where children can't touch.
- Scratches can easily damage the metal contacts of the SIM card. Pay special attention to the SIM card as you handle and insert.
- Locate the SIM card slot in the battery compartment of your phone.

Slide the entire SIM card into the slot in the direction of the arrow shown on the compartment, with the metal contacts of the SIM card facing down and its cut corner on the up left.



Fitting the battery

Place the bottom end of the battery against the base of the battery compartment. Press the top of the battery downwards until it clicks into the compartment.




Removing the battery

Pull the battery latch and the battery rises automatically. Lift the battery off the compartment. Do not remove the battery when your phone is on.

- ! You may lose all your personal settings stored either in your SIM card or phone memory.

Preparing your phone 13 **LRD**

Charging the battery

- ! During charging, the battery strength icon  stripe roll until the battery is fully charged.
 - When the battery is low, you will hear a warning tone and "Battery Low" will appear on the LCD, your phone will power off automatically. Please don't let battery be low often, it will damage the quality and life of battery
 - Use only approved batteries, charger and accessories to ensure proper function of your phone and battery life.
-
- Insert the travel charger connector into the charger port at the bottom of the phone.
 - Pull out the charger connector when charging is done.

Access Codes

-PIN code

The PIN (Personal Identification Number) code is usually supplied with the SIM card. If you input false PIN Code for three times, the

SIM card will be locked, it needed to be unlocked by PUK.

-PIN2 code

The PIN2 code, supplied with some SIM cards, is required to access some functions such as Advice of call charge, Fixed Dial number.

If you input false PIN Code for three times, it needed to be unlocked by PUK also.

-PUK code

The PUK (Personal Unblocking Key) code is required to change a blocked PIN code.

The PUK code may be supplied with the SIM card. If not, contact your local service provider for the code. If you lose the code, also contact your service provider.

-Security code




The security code protests the unauthorized use of your phone.


The default number is "0000". You also can change it in Security menu.

LRD 14 Preparing your phone



Using your phone

Turning on your phone


1. Open the clamshell and press the  key continuously to turn on the phone, then background-light on and starting animation. If no SIM card in or SIM card fixed error, a warning dialog would appear to have you shut down the handset with  key, re-fixed SIM card and check whether it fixed correctly.
2. If you set phone lock, it would remind you to enter your phone code.
3. If SIM card is protected by PIN code, the handset would display "Please enter the PIN code". Press the  key to confirm it after enter right pin code.
4. If SIM card in your phone was locked, a prompt would appear and ask for PUK code.
5. Auto-searching for network after power on.

 If find authorized network, the name and signal strength of the network would be displayed on LCD, otherwise, it could only emergent number and other non-communication functions.

Making a phone call


In stand-by mode, input phone number with right digit key, area number needed. Cancel error inputs with  key, press the  key to call the number.

Refuse

When you have an incoming call, press the  key or close clamshell would refuse it.

Answer

When you have an incoming call, handset would bell or vibrate. If network supporting, the screen, including external screen, might display the incoming name and number, and you have two ways to answer it:



- 1.If the clamshell is closed, open up it to answer (should set "on" in menu clamshell answer).
- 2.If the clamshell is open, press the  key to answer.

Using your phone 15 

Modulate Bell Volume

You could modulate bell volume with menu or press the up/down key on the left side of the handset when answering a call.

End Call


Press the  key or close clamshell to end a call. If want to cancel a call after dialed, press the  key or close clamshell, too.

Emergent Service


You could dial emergent number without SIM card.

Different networks use different emergent number, please inquire for service provider for details.

Dialing International Numbers





If you want to dial international numbers, press the digit key "" continuously to display "+", which means pre-code before international dialing, then enter country-code, area-code and number, press Send key to dial it.

Extension Fast Dialing


If you should input extension number after entered, press the  key continuously, a "P" appeared on LCD and input your extension number.

Missed/Received/Dialed Calls

You have three ways to browse through missed /received/dialed numbers recently, and time and date information about these numbers.

1. When missed calls, "Missed calls" and the amount you missed would display on the screen, you could get this missed-calls-list by press the  key and see details by the keys page up and page down.
2. Dialed calls might be displayed by pressed the  key in stand-by mode, then the number you need could be found by pressed page up/down key.
3. In stand-by mode press the  key to enter main function menu, select "call info" by pressing the  key and enter missed/received/dialed calls submenu. The number list would

 16 Using your phone

be displayed by press the  key after choose one of the three calls.

Call Waiting



When you are answering a call, another call is coming in, options below will displayed to deal with the inserted call (you should set the call waiting function on):


Answer: Hold current call and link the inserted call.


Busy: Refuse the inserted call.

End and answer: End current call and link the inserted call.


Hold Call

1. If you want to dial another call at the same time, you can press the  key to choose holding current call. If you can't answer another call, press the  key to reset the hold call.

2. When you have the answering call and holding call, press the  key to switch between the two call for exchanging them.

3. When the answering call ends, press the  key to reset the holding call.

Power Off

In standby mode, press the  key continually to power off your phone.

Menu Structure

Messages

- SMS
- MMS
- Setting
- Broadcasting
- VoiceMail
- Memory Status

- Copy Number
- Options
- Groups
- My Numbers
- Memory Status
- Fixed Number

Sound Settings

- Bell Signals
- Message Alert
- Key Sound
- Power On/Off Alarm
- Low Battery Alarm
- Network Alarm

Phone Settings

- Time and Date
- Set Language
- Input
- KeyPadLight
- Auto Keylock
- Display

Phone Book

- Find Number
- Add Number
- Delete Number

- Call Options
- Networks
- Security
- Master Reset

Accessories

- Alarm Clock
- Calculator
- Calendar
- Stopwatch
- Lunar Calendar
- Voice Memo
- Timer
- World Time

Games

- Russian
- Box man

Internet

- Mobile Surf
- Bookmarks

- Enter Address
- WAP Profile
- WAP Settings
- Connecting Download
- Clear Cache

Camera



- Standard
- Personality
- Night hoot
- MyAlbum
- Setting

Messages

You can send, receive and edit text information, they are network support and subscription dependent. If you require more, please contact with the network supporter.

SMS

-New SMS

This function allows you to write short messages. After entering this menu, input what you want and press the  key, then select the number you want. When done, press the  key to send the message. Otherwise the message will be saved to unsent box.



-Inbox




View all messages you received.

-Sent Items

View all message you sent, they are saved automatically after your sent.

-Unsent

In this menu, you will see a list of messages not sent properly. Select a message with the navigation key and press the  then; a recipient's phone number and message are to be displayed. Press the  key to send, save or delete the unsent message.

If a new message received by the phone, a tone is sounded, and the prompt "New Messages Read now?", pops up,  also appears on the top of the idle screen. Press the  key to display the message record directly, or enter this menu option to do so. Having read a message, press the  key for the following options:

- **Delete**
You can delete the message.
- **Reply**
You can reply to the sender by message.
- **Forward**
You can forward the selected message to the other party.

Messages 19 

- **Save**

You can save the message from the phone to SIM card.

- **Call**


You can call back to sender.

- **Read Next**

You can read the next message.

MMS

-Write New

Edit MMS, press the  key to enter this option, select from:

- **Add Picture**

If the picture selection is empty, enter the Import Media option directly.

If the picture selection is not empty, press the navigation up and down to choose the picture into MMS.

- **Add Text**

Add text to MMS.

- **Add sound**

If the sound selection is empty, enter the

Import Media option directly.

If the sound selection is not empty, press the navigation up and down to choose the sound into MMS.

- **Import Media**

Import image or sound file, be used to edit MMS.

Images

Import image. Supported format: Giff, Jpeg, Wbmp, Png. Choose one optionally, then choose the image file according to the list.

Sounds

Import sound. Supported format: melody, midi, Choose one optionally, then choose the sound file according to the list.

- **Slide Options**

Text Color

Select the text color to edit MMS.

Background Color

Select the background color to edit MMS.

Add Page

Add a page of MMS.

Page Timing

Edit the page time.

 20 Messages

Delete Page

Delete a page of MMS.

Reset Colors

Reset default color of the system.

Switch Text and Image

Switch the position of text and image

• Preview

Preview the compiled MMS.

• Save Message

Save the compiled MMS.

• Send Message

Send the compiled MMS. Choose the phone number and Email of the embracer. Edit the theme of MMS in the "Theme" option. In "More Options", you can set "make a copy for", "the confidential letter object", "the priority of MMS", the open or close of send report and read report. Press "Send" to send the MMS.

-Inbox

View all MMS you received.

-Sent Items

View all MMS you sent.

-Unsent

View all MMS unsent.

-Templates

Afford MMS templates for shortcut sent

Setting**-SMS Setting****• Message Type****Set on send**

Open or close the function of setting message type on send.

Set Default

Set default of message type: text, Email, third fax, fourth fax, switch to voice Email, BP call, ERMES.

• Validity Period**Set on Send**

Open or close the function of setting the validity period of SMS on send.

Messages 21 **GIRD**

Set Default

Set validity period of MMS: 12 hours, 1 day, 1 week, Maximum.

• Reply Request**Set on Send**

Open or close the function of setting reply request on send.

Set Default

Set default value of reply request: On/Off.

• Status Request**Set on Send**

Open or close the function of setting the status request on send.

Set Default

Set default value for status request: On/Off.

• Templates

Afford SMS template for shortcut send.

• Service Centre

Fill in the service center number.

• Long Messages

Open or close the long message function.

-MMS Setting**• Validity Period**

Set effective time of MMS: 12 hours, 1 day, 1 week, Maximum.

• Read Report: On/Off.**• Delivery Report: On/Off.****• Auto DownLoad: On/Off.****Broadcasting**

Cell Broadcast messages are text messages broadcasted by the network to groups of GSM phone users. They provide general information such as weather reports, traffic news, and taxi information. Contact detailed information with the network operator.

The following options are available:

-Area Info**• Reception**

Choose whether or not to receive the cell broadcast provided by your network operator.

• Edit List

Add the area number of the broadcast

GIRD 22 Messages

message provided by your network operator.

-Cell Information

Choose whether or not to receive the cell information provided by your network operator.

VoiceMail

-Call VoiceMail

Call voicemail for leaved word.

-Edit VoiceMail Number

Voicemail number is provided by network operator.

Memory Status

-SMS Memory Status



Display SMS Memory Status.

-MMS Memory Status

Display MSM Memory Status.

Call Info

Missed Calls

This menu lets you view the numbers that you recently missed. Move to a missed call with the navigation key and press the  key to give a call. When you view details on the number, press the  key, and the following options are available:

Call: Call the selected number.

Send SMS: Allow you to edit the message and send it.

Save: Save the selected number.

Delete: Delete the selected number.

Received Calls

This menu lets you view the numbers that you recently received.

Dialed Calls

This menu lets you view the numbers that you recently received.

Refuse Calls

This menu lets you view the numbers that you recently refused.

Delete Recent

This menu lets you delete the numbers that you recently received, missed, refused or all record.

Call Costs

This function records the information of call costs.

-Last Call

Show the cost of the last call.

-Total Cost

Show the total cost of all calls.

-Clear Total Cost

Clear all cost data. This function sustained by PIN2.