



-View month

When you enter this menu, a calendar will be displayed on the screen, and the current date will be highlighted. You can use the Left/Right navigation key to jump to the last or next month, and press the Up/Down navigation key to select date forward or backward. And square cursor will be located on the day. If you see a dot in a date on the calendar, it means that there is a schedule day. Press the  key can read it.

-Add task

You can add new calendar.



The steps to edit new calendar:

 
1. First jot down the note, then press the  key to confirm.
2. You will be prompted to enter the date for this note.
3. Then you can select "Set Reminder" for the date.

-Delete all

Deletes all notes in your calendar.

Stopwatch



This option allows you to use your phone as a stopwatch. Press the  key to start/stop the stopwatch and press the  key to reset the stopwatch.

Press the  key to log the next time, nine time can be logged, press the corresponding number key to display the corresponding time.

Lunar Calendar

You can select one of the following items and view a date: Solar To Lunar, Lunar To Solar, Chinese New Year, and Month in Lunar. Put in the date, the corresponding date will be displayed on the down screen.

Voice Memo**-Record new**

Press the  key to start record, press the  key to stop during the recording.

-Memo list

Play or delete saved record.

Accessories 37 

-Erase all

Erase all saved record.


Timer

Just like alarm clock but time backwards.

World Time



Displays a time for each preprogrammed city. You can select one of the following cities and view a date and time of city.

Games

There are two games: Russian, Box man.
Choose the game, press the  Key to enter.

Russian

-New Game

Game start, press the  key to pause/start game, press the  key or cancel key to end the game.

-Settings

Set speed and level.

-Top Score


Show the top score in the current game

-Help

Show the help file of the current game to tell you how to play the game

Box man

-Map 1

Choose Map 1 to start the game. Press the  key to escape from the menu.

.....

-Help

Show the help file of the current game to tell you how to play the game.

Internet

Mobile Surf

Enter the homepage of mobile surf. It might be the web site defined in the WAP set list, otherwise defined by the service provider.

Bookmarks

You can find two default bookmarks and add new bookmark.

-Go To

Link the web.

-Edit

Edit the name and address of the bookmark.

-Delete

Delete the bookmark.

-Send Link

Send address of the bookmark to others.

Enter Address

Enter address of the web site you are advancing, confirm and link the web.

WAP Profile

Choose WAP mode, there are three modes you can choose from.

WAP Setting

Set the three WAP mode.

-Rename

Edit the mode name.

-Show Images

Show image in web on/off.

-Access

• Response Timer

Set restrict time to link internet, if no data transfers until the restrict time, the service will intermit.

• Access Type

Set web-link mode.

• Gateway

Set User ID, Password, Data address, Data mode, MMS Server Url. They are supplied by the network provider.

- **GPRS Data**

Set GPRS data, including APN, User ID, Password, Quality of Serv..

- **GSM Data**

Set GSM link, including Phone number, user ID, Password, Dial type, Inactive Timeout.

- **Security Setting**

Set security on/off.

Connecting

-Music Download

Set the address of music download.

-Image Download

Set the address of image download.






Clear Cache

Internet 41

GIRD

Camera

Standard

Enter the camera mode with pressing the key, the image is displayed on the LCD, press the  key to shoot, the  key to escape. After shooting, press the  key to save, the  key to escape. After saving, press the  key to enter the option.

-Delete

Delete the picture.

-SetWallpaper

Set the picture as be wallpaper.

-Details

Display the image information.

-Rename

Rename the image.



Personality

Add photo-casing to the picture, the rest is just like standard mode.

Night Shoot

Corresponding adjust for the night shoot, the rest is just like standard mode.

My Album

Browse the saved pictures. Press up or down key to turn pages. Press the  key to operate, function of delete all is to delete all the saved pictures, the rest is just like standard mode. Press the  key to escape.

Setting

-Picture Quality

Set the picture quality: hight or normal.

-Shutter Sound

Set the shutter sound: on or off.

-Name Rule

Set the name for saved picture.

- **Auto**

Save with the default name.

- **Define**

Set the save name by user.


GIRD

42 Camera

Input modes

Your phone offers manifold input modes for adding phone book record, editing phone book record, searching for Chinese name, compiling SMS, writing to the memo.

Choose input mode


Press the  key to Choose input mode you needed, there are five input mode you can choose:


abc Mode
T9 Mode
Stroke Mode
Pinyin Mode
123 Mode

abc Mode

This mode is indicated by abc. When typing in abc mode, you should press the key labeled with the required character: Once for the first character; Twice for the second character and so on.

The cursor moves to the right when you press a different key. When entering the same

character twice or a different character on the same key, just wait for a few seconds for the cursor to move right automatically, and then select the next character. For example, when you press the  key continuously, "A", "B", "C", "2" will be displayed one by one.

Press the  key to switch the capital mode, List of characters available:

 




key	characters
1	1 # * \leftarrow - ? ! , . : ; " ' < > () _ & @ / % []
2	2 A B C a b c
3	3 D E F d e f
4	4 G H I g h i
5	5 J K L j k l
6	6 M N O m n o
7	7 P Q R S p q r s
8	8 T U V t u v
9	9 W X Y Z w x y z
0	space and other especial symbol

Input modes 43 


T9 Mode(En)





 
You can press a key only once for each character to put in English word with this mode. Every key indicates several characters, T9 mode compared in the language library automatically to choose the correct word. T9 mode requires less time than traditional abc mode. In order to input the word, press the corresponding key, and now the word appears on the LCD, as you press the key, the word will change.

Import English word:

- Press the  key to import the next word.
- Press the  key once to delete a character, Press persistently to delete all the input.
- Press the left or right navigation key once to move the cursor to last or next insert point.
- Press the  key to confirm the input matter.
- Press the  key or the  key to switch the word with the same keypad.

Stroke Mode

This mode allows you to enter individual Chinese strokes. Even though there are many different strokes used to create Chinese characters, the strokes are classified into 5 basic categories. You can use the intelligent key  for more convenience, when the stroke is not confirmed, it can take the place.

Type of Strokes	key	Strokes Represented
一		一 丿
丨		丨 丨
丿		丿 丿
丶		丶 丶 丶
フ		フ ㇀ ㇁ ㇂ ㇃ ㇄ ㇅ ㇆ ㇇ ㇈ ㇉ ㇊ ㇋ ㇌ ㇍ ㇎ ㇏ ㇐ ㇑ ㇒ ㇓ ㇔ ㇕ ㇖ ㇗ ㇘ ㇙ ㇚ ㇛ ㇜ ㇝ ㇞ ㇟ ㇠ ㇡ ㇢ ㇣ ㇤ ㇥ ㇦ ㇧ ㇨ ㇩ ㇪ ㇫ ㇬ ㇭ ㇮ ㇯ ㇰ ㇱ ㇲ ㇳ ㇴ ㇵ ㇶ ㇷ ㇸ ㇹ ㇺ ㇻ ㇼ ㇽ ㇾ ㇿ

 44 Input modes




123 Mode

It enables you to enter numbers into a text message.

Pinyin Mode

Pinyin mode is system to mark Chinese pronunciation using Latin alphabet. With the Pinyin input method, you can input Chinese characters by keying in the pinyin string using the phone keypad and the phone automatically presents the matching alternatives.

Insert symbol

Under stroke mode, press the  key persistently, under pinyin mode, press the  key to insert a symbol, press the navigation key left or right, when you confirm, press the  key to insert symbol into the text.

Battery precautions

- The phone is powered by rechargeable battery. Charge the battery when power is weak. You will achieve optimum battery life by allowing the battery to fully discharge before recharging it.
- When the battery charger is not in use, disconnect it from its power source. Do not leave the battery connected to the charger for over a week. Over charging may shorten battery's life.
- Temperature extremes affect the ability of your battery to charge. It may require cooling or warming up first. If the battery temperature exceeds 40°C (104 F), it will not charge.
- Use the battery only for its intended purpose. Avoid battery short circuits. A short circuit the battery occurs when a metallic object makes a direct connection on the terminals (+ / -).
- Do not use a damaged battery.
- Do not leave the battery in extremely hot or cold places to avoid shortening battery life. A battery exposed to hot or cold temperature will prevent the phone from functioning properly, even when the battery is fully charged. Keep the battery in cool places, between 15°C to 25°C (50 F to 77 F).
- Recycle used batteries. Do not dispose of batteries in a fire! Dispose of batteries as required by local ordinances or regulations.


Care and Maintenance


The following suggestions will help you take care of your phone.

- Keep the phone and all accessories out of children's reach.
- Keep the phone dry. Liquids contain minerals that can corrode electronic circuits.
- Keep the phone away from extreme temperatures. High temperatures can shorten the life of electronic devices, melt plastics, and damage batteries.
- Do not attempt to open the phone or take it apart. Non-expert handling may damage the phone.
- Do not use strong cleaning solvents to clean the phone.
- Use the battery type as specified in the instructions, or as provided by the manufacturer.

Telephone spec

Handset Weight:	About 80g
Dimensions:	87×43×21mm
Battery:	Li-ion Battery
Battery capacity :	650mAh
Standby Time :	50 - 100 hours
Talk time :	1.5 - 3 hours
Band:	GSM850MHz/PCS1900MHz

 **warning:** The consequence caused by that the user does not observe above-mentioned suggestions or mistake to use the cell-phone, the producer does not shoulder any responsibility.

 **announce:** If involve the edition to upgrade, the producer will not issue a separate notice.
